




TYGER TG-LX3F82448 LanderX Running Board Instruction Manual

[Home](#) » [TYGER](#) » TYGER TG-LX3F82448 LanderX Running Board Instruction Manual 

TYGER TG-LX3F82448 LanderX Running Board Instruction Manual

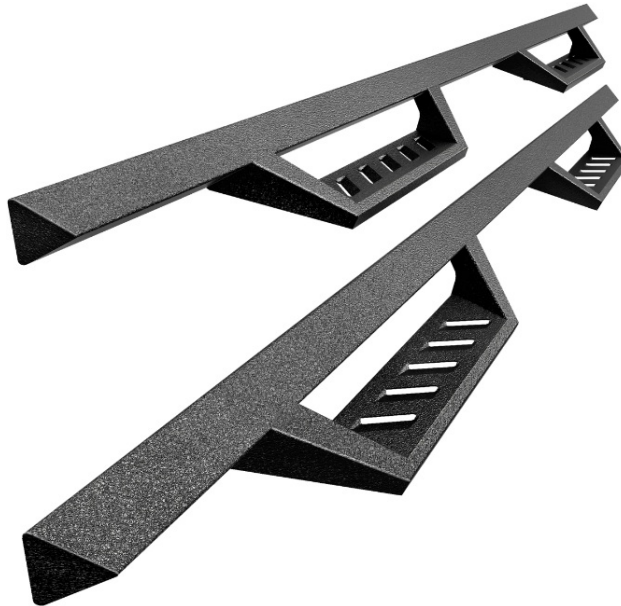

Contents

- [1 BEFORE INSTALLATION](#)
- [2 TORQUE VALUES](#)
- [3 Reference the letters printed on the brackets to determine mounting locations](#)
- [4 Bottom View](#)
- [5 PROCEDURE:](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT.


TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


- **x1** Driver/Left TYGER LanderX
- **X1** Passenger/Right TYGER LanderX
- **x1** Driver/Left Front Mounting Bracket **(A)**
- **x2** Driver/Left Center/Rear Mounting Brackets **(B)**
- **x1** Passenger/Right Front Mounting Bracket **C**
- **X2** Passenger/Right Center/Rear Mounting Brackets **D**
- **x12** 10-1.5mm x 25mm Hex Bolts
- **x12** 10mm Lock Washers
- **x12** 10mm x 27mm OD x 3mm Flat Washers
- **x12** 8mm x 25mm Combo Bolts

Reference the letters printed on the brackets to determine mounting locations

Driver/Left TYGER LanderX

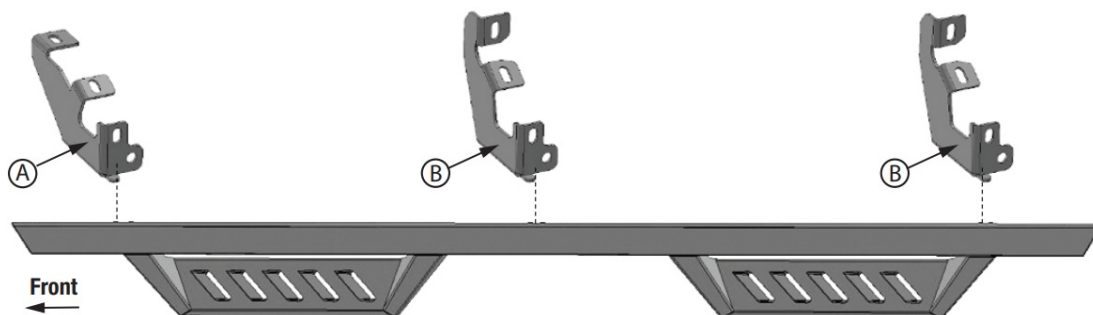


Passenger/Right TYGER LanderX

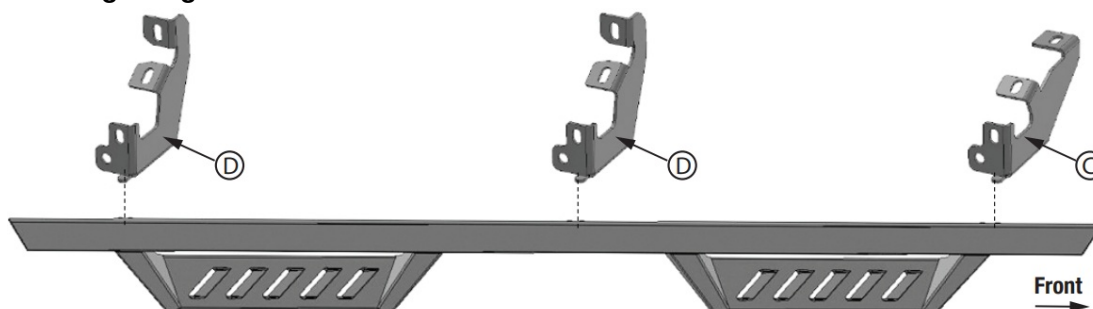

Bottom View

ATTENTION: Refer to the D or P labelling on the tubes to determine the Driver or Passenger side steps.

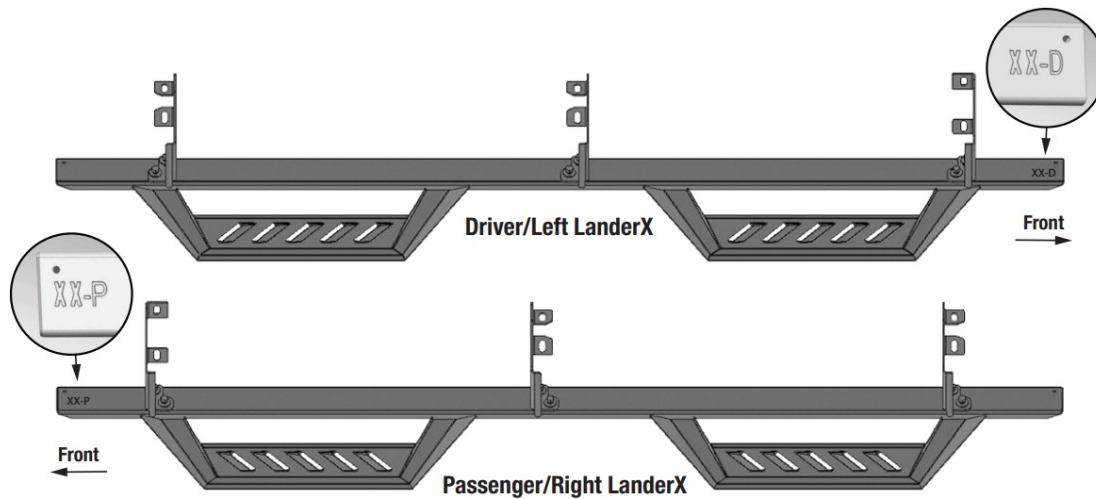

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION


STEP 1

Starting installation under the driver/left side inner rocker panel.


Locate the threaded mounting holes in the rocker panel toward the front wheel opening (**Fig 1**). Remove the plastic plugs covering the mounting holes. Select the Driver/Left Front Mounting Bracket (**Fig 2**). Attach Bracket to driver/left front location with (2) 10mm x 30mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers (**Figs 2 & 3**). DO NOT fully tighten hardware.

Driver/left side Installation Pictured


(Fig 1) Driver/left front mounting location

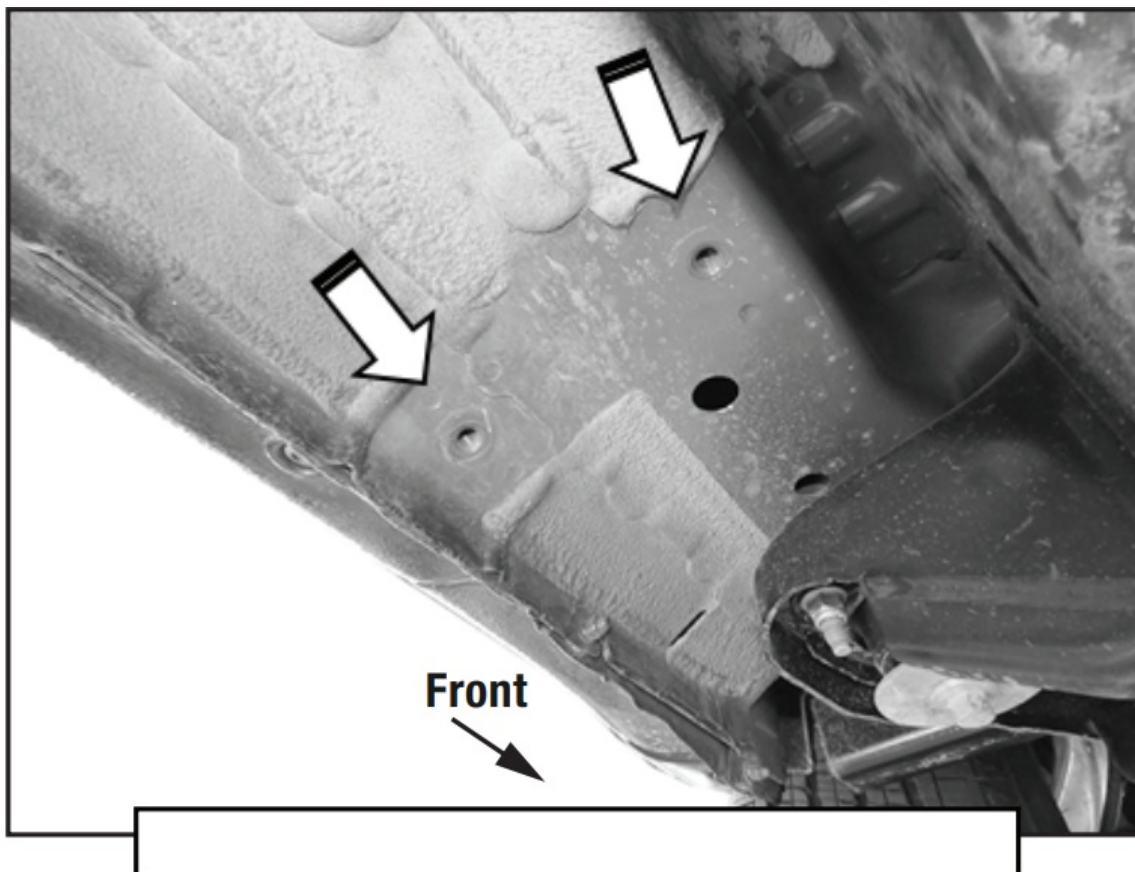

(Fig 2) Driver/Left Front Mounting Bracket installation

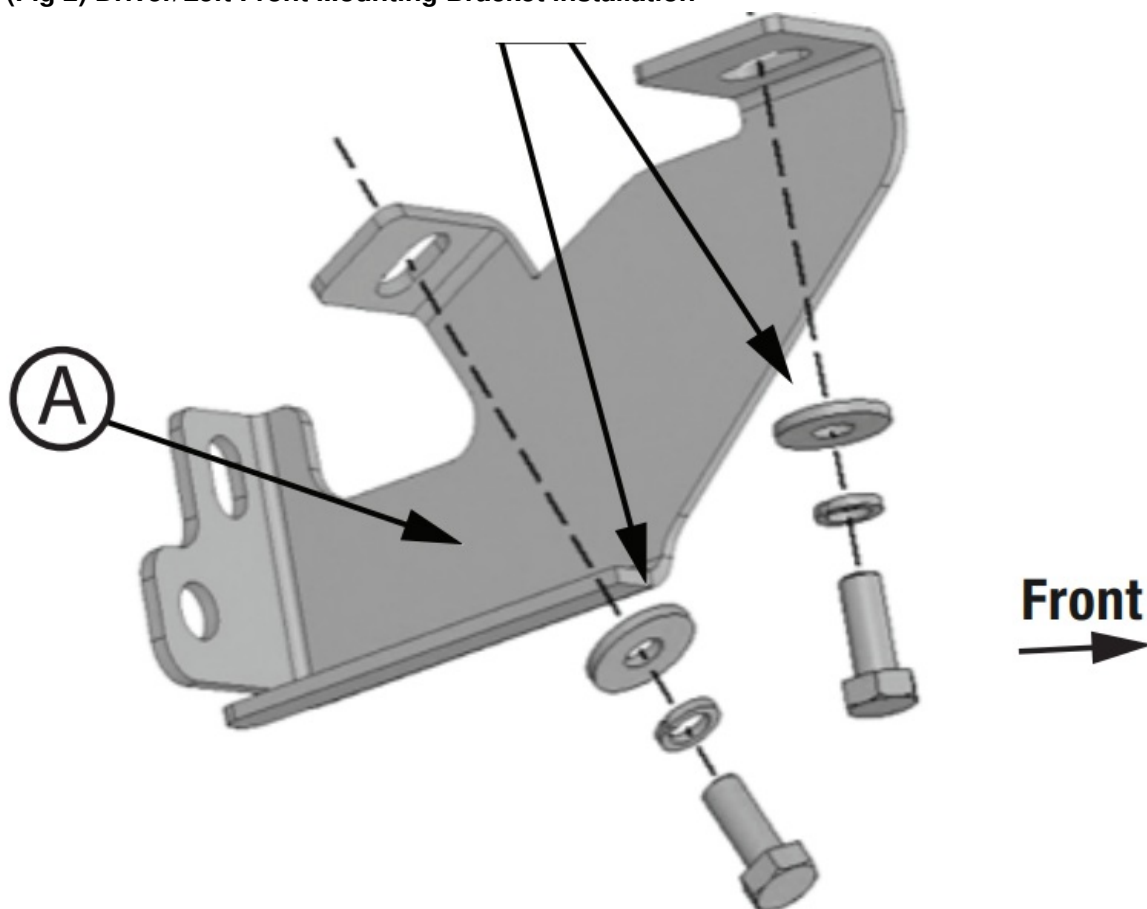

(Fig 3) Driver/Left Front Mounting Bracket attached

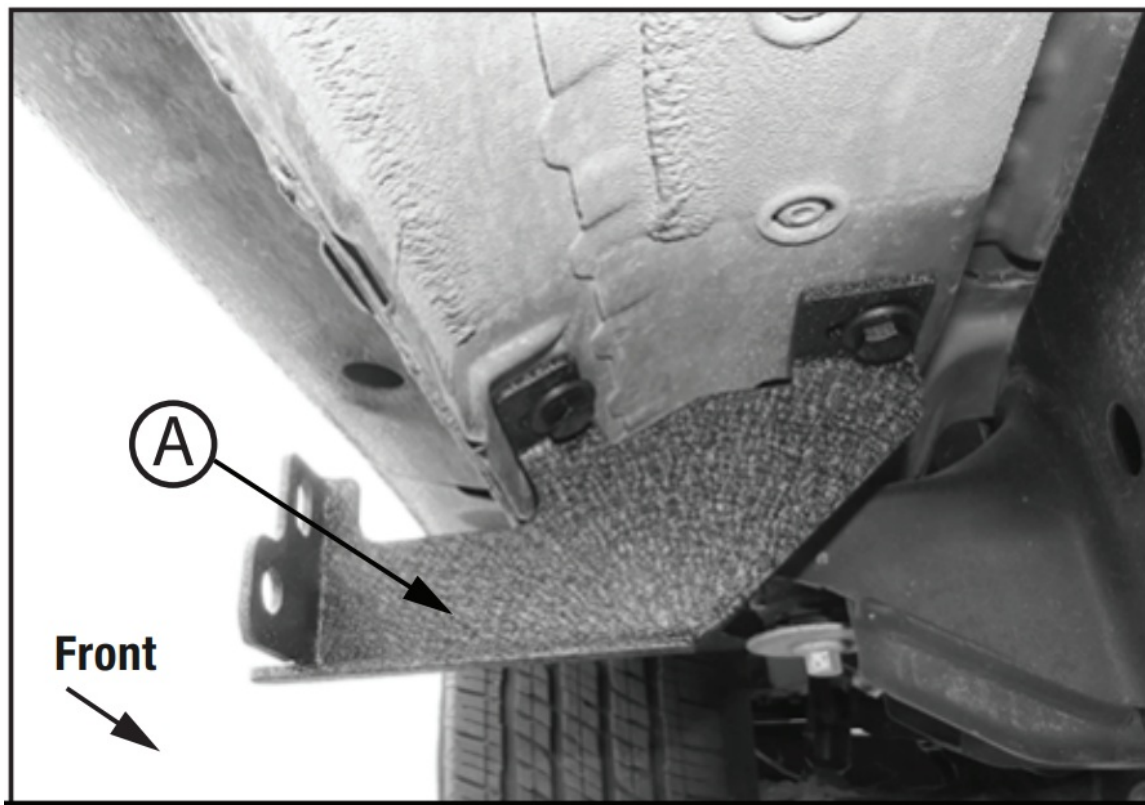


STEP 2


Move to the center of the vehicle and locate the threaded mounting holes (Fig 4). Select (1) Driver/Left Center/Rear Mounting Bracket (Fig 5). Attach the Bracket to the threaded holes with the included (2) 10mm x 25mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers (Figs 5 & 6). DO NOT fully tighten hardware.

Driver/left side Installation Pictured


(Fig 4) Driver/left Center mounting location

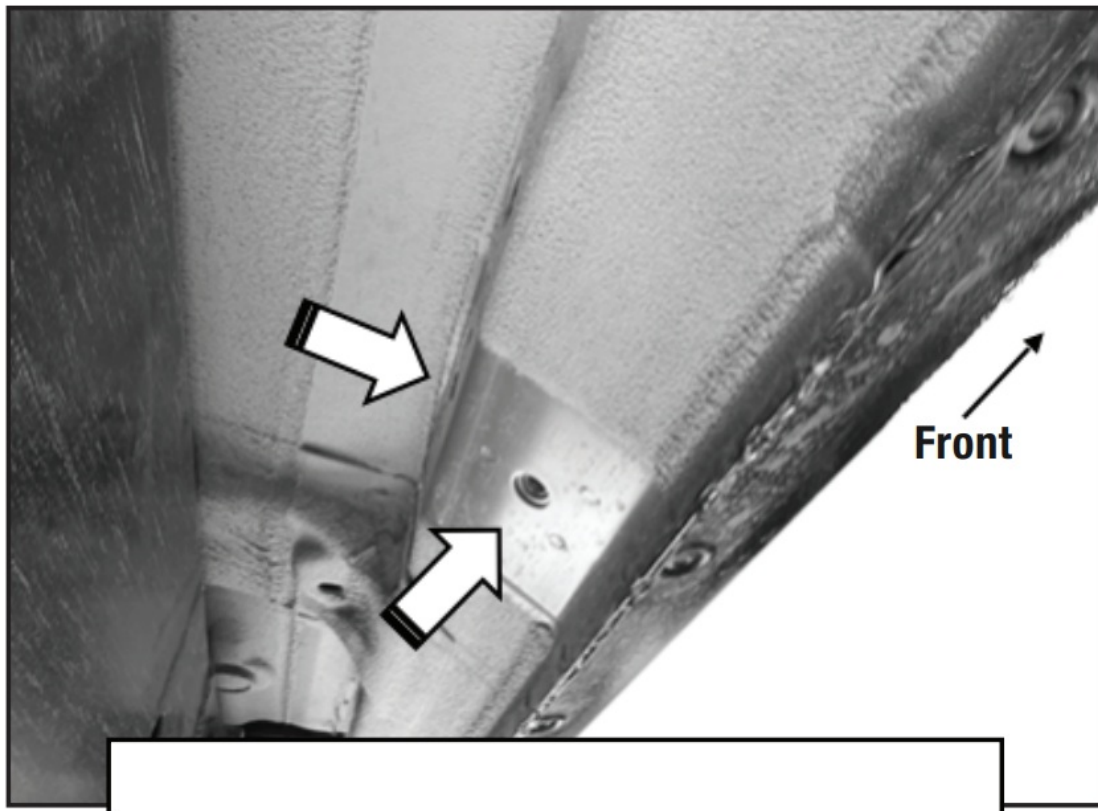

(Fig 5) Driver/Left Center and Rear Mounting Bracket installation

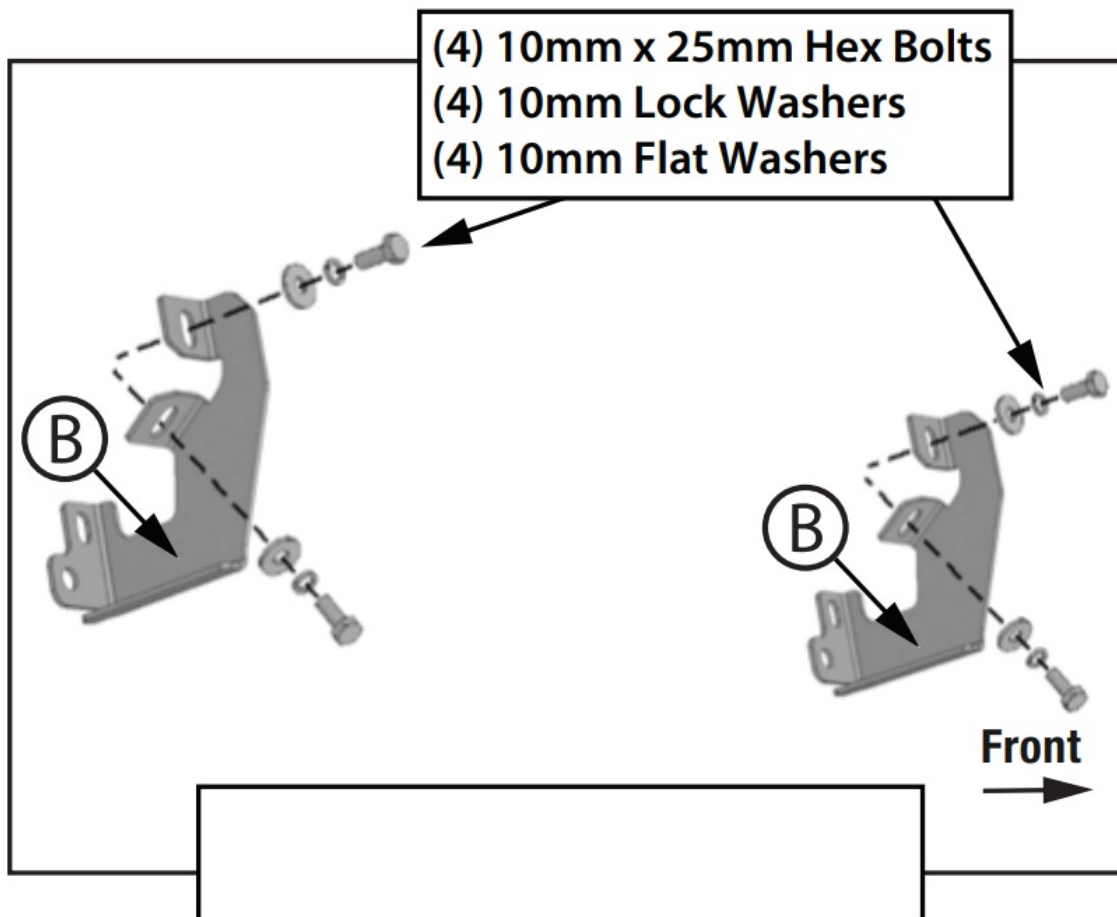


(Fig 6) Driver/Left Center Mounting Bracket installed

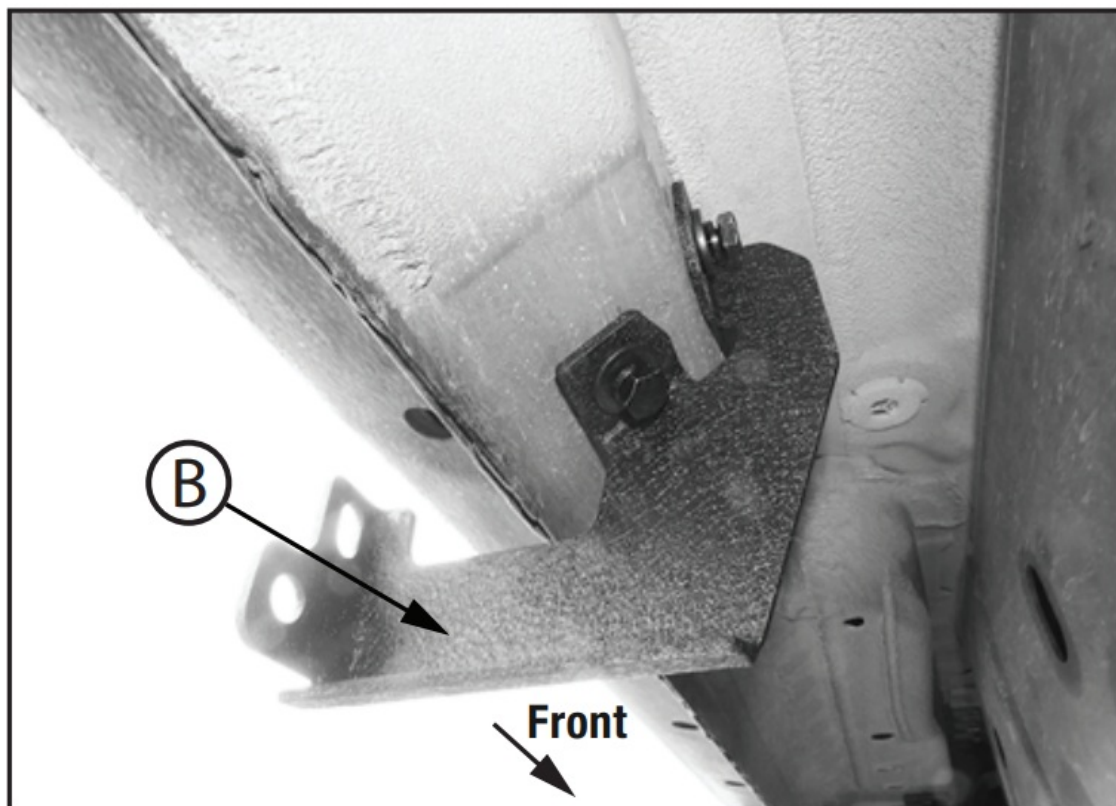


STEP 3

Move to the last threaded holes closest to the rear wheel opening (Fig7). Select the remaining Driver/Left Center/Rear Mounting Bracket (Fig 5). Repeat STEP 2 to attach the Rear Mounting Bracket (Figs 5 & 8). **DO NOT** fully tighten hardware.

Driver/left side Installation Pictured
(Fig 7) Driver/left Rear mounting location

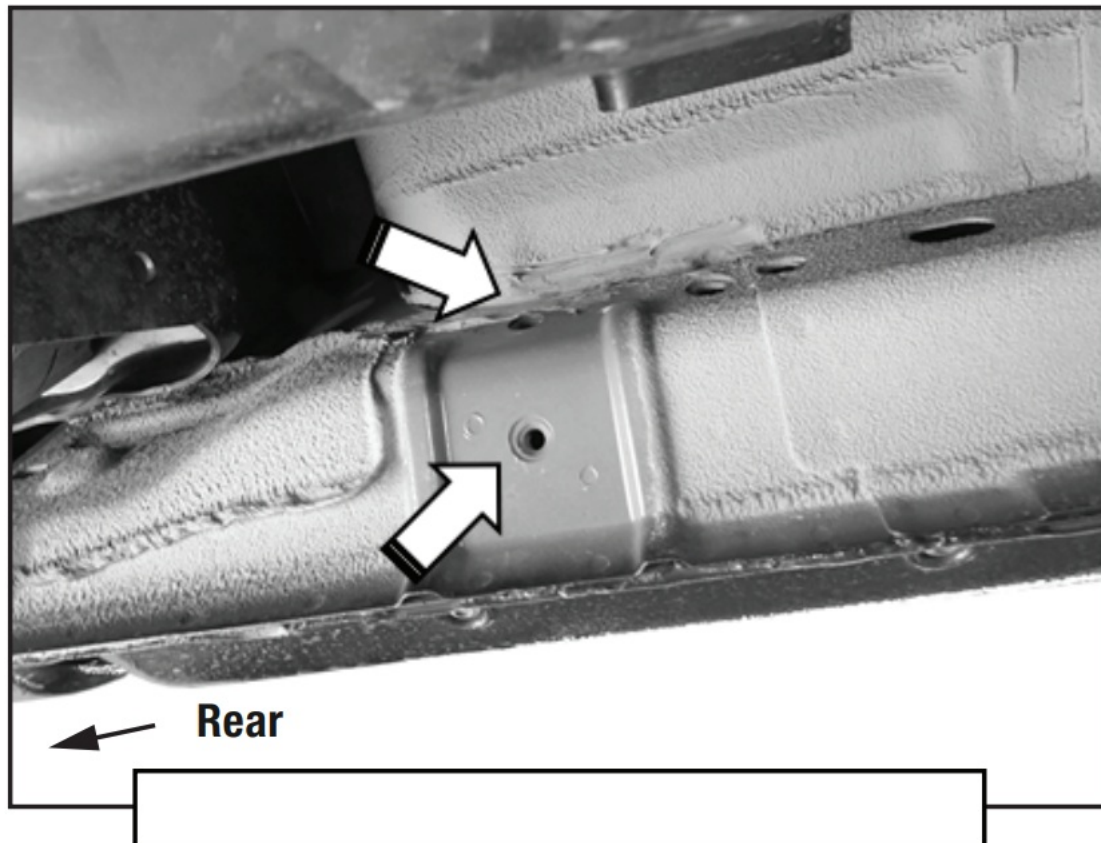

(Fig 8) Driver/left Rear Mounting Bracket installed

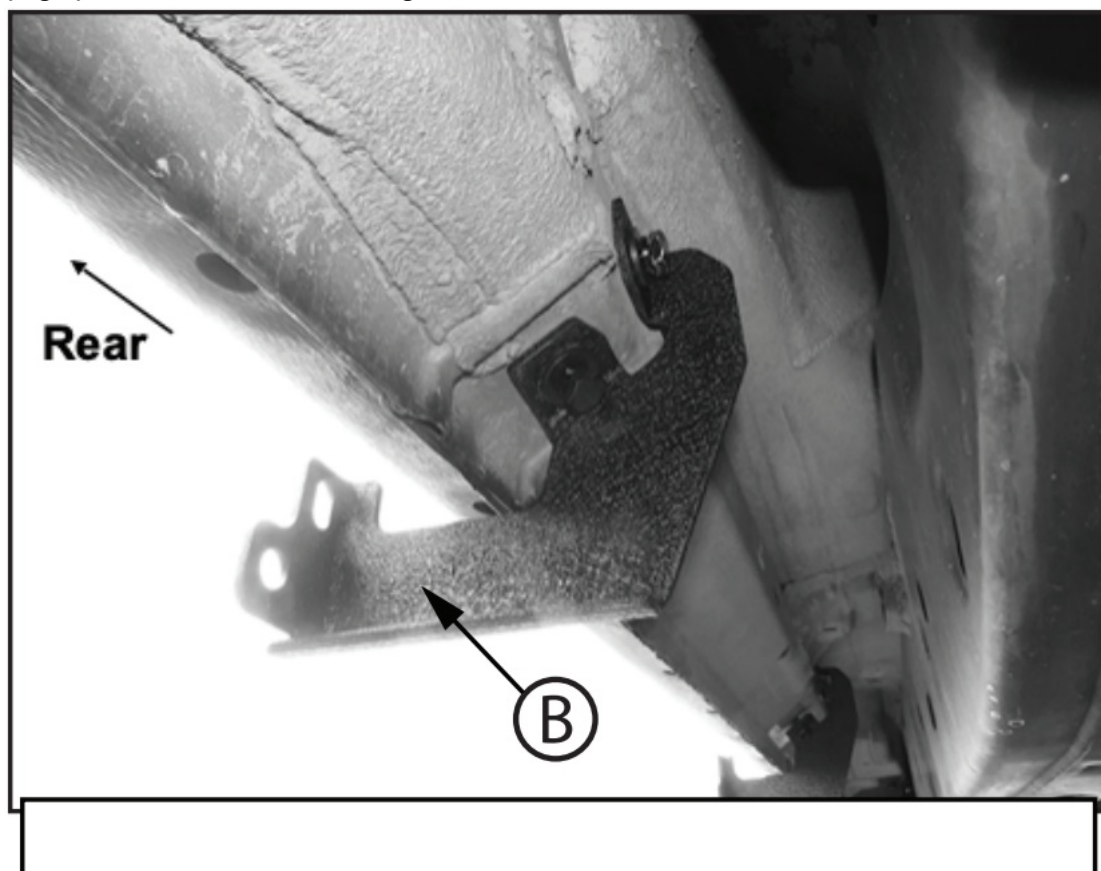


STEP 4


Carefully unwrap the TYGER Lander X. Select the Driver/Left TYGER Lander X. Line up the TYGER Lander X with the (3) Mounting Brackets. Attach the TYGER Lander X to the Brackets with the included (6) 8mm x 25mm Combo Hex Bolts (Figs 9-13).

Driver/left side Installation Pictured


(Fig 9) Attach Driver/Left TYGER LanderX to Front Bracket

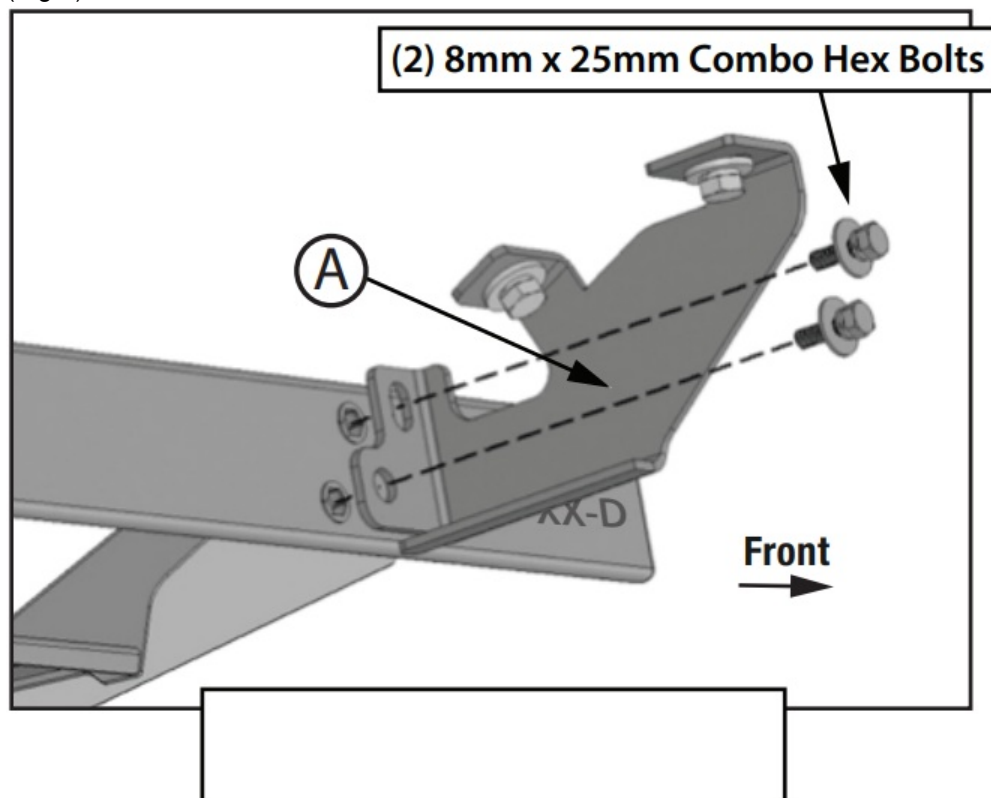


(Fig 10) Driver/Left LanderX attached to Front Bracket

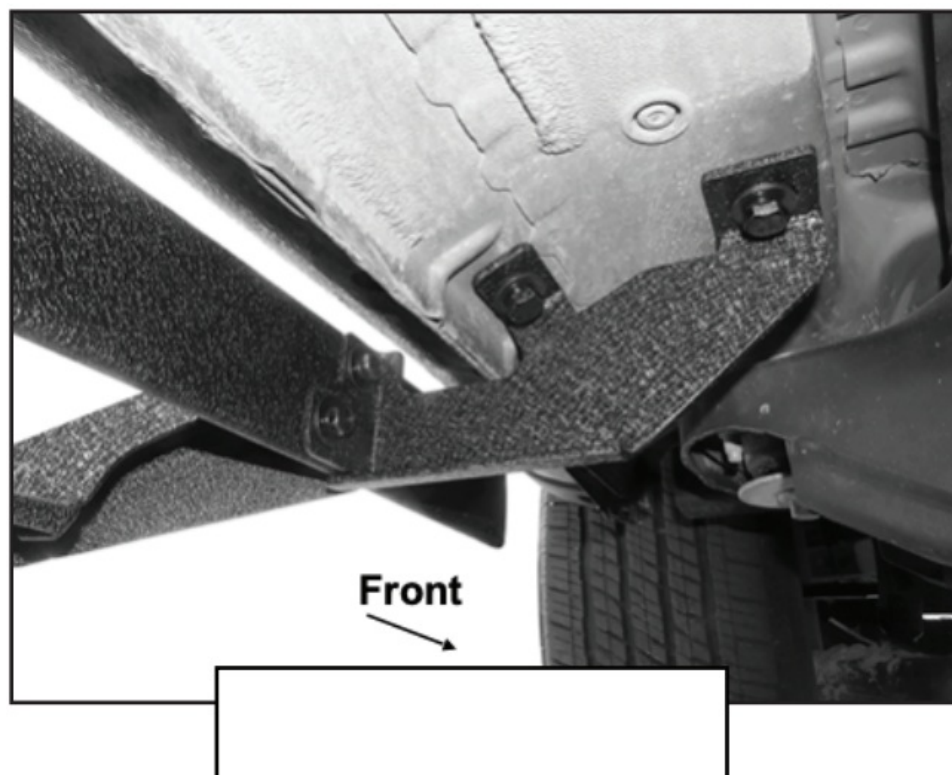


(Fig 11) Attach Driver/Left TYGER LanderX to Center and Rear Brackets

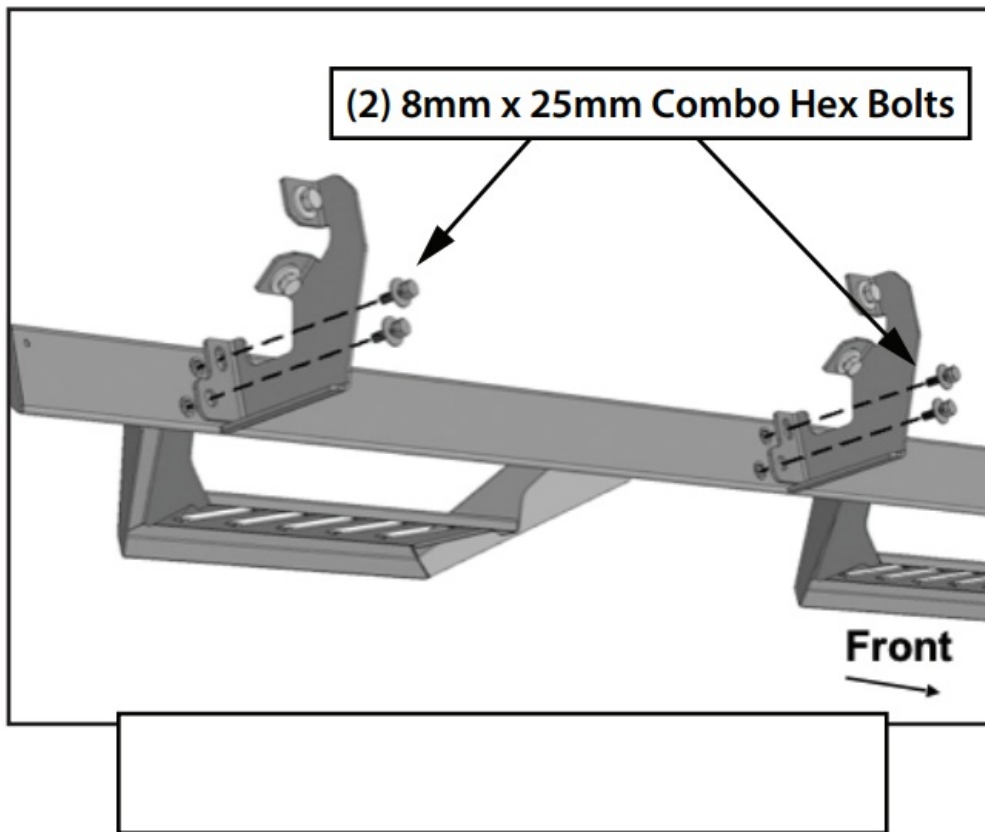

(Fig 12) Driver/Left TYGER LanderX attached to Center Bracket

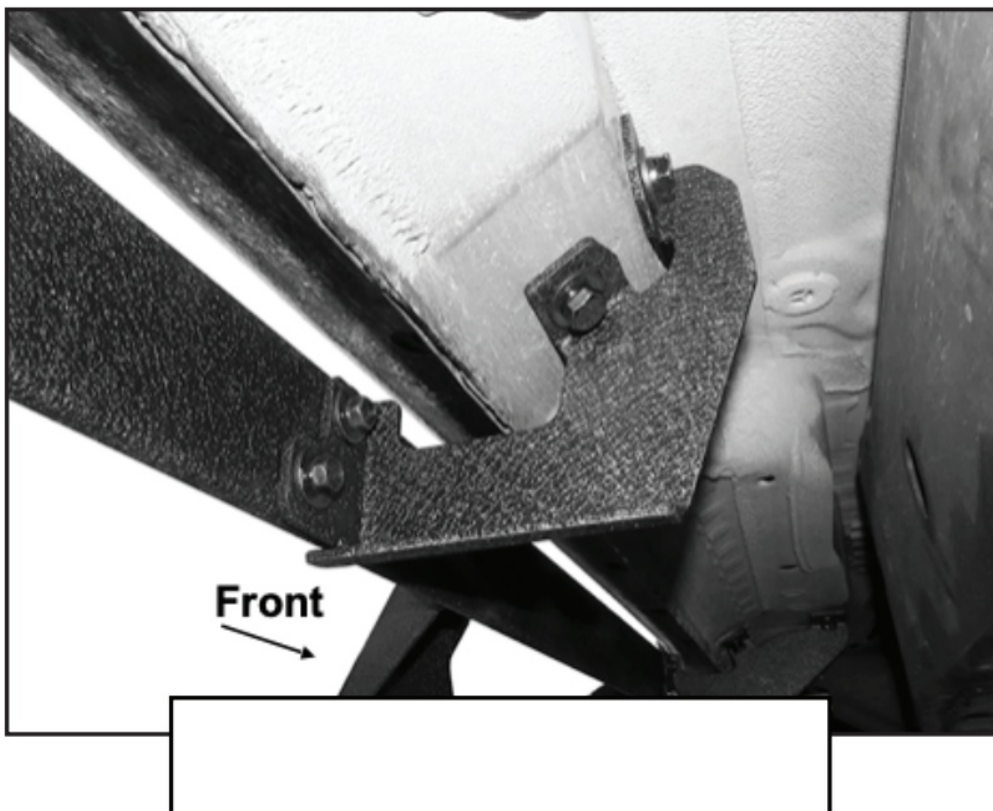

(Fig 13) Driver/Left TYGER LanderX attached to Rear Bracket

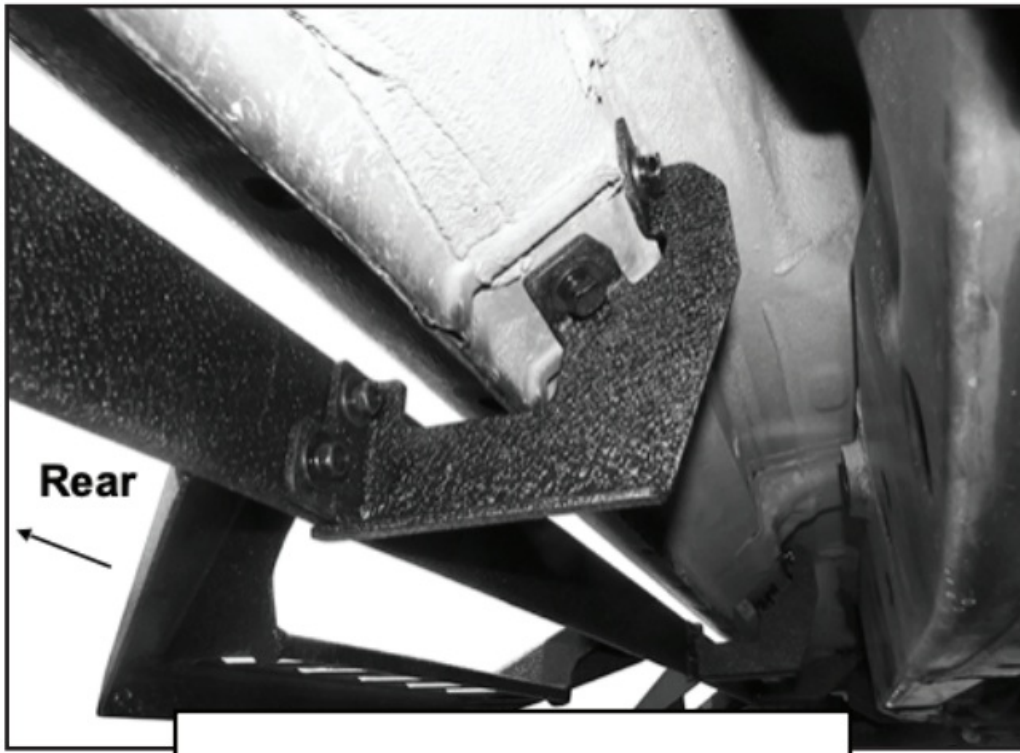

STEP 5

Level and adjust the TYGER LanderX and tighten all hardware.

STEP 6


Repeat STEPS 1-5 to install the Passenger/Right TYGER LanderX "P".

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

TYGER LanderX

Documents / Resources

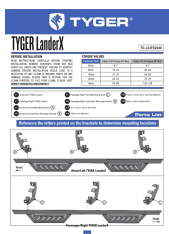

[TYGER TG-LX3F82448 LanderX Running Board](#) [pdf] Instruction Manual
TG-LX3F82448 LanderX Running Board, TG-LX3F82448, LanderX Running Board, Running Board, Board

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.