

# Vaultek Safe DS2e Smart Station User Guide

Home » Vaultek Safe » Vaultek Safe DS2e Smart Station User Guide 🖫

#### **Contents**

- 1 Vaultek Safe DS2e Smart Station
- **2 QUICK SETUP GUIDE**
- **3 SAFETY WARNINGS**
- **4 AT A GLANCE**
- **5 POWER**
- **6 SET THE CLOCK**
- 7 PROGRAM MASTER CODE
- **8 STEEL SECURITY CABLE**
- 9 HOTKEYS
- **10 FREQUENTLY ASKED**
- **QUESTIONS**
- 11 PRODUCT REGISTRATION
- **12 FCC STATEMENT**
- 13 Documents / Resources
  - 13.1 References
- **14 Related Posts**



Vaultek Safe DS2e Smart Station



# **Quick Setup/Tutorials/Online Help**

vaulteksafe.com/support and select your model



### **QUICK SETUP GUIDE**

Follow these steps to get your safe up and running.

### • Step 1: Plug in the safe and install two AAA batteries.

This safe needs to be plugged in continuously for normal function and two AAA batteries need to be installed. These batteries provide backup power in the event of a power outage and will provide power for about 9 months to access the safe.

# • Step 2: Program the master code.

- Change the default code as soon as possible to prevent unauthorized access to your safe.
- **Important!** Before entering your master code you need to wake the safe by tapping the touch strip so all the keys light up RED.

# • Step 3: Set the clock.

The clock needs to be set from the safe. Refer to the "Set the Clock" portion of this manual on the back for details.

### · Step 4: Register the safe.

Registration provides many benefits including a three-year warranty, technical support, and ordering replacement keys should you misplace them.


### **SAFETY WARNINGS**

To prevent damage to your Vaultek unit or injury to yourself or others, read the following safety precautions before using this unit.

- Before using this safe, inspect the safe to make sure the door latches properly. You can perform a quick test by
  using the included mechanical key. Open and close the safe 5 times. Do not use the product if you notice any
  problem or defect. Please email Vaultek customer support at <a href="mailto:support@vaulteksafe.com">support@vaulteksafe.com</a>.
- Always check to make sure the safe door has latched when closing. This safe uses a rugged latch system.
   When closing press firmly near the center of the front edge. The drawer requires a firm press and will lock automatically when closed properly.
- Change the default code as soon as possible to prevent unauthorized access to your safe.
- DO NOT lose the keys. In the event of a power outage, two AAA batteries will last about 9 months.
- DO NOT place or store the backup keys inside the safe at any time.
- DO NOT store loaded guns in this unit. Firearms are serious and must be handled with respect. Store responsibly.
- Keep this product away from small children as the package contains small items that could become a choking hazard.


#### AT A GLANCE

The Vaultek® DS2e Smart Station™ is a tough and rugged quick-access safe. Its solid structure and penetration-resistant design make it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. The safe combines high security with complete access control.

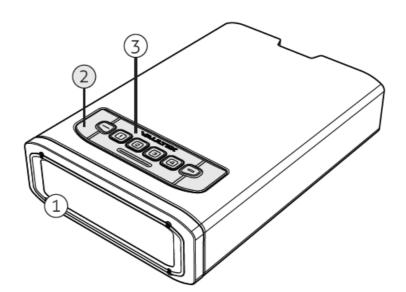


- 1. LED Clock Display
- 2. Control Panel
- 3. Smart Sense™ Keypad
- 4. Status LED
- 5. Battery Indicator
- 6. AC Adapter
- 7. Standard USB Port
- 8. USB-C Port
- 9. Manual Key Entry


- **Plug-In Required:** Your safe is powered by the AC power adapter and needs to be plugged in continuously for normal function.
- Backup Battery Required: Your safe has backup power via two AAA batteries (not included) and needs them for normal function.
- **Keypad:** Touch-sensitive design that responds to simple taps.
- **Key:** Two keys are provided for manual access to the safe.
- Open Door Alarm: The safe will beep and the status LED will flash RED when the safe door is left open for more than 8 minutes. This will continue until the safe door is closed.
- Low Battery Warning: The battery indicator will flash RED and sound several rapid beeps. This continues every 5 minutes until the battery dies to indicate the battery is in need of replacement.
- Tamper Warning: Tap the touch strip to see if tampering has occurred. If an incorrect keypad entry has been made the status LED will glow RED. You can reset the tamper detection by opening the safe through one of the authorized entry points.
- Security Sleep Mode: Activates when six (6) consecutive incorrect keypad entries are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will beep. The backup manual keys can be used to open the safe when in security sleep mode.

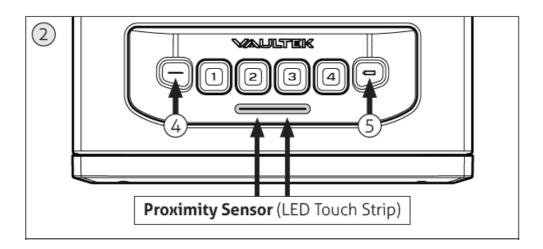

### Important!

Before entering the master code you need to wake the safe by tapping the touch strip so all the keys light up RED.

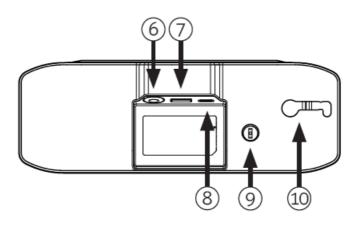

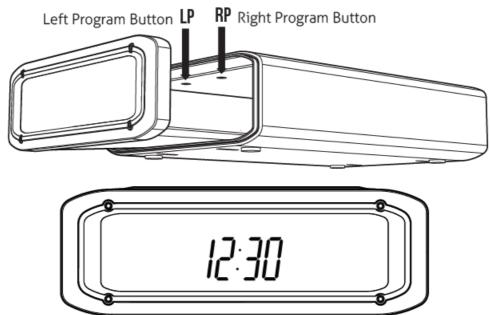

- Setting the Display Clock: The clock needs to be set from the safe. Refer to the "Set the Clock" portion of this manual on the back.
- Enable/Disable the Clock: (ON by Default) You can disable the clock by pressing and holding keys '1' and '4' together.

Visit our mobile-friendly online guide. Includes tutorial videos at <u>vaulteksafe.com/support</u> and select your model.

### **POWER**

This safe needs to be plugged in continuously for normal function and two AAA batteries need to be installed. These batteries provide backup power in the event of a power outage and will provide power for about 9 months to access to the safe.


# Plug In Required


1. Plug in the safe using the included power adapter (A).

### **Backup Batteries Required**

- 1. Open the safe. The key entry is located at the back of the safe (B).
- 2. Locate the battery cover inside the back of the safe drawer, and remove the cover (C).

3. Install two AAA batteries.

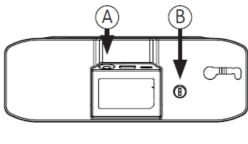

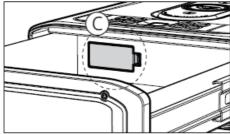

### Important!

Rechargeable batteries can be used, but they will not charge inside the safe. Rechargeable batteries must be charged separately.

### **SET THE CLOCK**


The clock can be set from the safe using the steps below.

# Setting the clock to either 12 hours or 24 hours.

1. First, wake up the safe by tapping the LED touch strip. Then press and hold keys '2' and '4' together to toggle between a 12-hour standard clock and 24 hour military clock.


### Setting the time.

- 1. Press and hold the "Left Program Button" (located inside the safe) until the status LED flashes GREEN and the hours on the clock start flashing. You can now set the hours.
- 2. Tap the "Left Program Button" to toggle through the hours.
- 3. Once you set the right hour wait until the minutes start flashing to begin setting the minutes.
- 4. Tap the "Left Program Button" to toggle through the minutes.
- 5. Once you set the right minutes wait until the safe beeps and the clock is solid RED. You have successfully set the clock.

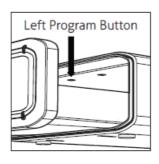

### **Programming Tips!**

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code of 6 to 8 digits in length.
- Avoid easy-to-guess digits such as 1234, 1111, 2222, etc.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- The default master code is 1-2-3-4 on the keypad.
- 1. Open the safe. Press and hold the "Right Program Button" (located inside the safe) (3 seconds) until all keys (1-4) light up RED and let go.
- 2. Enter your NEW master code.
- 3. Immediately press and hold the "Right Program Button" a second time (3 seconds) until all keys (1-4) light up RED and let go.
- 4. Enter your NEW master code a second time.
- 5. Immediately press and hold the "Right Program Button" a third time (3 seconds) until the keypad flashes GREEN and let go. This indicates the master code has been successfully programmed.

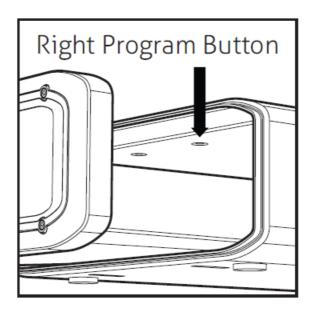



### STEEL SECURITY CABLE


Included is a security cable to attach your safe to larger stationary objects.

- 1. Loop the security cable around a secured object. Run the end of the cable through the eye of the other end and pull tight around the object.
- 2. Open safe drawer, and insert the clamped end of the security cable into the rear slot.
- 3. Slide the cable end all the way to the opposite side.
- 4. Shut the safe drawer to lock the security cable in place.

**Tip!** The security cable can only be inserted and removed while the safe drawer is open.

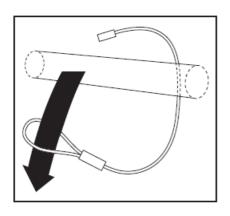

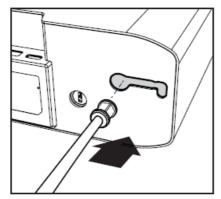

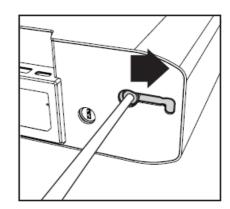

### **HOTKEYS**

Your safe has a list of available settings that can be changed from the safe.

### • Clock (ON by Default)

To set the clock refer to the "Set the Clock" portion of this manual. The clock is ON by default. To disable, wake the safe first by tapping the LED touch strip. When the safe is awake press and hold keys '1' and '4' together.

### Sound (ON by default)

Toggle between ON or OFF. First, wake up the safe by tapping the LED touch strip. When the safe is awake press and hold keys '1' and '3' together. The status LED will flash RED indicating OFF or GREEN indicating ON.

### Factory Reset

The Factory Reset erases all programmed information and restores the safe to its default settings. This includes resetting the master code to 1-2-3-4. Before you perform a Factory Reset make sure the safe is plugged in. To perform a factory reset, press and hold the "Left Program Button" and "Right Program Button" together until the keypad flashes GREEN and the safe restarts.

### FREQUENTLY ASKED QUESTIONS

If you have any questions about your Vaultek® safe or need help configuring the system, we encourage you to visit <a href="www.vaulteksafe.com/support/">www.vaulteksafe.com/support/</a> and select your model for troubleshooting, FAQs, and helpful videos. You can also email us at <a href="support@vaulteksafe.com">support@vaulteksafe.com</a>.

The keypad is flashing and the safe is beeping. What does that mean?

The safe is alerting you to change the master code from the default code of 1-2-3-4.

How to disable the sound?

First, wake the safe by tapping the LED touch strip. When the safe is awake press and hold keys '1' and '3' together. The status LED will flash RED for OFF or GREEN for ON.

What kind of battery does the safe use?

Two AAA batteries. Rechargeable batteries can be used, but they will not charge inside the safe. Rechargeable batteries must be charged separately.

Can rechargeable batteries be used?

Rechargeable batteries can be used, but they will not charge inside the safe. Rechargeable batteries must be charged separately.

What happens if the safe is unplugged?

If the safe is unplugged the backup battery power will kick on and the screen will turn OFF to preserve battery life. Two AAA batteries need to be installed.

#### PRODUCT REGISTRATION

Vaultek strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including a three-year warranty, technical support, and ordering replacement keys should you misplace them. Your Vaultek safe has a unique product number located in several places: on the side of the battery compartment and on the front of this manual. There is also a unique ID number engraved on the keys. You will need these numbers to register your safe.

Please visit the Vaultek website at <u>vaulteksafe.com</u> click Support/Product Registration and enter the required information.

### **SUPPORT**

If you have any questions about your Vaultek® safe or need help configuring the system, we encourage you to visit <a href="www.vaulteksafe.com/support/">www.vaulteksafe.com/support/</a> and select your model for troubleshooting, FAQs, and helpful videos. You can also email us at <a href="support@vaulteksafe.com">support@vaulteksafe.com</a>.

Visit our mobile-friendly online guide. Includes tutorial videos at vaulteksafe.com/support and select your model.

#### **FCC STATEMENT**

The device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

#### NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or

changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

### Stop!

Do not return to the retailer. If you have any questions about your Vaultek safe or need help configuring the system, please visit <a href="mailto:vaulteksafe.com/support">vaulteksafe.com/support</a> and select your model. You can also email us at <a href="mailto:support@vaulteksafe.com">support@vaulteksafe.com</a>.

#### **Documents / Resources**



<u>Vaultek Safe DS2e Smart Station</u> [pdf] User Guide DS2e Smart Station, DS2e, Smart Station, Station

### References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.