

# VOLLRATH FC-6BG-032S-HSL Velocity Adjustable Breath Guard Instruction Manual

## Contents

- 1 FC-6BG-032S-HSL Velocity Adjustable Breath Guard**
  - 1.1 Installation Instructions**
  - 1.2 Velocity Adjustable Breath Guard**
  - 1.3 BEFORE YOU BEGIN**
  - 1.4 BREATH GUARDS WITH HEAT OR LIGHT STRIPS**
  - 1.5 BREATH GUARD WITHOUT HEAT OR LIGHT STRIPS**
  - 1.6 Mark and Drill the Mounting Holes**
  - 1.7 Install the Top Glass**
  - 1.8 Install the Long-Side Glass**
  - 1.9 Install the End Glass Panels**
  - 1.10 TROUBLESHOOTING**
- 2 Documents / Resources**
  - 2.1 References**
- 3 Related Posts**

## FC-6BG-032S-HSL Velocity Adjustable Breath Guard



### Installation Instructions

## Velocity Adjustable Breath Guard



## BEFORE YOU BEGIN

1. Download the specification sheet from [Vollrath.com](http://Vollrath.com). You will need to refer to this document for dimensions and NSF requirements.
2. Know the countertop manufacturer's requirements for preparing and installing equipment into the countertop prior to starting installation. Countertop materials require specific preparation. Refer to the countertop manufacturer for instructions regarding the proper installation of equipment into the material.

3. Know the NSF standards for breath guard installation applicable to your installation. The standards can be found on the NSF website.

## **BREATH GUARDS WITH HEAT OR LIGHT STRIPS**

**Breath guards with heat or light strips ship assembled.**


1. Place the assembled breath guard into position onto the mounting surface.
2. Verify the breath guard uprights are parallel and square and the glass panels operate smoothly
3. Mark the mounting hole locations.
4. Shift the breath guard to expose the hole markings.
5. Drill the holes.
6. Feed the electrical wires through the countertop before securing the breath guard.
7. Attach the breath guard using appropriate hardware for the countertop surface and type of mounting.

## **BREATH GUARD WITHOUT HEAT OR LIGHT STRIPS**

Breath guards without heat or light strips require assembly.

### **Mark and Drill the Mounting Holes**


1. Refer to the spec sheets for centerline and mounting option dimensions and requirements.
2. Mark the mounting hole locations.
3. Mount the uprights securely to the countertop, making sure they are square and parallel.

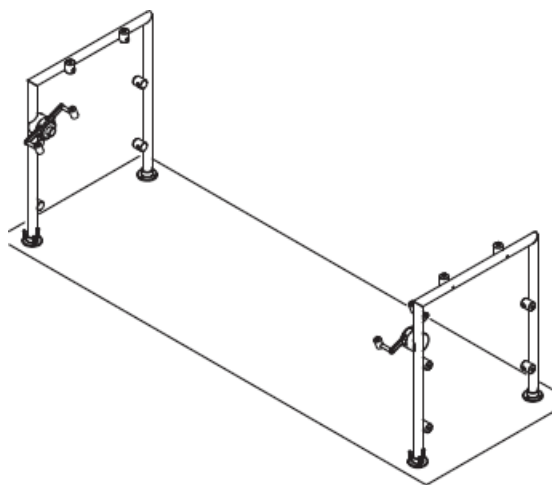

### **Install the Top Glass**


1. Place one gasket on the top of each upright standoff.

2. Place the top glass panel on top of the uprights. Align the holes.
3. Place one gasket over each hole in the top glass.
4. Insert a plastic sleeve onto each thumbscrew and install them through each gasket and through the top glass. Tighten the thumbscrews to secure the top glass.

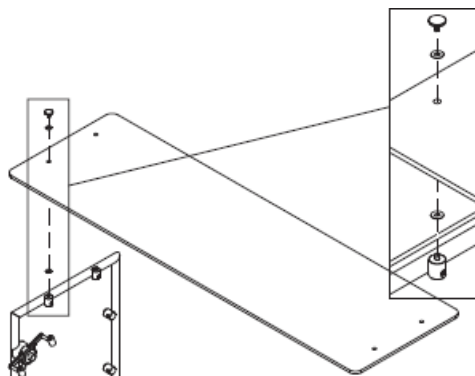


## Install the Long-Side Glass

1. Rotate the adjustment mechanism so the standoffs are facing up, parallel to the countertop and locked into place.

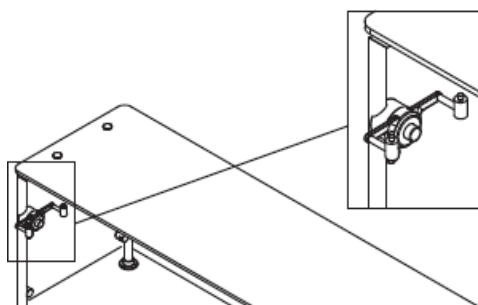

2. Attach the glass panel(s)
  - Place one gasket onto standoff.
  - Place the glass panel on top of the gaskets. Align the holes.
  - Place one gasket over each hole in the glass panel.
  - Install one thumbscrew through each gasket and through the glass panel. Tighten the thumbscrews to secure the panel.

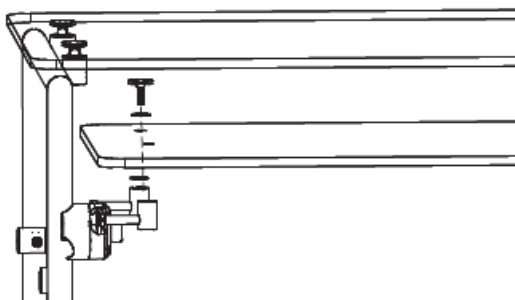


3. If applicable, repeat the steps for the other side.


## Test the Installation

The glass panel should rotate smoothly and without interference.


1. Gently pushing up to unlock the glass panel.

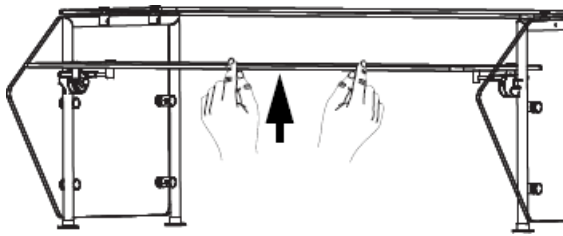


2. Press the release button.

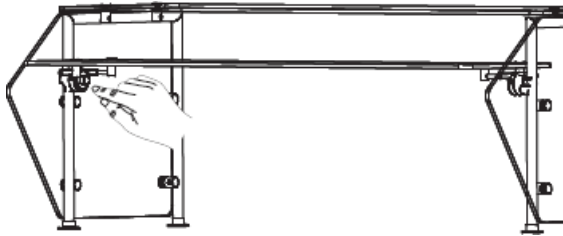

3. Lower the glass panel. Note: The glass panel rotates down in 90° increments from the starting position. You may need to push the release button more than once to lower the panel.

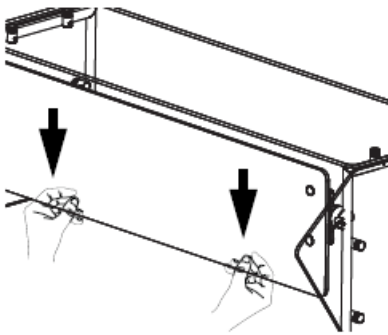

4. Rotate the glass panel up through it's full range.

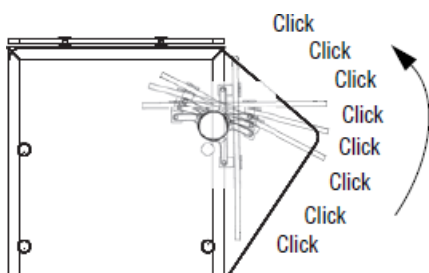

5. Press the adjustment button and lower the glass panel. It will rotate 90° from the previous position and then lock into place.


6. Press the adjustment button and lower the glass panel through all of the positions.

7. If the adjustable panel binds, adjust and retighten the end frame nuts and screws or the thumbscrews.

## Install the End Glass Panels

1. Place one gasket on each standoff for the glass panel.
2. Place the glass against the gaskets and standoffs.
3. Place a gasket a hole in the end glass.

4. Install one thumbscrew through the gasket and through the glass panel. Tighten to secure the end glass.
5. Install the other three gaskets and thumbscrews.
6. Repeat these steps for the other side end glass.

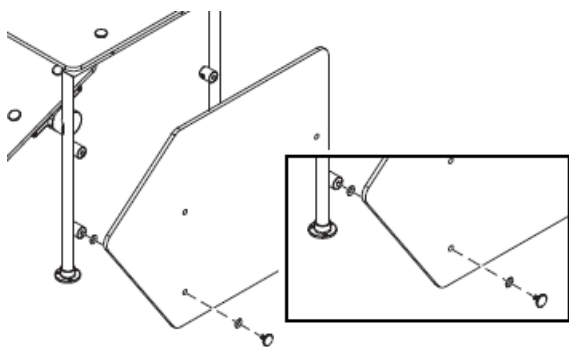

## TROUBLESHOOTING


If there is any interference when the long-side glass is rotated, doublecheck to make sure the uprights are parallel and square. Loosen and adjust the glass panels as needed. Then retest the glass rotation. When the glass rotates freely, tighten all thumbscrews.



[www.vollrathfoodservice.com](http://www.vollrathfoodservice.com)


The Vollrath Company, L.L.C.  
1236 North 18th Street  
Sheboygan, WI 53081-3201 U.S.A.  
Main Tel: 800.624.2051 or 920.457.4851  
Main Fax: 800.752.5620 or 920.459.6573  
Customer Service: 800.628.0830  
Canada Customer Service: 800.695.8560

Technical Services  
techservicereps@vollrathco.com  
Induction Products: 800.825.6036  
Countertop Warming Products: 800.354.1970  
Toasters: [800-309-2250](tel:800-309-2250)  
All Other Products: 800.628.0832



Installation Instructions

Velocity Adjustable Breath Guard

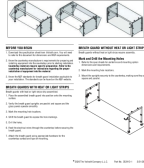

**NOTE:** The Velocity Adjustable Breath Guard is designed to be used with the FC-6BG-032S-HSL. It is not recommended to use the guard with other models.

**WARNING:** The guard is sharp and can cause injury. Handle with care.

**CAUTION:** The guard is heavy and can be difficult to move. Use proper lifting techniques.

**INSTALLATION:** The guard is installed by attaching the mounting brackets to the wall and then sliding the guard into the brackets. The guard can be adjusted to the desired height and locked in place.

**ADJUSTMENT:** The guard can be adjusted to the desired height by moving the locking pin up or down. The guard can be locked in place by moving the locking pin into the locked position.

**REMOVAL:** The guard can be removed by moving the locking pin into the unlocked position and then pulling the guard out of the brackets.

**MAINTENANCE:** The guard should be cleaned regularly with a mild detergent and water. Do not use abrasive cleaners or solvents.

**REPLACEMENT:** The guard is a replaceable part. If the guard is damaged, it should be replaced with a new one.

**WARRANTY:** The guard is warranted for one year from the date of purchase. The warranty is void if the guard is used for commercial purposes.

**CONTACT:** For more information, please contact your local Vollrath distributor or the Vollrath Customer Service Department.

**MODEL:** FC-6BG-032S-HSL

**DATE:** 10/15/15

[VOLLRATH FC-6BG-032S-HSL Velocity Adjustable Breath Guard](#) [pdf] Instruction Manual FC-6BG-032S-HSL Velocity Adjustable Breath Guard, FC-6BG-032S-HSL, Velocity Adjustable Breath Guard, Adjustable Breath Guard, Breath Guard, Guard

References

- [Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice](#)
- [Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.