




zoOZ ZSE41 Open Close XS Sensor User Manual

[Home](#) » [ZOZ](#) » zoOZ ZSE41 Open Close XS Sensor User Manual 

zoOZ[™]
bright ideas

USER MANUAL
OPEN | CLOSE XS SENSOR ZSE41

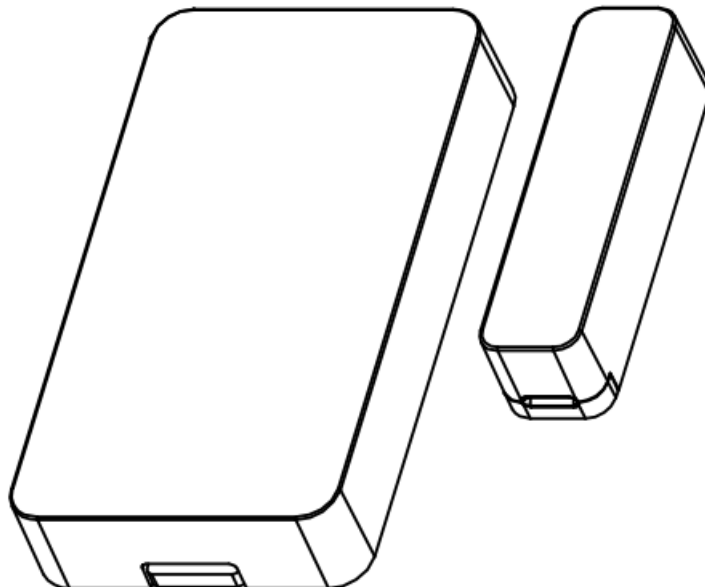

FCC S2

Firmware 1.30

www.getzooz.com

Contents

- [1 FEATURES](#)
- [2 SPECIFICATIONS](#)
- [3 INSTALLATION](#)
- [4 Z-WAVE CONTROL](#)
- [5 TROUBLESHOOTING](#)
- [6 EXCLUSION \(REMOVE DEVICE\)](#)
- [7 FACTORY RESET](#)
- [8 WAKE-UP MODE](#)
- [9 ASSOCIATION](#)
- [10 ADVANCED SETTINGS](#)
- [11 MOUNTING](#)
- [12 OUTDOOR MOUNTING](#)
- [13 WARRANTY](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

FEATURES


- Quick and reliable open/close alerts sent to your Z-Wave hub
- NEW 700 series chip for faster communication and more battery life than ever
- Extra small for discreet mounting
- Waterproof case available for outdoor installs (sold separately)
- Powered by a single coin battery
- The latest S2 security and SmartStart for secure set-up
- Supports OTA firmware updates

SPECIFICATIONS

- Model Number: ZSE41
- Power: 1 x CR2032 battery
- Operating Temperature: 32° – 104° F
- Dimensions: 1.9" x 1" x 0.3"(magnet: 1.26" x 0.3" x 0.3")
- Range: Up to 130 feet line of sight
- Installation and Use: Indoor or outdoor with a waterproof case (sold separately)

INSTALLATION


1. POWER THE SENSOR

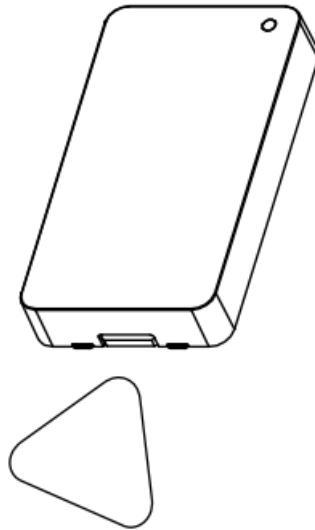

Use a small flat screwdriver to gently open the sensor's cover and access the battery. Pull the tab from under the battery to activate the sensor. Don't close the cover just yet. The LED indicator will start blinking for around 10 seconds once the sensor is powered.

The LED indicator doesn't blink or light up at all?

- Make sure the battery is inserted correctly per the positive/negative pole marks.
- Try a fresh lithium nonrechargeable battery.
- Click the Z-Wave button 3 times as quickly as possible to force inclusion/exclusion mode in case you missed when it first flashed.

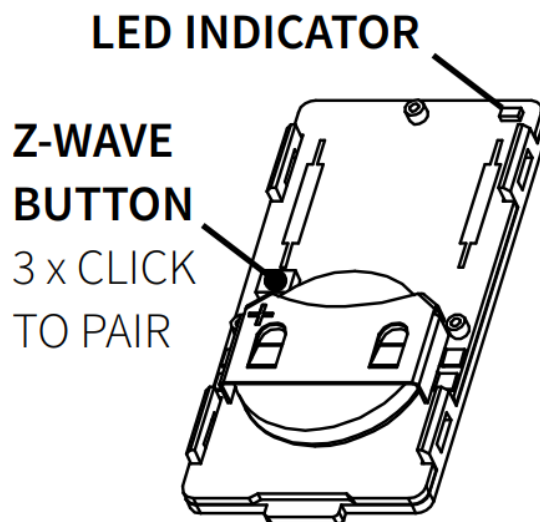

Z-WAVE CONTROL

1. ADD DEVICE to your hub

Initiate inclusion (pairing) in the app (or web interface). Not sure how? ask@getzooz.com

If you're using an S2 hub, it will ask you to enter the DSK PIN or scan the QR code printed on the inside of the back cover of the sensor to complete SmartStart inclusion.

2. ACTIVATE the sensor

While the hub is looking for new devices, click the **Z-Wave button 3 times** as quickly as possible. The LED

indicator will start flashing to confirm inclusion mode and turn off once inclusion is completed.

TIP!

It's best to add your sensor from the area where it will be installed so the hub can find the best route to reach it right away.

NEED SOME HELP?

ask@getzooz.com

Choose your hub and scan the QR code with your phone's camera.
Then click on the link to access the step-by-step pairing instructions.



SmartThings

<https://www.support.getzooz.com/kb/article/685-how-to-add-your-zse41-open-close-xs-sensor-to-smarthings/>

<https://www.support.getzooz.com/kb/article/685-how-to-add-your-zse41-open-close-xs-sensor-to-smarthings/>



Home Assistant

<https://www.support.getzooz.com/kb/article/744-how-to-add-your-zse41-open-close-xs-sensor-to-home-assistant/>

<https://www.support.getzooz.com/kb/article/744-how-to-add-your-zse41-open-close-xs-sensor-to-home-assistant/>

Get more tutorials and helpful tips at www.support.getzooz.com

TROUBLESHOOTING

The sensor won't add to your system? Try this:

1. Initiate **EXCLUSION** in your hub and click the Z-Wave button 3 times as quickly as possible.
2. Click the Z-Wave button **quicker** when adding it.
3. Bring the sensor **closer** to your hub, it may be out of
4. Double-check if the device is
5. Get troubleshooting tips specific to your hub at support.getzooz.com

EXCLUSION (REMOVE DEVICE)

1. Bring the sensor within **direct range** of your Z-Wave hub.
2. Put the Z-Wave hub into **exclusion** mode (not sure how to do that? ask@getzooz.com).
3. Click the **Z-Wave button 3 times** as quickly as
4. Your hub will confirm exclusion and the sensor will disappear from your controller's device list.

FACTORY RESET

When your network's primary controller is missing or otherwise inoperable, you may need to reset the device to factory settings manually. In order to complete the process, make sure the sensor is powered, then **click the Z-Wave button twice and hold it the third time for 10 seconds**. The LED indicator will blink continuously. **Immediately after, click the Z-Wave button twice more to finalize the reset**. The LED indicator will flash 3 times to confirm a successful reset.

NOTE: All previously recorded activity and custom settings will be erased from the device's memory.

WAKE-UP MODE

The sensor's wake-up interval is set to 12 hours by default to save battery life. Use the Wake Up Command Class to adjust the interval. **Click the Z-Wave button 4 times quickly to wake the sensor up manually**. The LED indicator will flash twice to confirm the device is awake. During wake-up, the sensor turns the Z-Wave radio on for one minute to receive communication from the hub. Long wake-up intervals will not affect how often the sensor reports to your hub so we recommend leaving the default setting to conserve battery.

ASSOCIATION

The XS Sensor supports Group 1 for Lifeline communication and Group 2 with up to 5 devices for basic on/off control. This device will send a Basic Set command to Group 2 whenever it detects a change in the open/close status. It sends an ON command when the OPEN status is detected and an OFF command when the CLOSED status is detected. Please note that not all Z-Wave systems give users access to direct association settings so if you're not sure where to find it, please get in touch with our support and we'll be happy to help.

ADVANCED SETTINGS

Par a meter 1: Turn the **LED indicator** for open/close status change on or off.

Values: 0 – LED indicator won't blink when the sensor's status is changed from open to close and vice versa; 1 – the LED indicator will blink when the sensor's open/close status is changed (default).

Size: 1-byte dec

Parameter 4: Decide when the sensor should report a **low battery** to the hub.

Values: 10-50 (% battery life). Default: 20

Size. 1-byte dec


Parameter 5: Decide which status should the sensor report to the hub when the magnet touches the sensor.

Values: 0 – closed status reported when the magnet is by the sensor (default); 1- open status reported when the magnet is by the sensor.

Size: 1 byte dec

Click the Z-Wave button 4 times quickly to wake the sensor up after updating the settings.

We listed the most helpful settings above. For a complete list of parameters, please go to www.supportgetzooz.com or scan the QR code for a direct link to all of the settings.

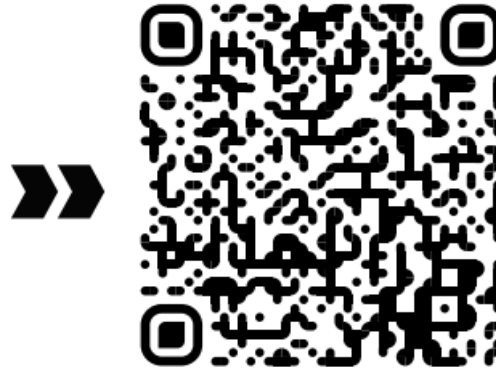


Not sure how to access advanced settings on your hub? We'll help!

ask@getzooz.com

MOUNTING


INDOOR MOUNTING

1. We recommend including your sensor to the Z-Wave network from the location you want to install it before you actually mount it on the door or window
2. Check if the gap between the moving part of the door/ window and its frame isn't greater than 0.25". The magnet will reliably report a status change at 25" from the sensor.
3. Place the sensor on the moving part of the door/ window and the magnet on the frame so that the grey orientation marks on both parts are directly opposite each other. The sensor should report "closed" to your hub. If it doesn't, move the sensor and magnet closer together.
4. Once you find the correct position for the sensor and the magnet, use the supplied adhesive tape to fix both parts to your door or window. Test the sensor one last time to make sure it reports as expected.

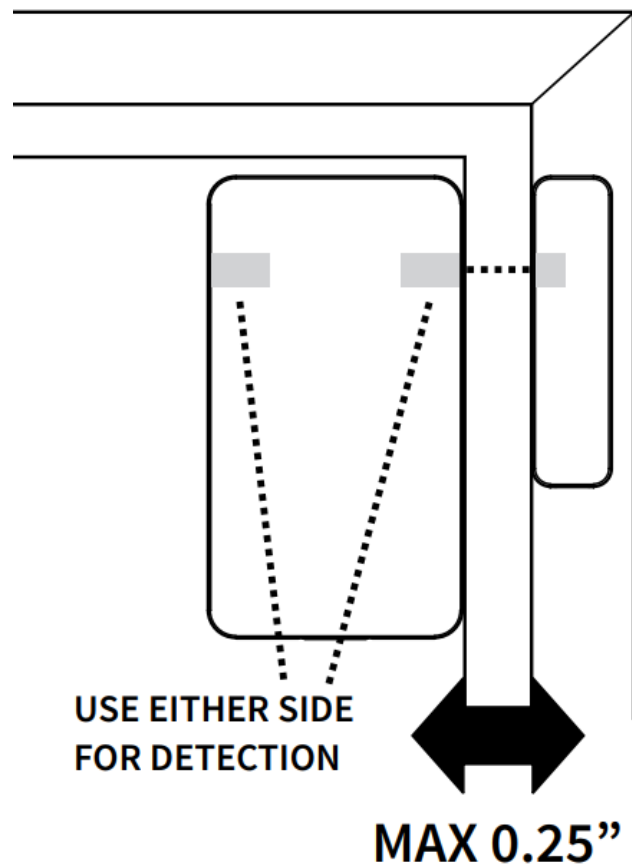

OUTDOOR MOUNTING

1. Install the product outdoors only with the waterproof case (sold separately).
2. Add the sensor to Z-Wave from the area where it will be installed before mounting it.
3. Insert the sensor into the waterproof case, by opening it on the backside as shown below:

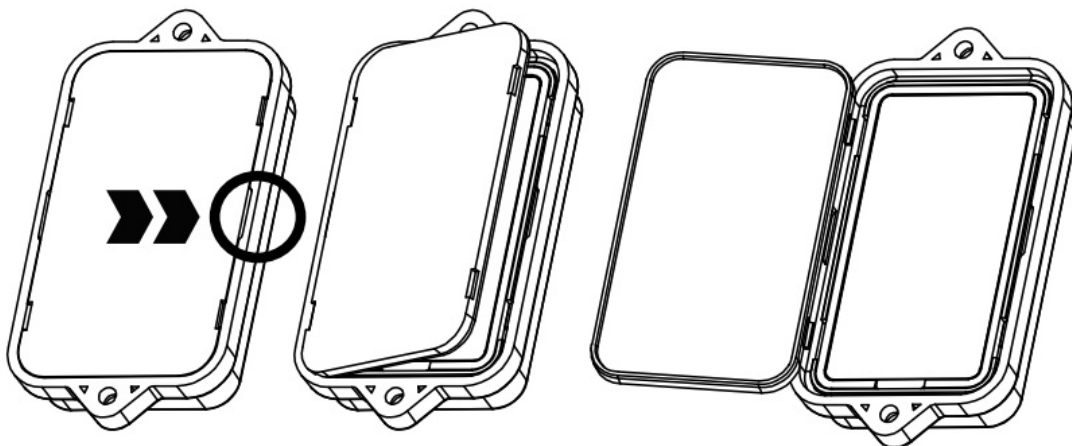

3. Position the sensor and the magnet according to the orientation marks and ensure the space between them doesn't exceed 0.25".
4. Check if the sensor reports "closed" to the hub when the door/window is closed to confirm correct positioning.
5. Use the supplied mounting screws to fix the sensor to the moving part of the door/window and the tape to fix the magnet to the frame. Test the sensor one more time to see if it reports correctly to your hub.



This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery-operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network. This product features the latest Security 2 (S2) framework to remove smart home network hacking risks. This device is equipped with a unique authentication code for trusted wireless communication.

WARNING

- This product should be installed indoors or outdoors in a waterproof case upon completion of any building renovations.
- Prior to installation, the device should be stored in a dry, dust-and-mold-proof place.
- Do not install the device in a place with direct sun exposure, high temperature, or humidity.
- Keep away from chemicals, water, and
- Ensure the device is never close to any heat source or open flame to prevent
- No part of the device may be replaced or repaired by the user except for the

WARRANTY

This product is covered under a 5-year limited warranty. To read the full warranty policy or file a warranty claim, please go to www.getzooz.com/warranty

This product is covered under a 5-year limited warranty. To read the full warranty policy or file a warranty claim, please go to www.getzooz.com/warranty

IN NO EVENT SHALL ZOOZ OR ITS SUBSIDIARIES AND AFFILIATES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL, OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, OR USE INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT OR OTHERWISE EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. ZOOZ'S LIABILITY AND CUSTOMER'S EXCLUSIVE REMEDY FOR ANY CAUSE OF ACTION ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF THE PRODUCTS, WHETHER BASED ON NEGLIGENCE, STRICT LIABILITY, BREACH OF WARRANTY, BREACH OF AGREEMENT, OR EQUITABLE PRINCIPLES, IS EXPRESSLY LIMITED TO, AT ZOOZ'S OPTION, REPLACEMENT OF, OR REPAYMENT OF THE PURCHASE PRICE FOR THAT PORTION OF PRODUCTS WITH RESPECT TO WHICH DAMAGES ARE CLAIMED. ALL CLAIMS OF ANY KIND ARISING IN CONNECTION WITH THIS AGREEMENT OR THE SALE OR USE OF PRODUCTS SHALL BE DEEMED WAIVED UNLESS MADE IN WRITING WITHIN THIRTY (30) DAYS FROM ZOOZ'S DELIVERY, OR THE DATE FIXED FOR DELIVERY IN THE EVENT OF NONDELIVERY.

FCC NOTE

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. STORE INDOORS WHEN NOT IN USE. SUITABLE FOR DRY LOCATIONS ONLY. DO NOT IMMERSE IN WATER. NOT FOR USE WHERE DIRECTLY EXPOSED TO WATER.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference,
2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in any given installation.

If this equipment causes harmful interference to radio or television reception, the user may try to correct the interference by taking one or more of the following measures:

- Reorient or relocate receiving antenna
- Increase the separation between equipment and receiver – Connect the equipment into a separate outlet or circuit from receiver
- Consult the dealer or an experienced radio/TV technician for additional assistance

All brand names displayed are trademarks of their respective holders.

Zoos 2021

Documents / Resources

zoOZ

OPEN CLOSE XS SENSOR

ZSE41

www.zooz.com

Barcode

Barcode

Barcode

FEATURES

- Quick and reliable sensor for opening and closing doors
- 24V DC sensor for better connection and more safety
- Easy to install and use for indoor and outdoor use
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate

APPLICATIONS

- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate

INSTALLATION

1. POWER THE SENSOR

2. MOUNT THE SENSOR

3. MOUNT THE SENSOR

4. MOUNT THE SENSOR

5. MOUNT THE SENSOR

6. MOUNT THE SENSOR

7. MOUNT THE SENSOR

8. MOUNT THE SENSOR

9. MOUNT THE SENSOR

10. MOUNT THE SENSOR

11. MOUNT THE SENSOR

12. MOUNT THE SENSOR

13. MOUNT THE SENSOR

14. MOUNT THE SENSOR

15. MOUNT THE SENSOR

16. MOUNT THE SENSOR

17. MOUNT THE SENSOR

18. MOUNT THE SENSOR

19. MOUNT THE SENSOR

20. MOUNT THE SENSOR

21. MOUNT THE SENSOR

22. MOUNT THE SENSOR

23. MOUNT THE SENSOR

24. MOUNT THE SENSOR

25. MOUNT THE SENSOR

26. MOUNT THE SENSOR

27. MOUNT THE SENSOR

28. MOUNT THE SENSOR

29. MOUNT THE SENSOR

30. MOUNT THE SENSOR

31. MOUNT THE SENSOR

32. MOUNT THE SENSOR

33. MOUNT THE SENSOR

34. MOUNT THE SENSOR

35. MOUNT THE SENSOR

36. MOUNT THE SENSOR

37. MOUNT THE SENSOR

38. MOUNT THE SENSOR

39. MOUNT THE SENSOR

40. MOUNT THE SENSOR

41. MOUNT THE SENSOR

42. MOUNT THE SENSOR

43. MOUNT THE SENSOR

44. MOUNT THE SENSOR

45. MOUNT THE SENSOR

46. MOUNT THE SENSOR

47. MOUNT THE SENSOR

48. MOUNT THE SENSOR

49. MOUNT THE SENSOR

50. MOUNT THE SENSOR

51. MOUNT THE SENSOR

52. MOUNT THE SENSOR

53. MOUNT THE SENSOR

54. MOUNT THE SENSOR

55. MOUNT THE SENSOR

56. MOUNT THE SENSOR

57. MOUNT THE SENSOR

58. MOUNT THE SENSOR

59. MOUNT THE SENSOR

60. MOUNT THE SENSOR

61. MOUNT THE SENSOR

62. MOUNT THE SENSOR

63. MOUNT THE SENSOR

64. MOUNT THE SENSOR

65. MOUNT THE SENSOR

66. MOUNT THE SENSOR

67. MOUNT THE SENSOR

68. MOUNT THE SENSOR

69. MOUNT THE SENSOR

70. MOUNT THE SENSOR

71. MOUNT THE SENSOR

72. MOUNT THE SENSOR

73. MOUNT THE SENSOR

74. MOUNT THE SENSOR

75. MOUNT THE SENSOR

76. MOUNT THE SENSOR

77. MOUNT THE SENSOR

78. MOUNT THE SENSOR

79. MOUNT THE SENSOR

80. MOUNT THE SENSOR

81. MOUNT THE SENSOR

82. MOUNT THE SENSOR

83. MOUNT THE SENSOR

84. MOUNT THE SENSOR

85. MOUNT THE SENSOR

86. MOUNT THE SENSOR

87. MOUNT THE SENSOR

88. MOUNT THE SENSOR

89. MOUNT THE SENSOR

90. MOUNT THE SENSOR

91. MOUNT THE SENSOR

92. MOUNT THE SENSOR

93. MOUNT THE SENSOR

94. MOUNT THE SENSOR

95. MOUNT THE SENSOR

96. MOUNT THE SENSOR

97. MOUNT THE SENSOR

98. MOUNT THE SENSOR

99. MOUNT THE SENSOR

100. MOUNT THE SENSOR

zoOZ ZSE41 Open Close XS Sensor [pdf] User Manual ZSE41, Open Close XS Sensor, ZSE41 Open Close XS Sensor

zoOZ

OPEN CLOSE XS SENSOR

ZSE41

www.zooz.com

Barcode

Barcode

Barcode

FEATURES

- Quick and reliable sensor for opening and closing doors
- 24V DC sensor for better connection and more safety
- Easy to install and use for indoor and outdoor use
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate

APPLICATIONS

- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate
- 100% reliable and accurate

INSTALLATION

1. POWER THE SENSOR

2. MOUNT THE SENSOR

3. MOUNT THE SENSOR

4. MOUNT THE SENSOR

5. MOUNT THE SENSOR

6. MOUNT THE SENSOR

7. MOUNT THE SENSOR

8. MOUNT THE SENSOR

9. MOUNT THE SENSOR

10. MOUNT THE SENSOR

11. MOUNT THE SENSOR

12. MOUNT THE SENSOR

13. MOUNT THE SENSOR

14. MOUNT THE SENSOR

15. MOUNT THE SENSOR

16. MOUNT THE SENSOR

17. MOUNT THE SENSOR

18. MOUNT THE SENSOR

19. MOUNT THE SENSOR

20. MOUNT THE SENSOR

21. MOUNT THE SENSOR

22. MOUNT THE SENSOR

23. MOUNT THE SENSOR

24. MOUNT THE SENSOR

25. MOUNT THE SENSOR

26. MOUNT THE SENSOR

27. MOUNT THE SENSOR

28. MOUNT THE SENSOR

29. MOUNT THE SENSOR

30. MOUNT THE SENSOR

31. MOUNT THE SENSOR

32. MOUNT THE SENSOR

33. MOUNT THE SENSOR

34. MOUNT THE SENSOR

35. MOUNT THE SENSOR

36. MOUNT THE SENSOR

37. MOUNT THE SENSOR

38. MOUNT THE SENSOR

39. MOUNT THE SENSOR

40. MOUNT THE SENSOR

41. MOUNT THE SENSOR

42. MOUNT THE SENSOR

43. MOUNT THE SENSOR

44. MOUNT THE SENSOR

45. MOUNT THE SENSOR

46. MOUNT THE SENSOR

47. MOUNT THE SENSOR

48. MOUNT THE SENSOR

49. MOUNT THE SENSOR

50. MOUNT THE SENSOR

51. MOUNT THE SENSOR

52. MOUNT THE SENSOR

53. MOUNT THE SENSOR

54. MOUNT THE SENSOR

55. MOUNT THE SENSOR

56. MOUNT THE SENSOR

57. MOUNT THE SENSOR

58. MOUNT THE SENSOR

59. MOUNT THE SENSOR

60. MOUNT THE SENSOR

61. MOUNT THE SENSOR

62. MOUNT THE SENSOR

63. MOUNT THE SENSOR

64. MOUNT THE SENSOR

65. MOUNT THE SENSOR

66. MOUNT THE SENSOR

67. MOUNT THE SENSOR

68. MOUNT THE SENSOR

69. MOUNT THE SENSOR

70. MOUNT THE SENSOR

71. MOUNT THE SENSOR

72. MOUNT THE SENSOR

73. MOUNT THE SENSOR

74. MOUNT THE SENSOR

75. MOUNT THE SENSOR

76. MOUNT THE SENSOR

77. MOUNT THE SENSOR

78. MOUNT THE SENSOR

79. MOUNT THE SENSOR

80. MOUNT THE SENSOR

81. MOUNT THE SENSOR

82. MOUNT THE SENSOR

83. MOUNT THE SENSOR

84. MOUNT THE SENSOR

85. MOUNT THE SENSOR

86. MOUNT THE SENSOR

87. MOUNT THE SENSOR

88. MOUNT THE SENSOR

89. MOUNT THE SENSOR

90. MOUNT THE SENSOR

91. MOUNT THE SENSOR

92. MOUNT THE SENSOR

93. MOUNT THE SENSOR

94. MOUNT THE SENSOR

95. MOUNT THE SENSOR

96. MOUNT THE SENSOR

97. MOUNT THE SENSOR

98. MOUNT THE SENSOR

99. MOUNT THE SENSOR

100. MOUNT THE SENSOR

zoOZ ZSE41 Open Close XS Sensor [pdf] User Manual ZSE41, Open Close XS Sensor, ZSE41 Open Close XS Sensor, Close XS Sensor, XS Sensor, Sensor

References

- [zoOZ – Smart Home Technology](#)
- [Home - Zooz Support Center](#)