Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Joyroom JR-BB1

JOYROOM JR-BB1 True Wireless Earbuds User Manual

Model: JR-BB1

Product Overview

The Joyroom JR-BB1 In-Ear True Wireless Earbuds are designed for an immersive audio experience with clear communication. Featuring Bluetooth 5.3 for stable connectivity, long battery life, and a comfortable, secure fit, these earbuds are suitable for daily use and active lifestyles.



Image: Joyroom JR-BB1 True Wireless Earbuds in their charging case, showcasing the sleek black design.

What's in the Box

- Joyroom JR-BB1 True Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Multiple pairs of ear tips (for comfortable fit)
- User Manual

Setup

Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case and connect the USB-C cable to the charging port on the case. Connect the other end to a compatible USB power source (e.g., computer USB port or wall adapter).

- Charging time for headphones/case: Approximately 1.5 hours.
- The charging case has a 450 mAh battery, and each earbud has a 35 mAh battery.



Image: Visual representation of the earbuds and charging case, highlighting the 35-hour playtime with the case and rapid charging capabilities.

Pairing with a Device

1. Ensure the earbuds are charged and inside the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.

3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for "JR-BB1" in the list of available Bluetooth devices.
5. Select "JR-BB1" to connect. Once connected, a voice prompt will confirm the successful pairing.

The earbuds utilize Bluetooth 5.3 for a fast and stable connection.

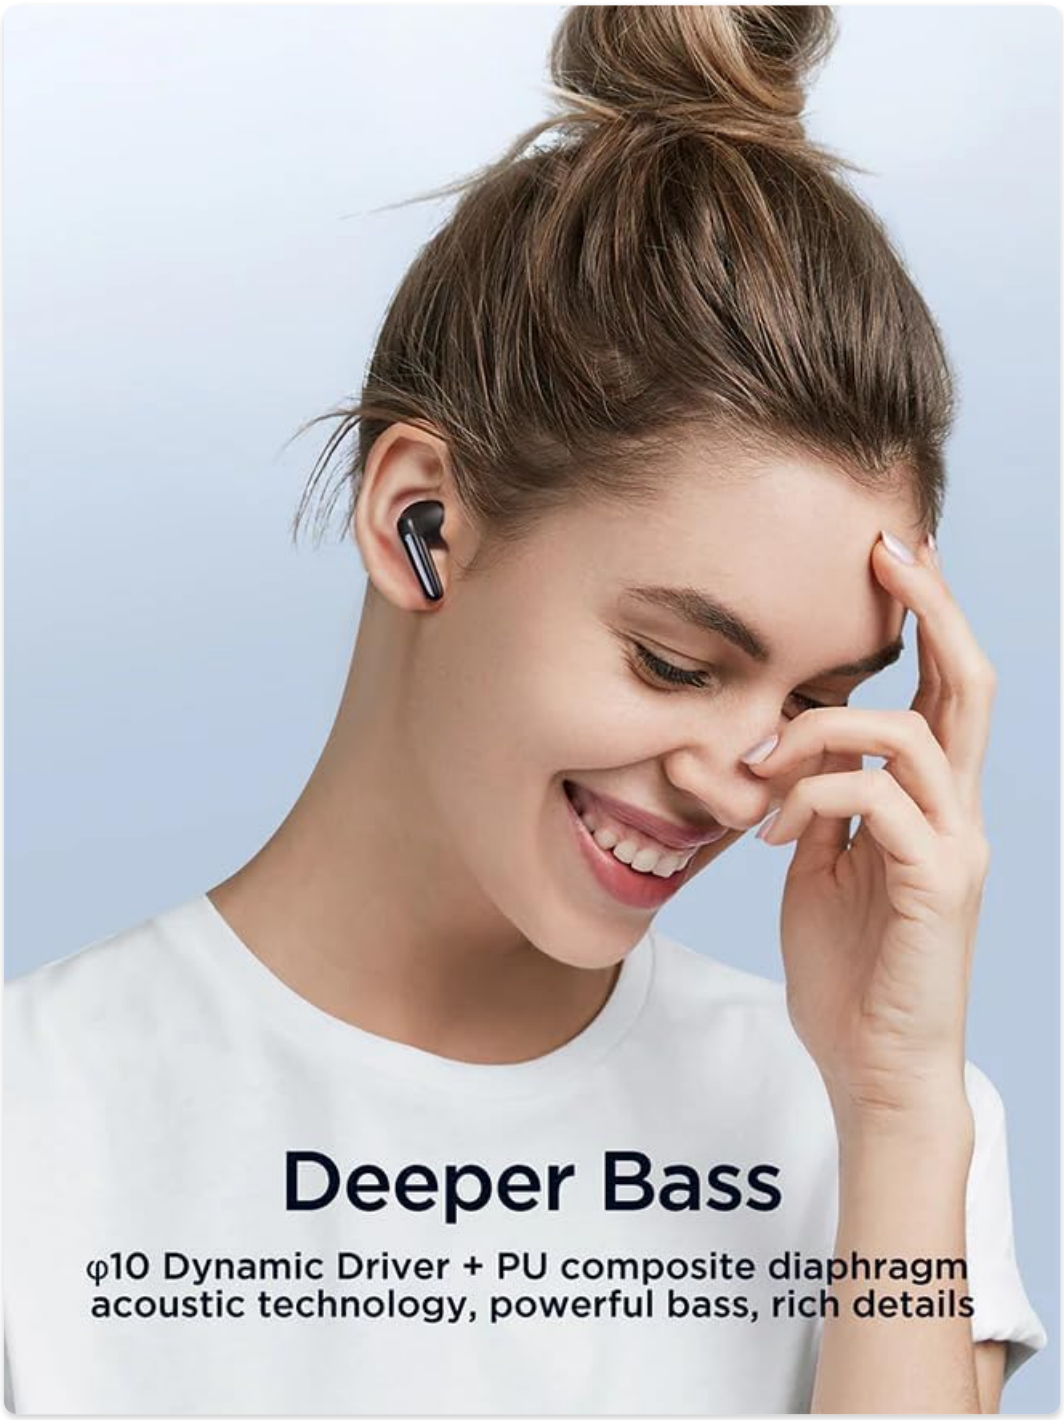

Image: Joyroom JR-BB1 earbuds and charging case positioned near a smartphone, illustrating the instant Bluetooth 5.3 connection process.

Operating Instructions

Wearing the Earbuds

Select the ear tips that provide the most comfortable and secure fit for your ears. Gently insert the earbuds into your ear canal and rotate them slightly until they feel snug and stable.



Image: A person demonstrating the snug and secure fit of the Joyroom JR-BB1 earbuds, highlighting their ergonomic design for comfort.

Touch Controls

The JR-BB1 earbuds feature intuitive touch controls for various functions:

Function	Action
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the right earbud.
Previous Track	Double tap on the left earbud.
Answer/End Call	Single tap on either earbud.
Reject Call	Press and hold either earbud for 2 seconds.
Activate Voice Assistant	Triple tap on either earbud.

Function	Action
Game Mode (Low Latency)	Specific gesture (refer to detailed manual if available, otherwise assume automatic or context-based). *Note: The product features 80ms low latency technology for gaming.*

Call Functionality

The earbuds are equipped with 4-mic ENC (Environmental Noise Cancellation) technology, ensuring clear voice transmission during calls by reducing ambient noise.



Image: An internal view diagram of an earbud, illustrating the 4-mic ENC technology designed for superior call noise reduction.

Audio Quality

Experience rich and detailed sound with deep bass, thanks to the φ10 large speakers and PU composite film acoustic technology.



Image: A visual representation emphasizing the "Deeper Bass" feature of the earbuds, powered by φ10 dynamic drivers and PU composite diaphragm acoustic technology.

Maintenance

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Ear Tips:** Remove ear tips periodically and clean them with a damp cloth. Ensure they are completely dry before reattaching.
- **Charging Ports:** Keep the USB-C charging port free of dust and debris.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The earbuds are IPX4 water resistant, meaning they can withstand splashes and sweat. Do not submerge them in water or expose them to heavy rain. Dry them thoroughly if they get wet.

Troubleshooting

Problem	Possible Solution
Earbuds not pairing/connecting.	◦ Ensure earbuds are charged. ◦ Turn off and on Bluetooth on your device. ◦ Forget "JR-BB1" from your device's Bluetooth list and re-pair. ◦ Place earbuds back in the case, close, then open to reset pairing mode.
Only one earbud working.	◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, wait a few seconds, then open again. ◦ Try re-pairing the earbuds with your device.
Low volume or poor sound quality.	◦ Adjust volume on both your device and the earbuds. ◦ Ensure ear tips provide a good seal in your ear canal. ◦ Clean any earwax or debris from the earbud nozzles. ◦ Try different sized ear tips.
Charging case not charging.	◦ Check the USB-C cable and power adapter. Try a different cable or adapter. ◦ Ensure the charging port is clean and free of debris.

Specifications

Feature	Detail
Model	JR-BB1 (Jbuds Series)
Bluetooth Version	V5.3
Chip	Jieli AD6973D
Audio Codecs	AAC, SBC
Supported Protocols	HSP, HFP, A2DP, AVRCP
Operating Frequency	2402-2480 MHz
Earbud Battery Capacity	35 mAh
Charging Case Battery Capacity	450 mAh
Impedance	32Ω
Rated Power	2x 3 mW
Transducer Diameter	10 mm (HiFi composite diaphragm)
Music Playback Time	Approx. 7 hours (at 70% volume)
Talk Time	Approx. 5 hours (at 70% volume)

Feature	Detail
Total Operating Time (with case)	Approx. 35 hours (at 70% volume)
Standby Time	Approx. 48 hours
Charging Voltage (Headphones)	5V±30mA
Charging Voltage (Case)	5V±300mA
Charging Port	USB-C
Charging Time (Headphones/Case)	Approx. 1.5 hours
Water Resistance	IPX4 (Splash and sweat resistant)
Material	ABS PC
Headphone Weight	3.5 g (each)
Set Weight	38 g
Product Dimensions	0.6 x 7.5 x 4 cm (earbuds); 6 x 75 x 40 mm (overall)
Color	Black

Warranty and Support

For warranty information and technical support, please refer to the official Joyroom website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Manufacturer: Joyroom
Item Model Number: JR-BB1
Date First Available: 28 May 2020

© 2023 Joyroom. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07MXLBBSL

More documents and user manuals: **https://manuals.plus/**