Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

APBEAMLighting 9137

APBEAMLighting 36-Inch Tiffany Style Ceiling Fan with Dimmable LED Lights and Remote Control

MODEL: 9137

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your APBEAMLighting 36-inch Tiffany Style Ceiling Fan, Model 9137. Please read this manual thoroughly before installation and retain it for future reference.

The ceiling fan combines a functional fan with a decorative Tiffany-style LED light fixture. It features retractable blades, dimmable LED lighting with adjustable color temperature, multiple fan speeds, and a reversible motor for year-round comfort. Control is managed via a remote control or a dedicated mobile application.



Image 1.1: The APBEAMLighting Tiffany Style Ceiling Fan with its remote control and app interface.

2. Safety Information

- Always disconnect power at the circuit breaker before installation or servicing.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the mounting structure can support the weight of the fan (approximately 17.96 pounds).
- Do not bend the blade holders during installation or cleaning.
- Keep hands clear of the fan blades when the fan is operating.
- Use only the remote control provided with the fan.

3. Package Contents

Verify that all components are present before beginning installation:



Image 3.1: Package contents diagram.

1. Remote Control
2. Downrod (5 inches)
3. LED Driver
4. Canopy
5. Long Downrod (10 inches)
6. LED Panel
7. Mounting Bracket
8. Light Shade (Tiffany Glass Lampshade)
9. Hardware Bag (screws, wire nuts, etc.)
10. Instruction Manual
11. Light Shade (additional component, likely referring to the glass shade)
12. Fan Motor Assembly

4. Product Overview

The APBEAMLighting Tiffany Style Ceiling Fan features a durable polished metal body, vintage stained glass lampshade, and four acrylic retractable blades. It is designed for indoor use in various rooms such as bedrooms, dining rooms, living rooms, and home offices.



Image 4.1: Key components of the fan, including the silent motor, retractable blades, Tiffany glass lampshade, and sturdy canopy.

5. Installation

Important: Before starting, ensure the power is turned off at the circuit breaker.

5.1. Prepare the Fan Assembly

1. **Install LED Panel:** Secure the LED panel to the fan motor assembly using the provided screws.
2. **Attach Lampshade:** Carefully place the Tiffany glass lampshade onto the fan motor assembly and secure it.
3. **Assemble Downrod and Canopy:** Select the appropriate downrod (5" or 10") for your ceiling height. Thread the wires from the fan motor through the downrod and canopy. Secure the downrod to the fan motor assembly with the provided pin and screw.

5.2. Mounting to Ceiling

1. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the screws provided. Ensure the bracket is firmly attached to a structural beam or a fan-rated junction box.
2. **Hang the Fan:** Carefully lift the fan assembly and hang it onto the hook of the mounting bracket. This will support the fan during wiring.
3. **Connect Wiring:** Connect the electrical wires from the ceiling to the fan wires according to the following:
   - Connect the **ground wire** (green or bare copper) from the ceiling to the green ground wire from the fan.
   - Connect the **neutral wire** (white) from the ceiling to the white neutral wire from the fan.
   - Connect the **live wire** (black) from the ceiling to the black live wire from the fan.

   Use wire nuts to secure all connections.
4. **Attach Canopy:** Once wiring is complete, carefully slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws.

The fan is suitable for both flat ceilings and sloped ceilings less than 20 degrees.



Image 5.1: Mounting options for the ceiling fan.

5.3. Installation Video Guide

For a visual guide on the installation process, please refer to the official installation video:

▶ **Watch video online**
How to Install the Tiffany Ceiling Fan

Video 5.2: Official installation guide for the Tiffany Ceiling Fan.

6. Operation

Your ceiling fan can be controlled using the included remote control or a mobile application.

6.1. Remote Control Functions

The remote control allows full command over the fan and light features. Ensure 2 AAA 1.5V batteries are inserted (not included) before use.



Image 6.1: Remote control and mobile app interface.

- **Lights On/Off:** Toggles the light fixture on or off.
- **Quick Switch for Light Colors:** Cycles through Warm White, Daylight, and Cool White color temperatures.
- **Night Mode Button:** Activates a low-light setting.
- **Adjust Color Temperature:** Press the 'SET UP' button to fine-tune the light color temperature.
- **2 Hours Timing:** Sets the fan to turn off automatically after 2 hours.
- **Wind Speeds (1-6):** Selects one of six fan speeds.
- **F/R (Forward/Reverse Wind):** Changes the direction of blade rotation. Forward wind creates a downdraft for cooling, while reverse wind creates an updraft for air circulation in cooler weather.
- **Turn Off the Fan:** Stops the fan operation.

6.2. Mobile App Control

For additional control and features, download the dedicated mobile application. Scan the QR code provided in the remote control diagram (Image 6.1) or visit http://www.jasonghost.com/fanlamppro/ to download the app.

7. Features

7.1. Dimmable LED Lighting

The integrated LED light offers 3 color temperatures (Warm White, Daylight, Cool White) and is dimmable, allowing you to adjust the brightness from 425LM to 6120LM. The color temperature range is 800K-6500K.

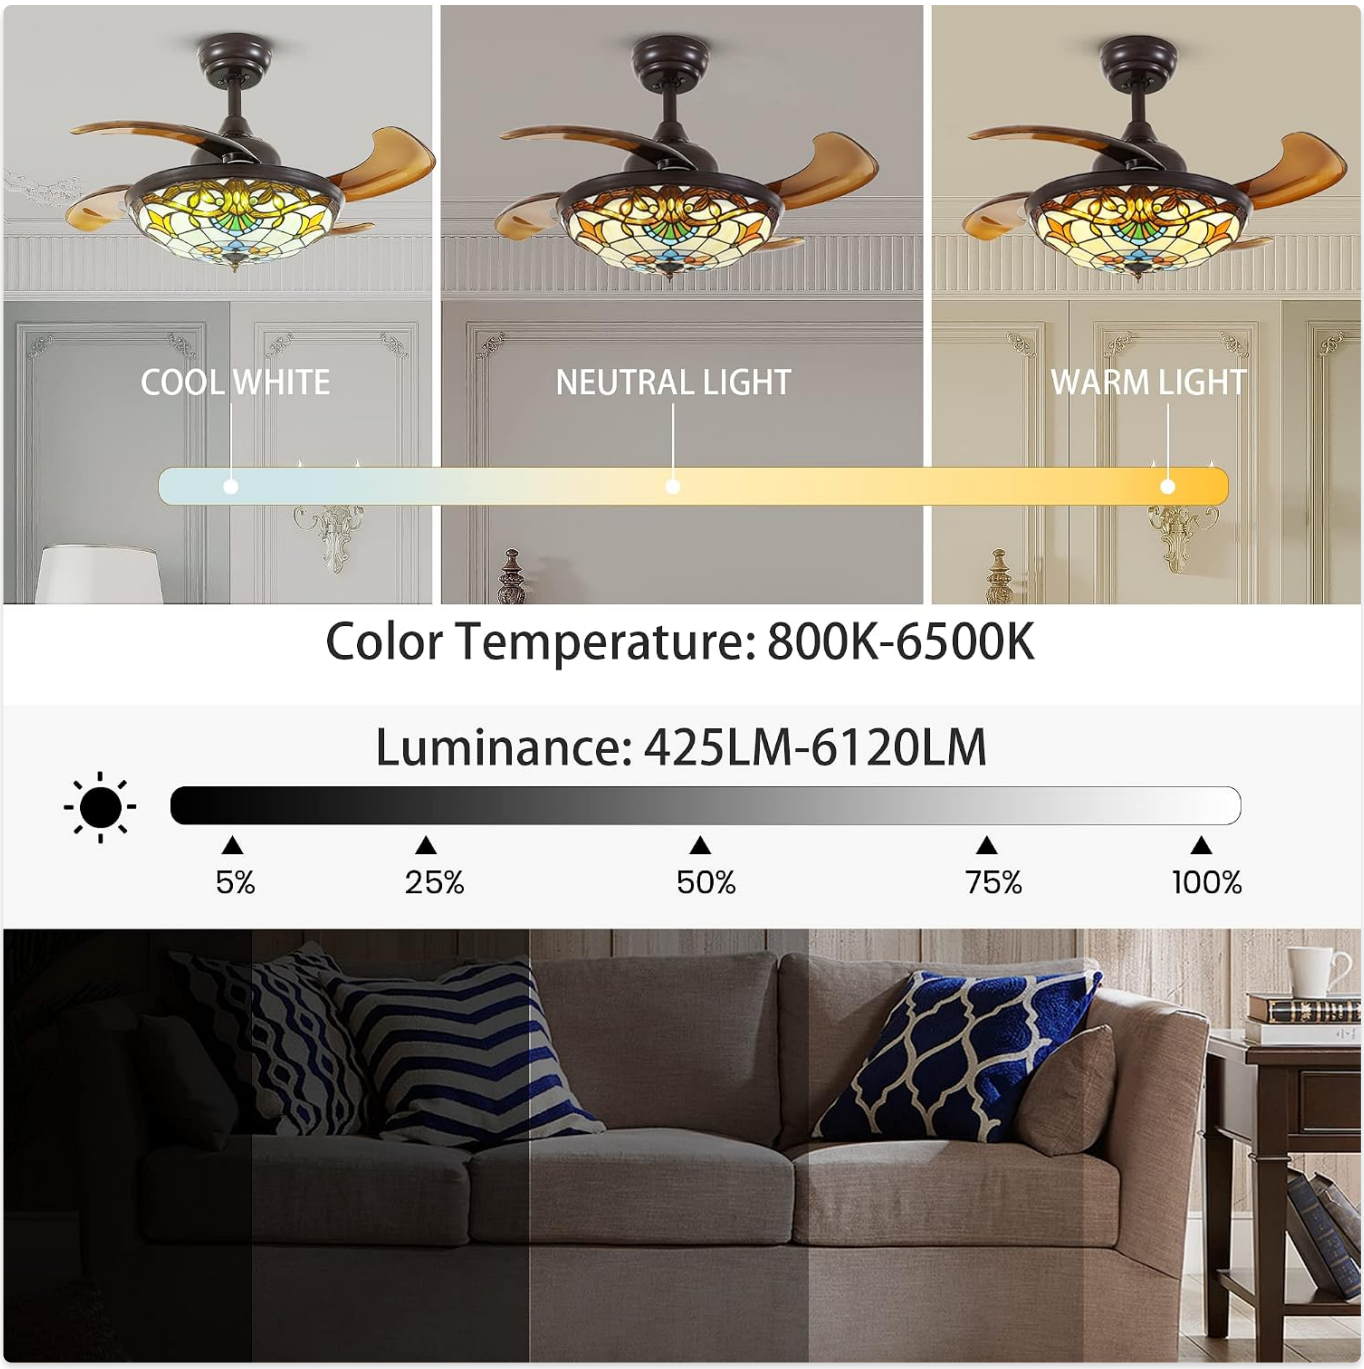

Image 7.1: Dimmable LED light settings.

7.2. Retractable and Reversible Blades

The fan features 4 acrylic blades that retract automatically when the fan is turned off, maintaining a sleek appearance. When activated, the blades extend to provide airflow. The reversible motor allows for two rotation modes:

- **Forward Mode (Summer):** Creates a downward airflow, providing a cooling effect.
- **Reverse Mode (Winter):** Creates an upward airflow, circulating warm air trapped near the ceiling.



Image 7.2: Forward and reverse fan operation.

7.3. Multiple Wind Speeds and Timing

The fan offers 6 wind speed adjustments, including a natural wind setting, to suit various comfort levels. A timing function allows you to set the fan to turn off after 1, 2, 4, or 8 hours.



Image 7.3: Wind speed settings and fan dimensions.

8. Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and light fixture. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check the blades for any signs of damage or imbalance.
- **Tighten Screws:** Over time, screws may loosen. Periodically check and tighten all screws on the fan assembly and mounting bracket.
- **Light Source:** The LED light source is integrated and generally does not require replacement. If issues arise, contact customer support.

9. Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery dead.	Check circuit breaker; Verify wire connections; Replace remote control batteries.
Light does not work	Loose wiring; LED driver issue.	Check light fixture wiring; Contact customer support if LED driver is suspected.
Fan makes noise	Loose screws; Blades unbalanced.	Tighten all screws; Ensure blades are properly installed and balanced.
Remote control not working	Batteries dead or incorrectly inserted; Remote not paired.	Replace batteries, ensure correct polarity; Refer to remote pairing instructions (if applicable, usually automatic).

10. Specifications

- **Brand:** APBEAMLighting
- **Model Name:** 9137
- **Product Dimensions (Blades Extended):** 36"D x 36"W x 17"H (with 5" downrod)
- **Product Dimensions (Blades Retracted):** 16" Diameter
- **Total Height (with 5" downrod):** 17" (From ceiling to bottom of fan housing)
- **Canopy Diameter:** 5.9"
- **Item Weight:** 17.96 pounds
- **Color:** Brown
- **Electric Fan Design:** Ceiling Fan
- **Power Source:** AC
- **Style:** Vintage
- **Room Type:** Bedroom, Dining Room, Home Office, Kitchen, Living Room
- **Special Features:** Adjustable Color Temperature, Adjustable Height, Color Changing, Dimmable, Timer
- **Wattage:** 36 watts (LED)
- **Finish Type:** Metal, Polished
- **Number of Blades:** 4 (Retractable)
- **Voltage:** 120 Volts
- **Switch Type:** Remote
- **Control Method:** App, Remote
- **Type of Bulb:** LED

- **Number of Power Levels (Fan Speeds):** 6
- **Installation Type:** Downrod mount
- **Indoor/Outdoor Usage:** Indoor
- **Estimated Yearly Energy Cost:** $10 (Based on 12 cents per kWh and 6.4 hours use per day, Energy Use: 25 Watts, excluding lights)
- **Airflow:** 2,275 Cubic Feet Per Minute
- **Airflow Efficiency:** 91 Cubic Feet Per Minute Per Watt

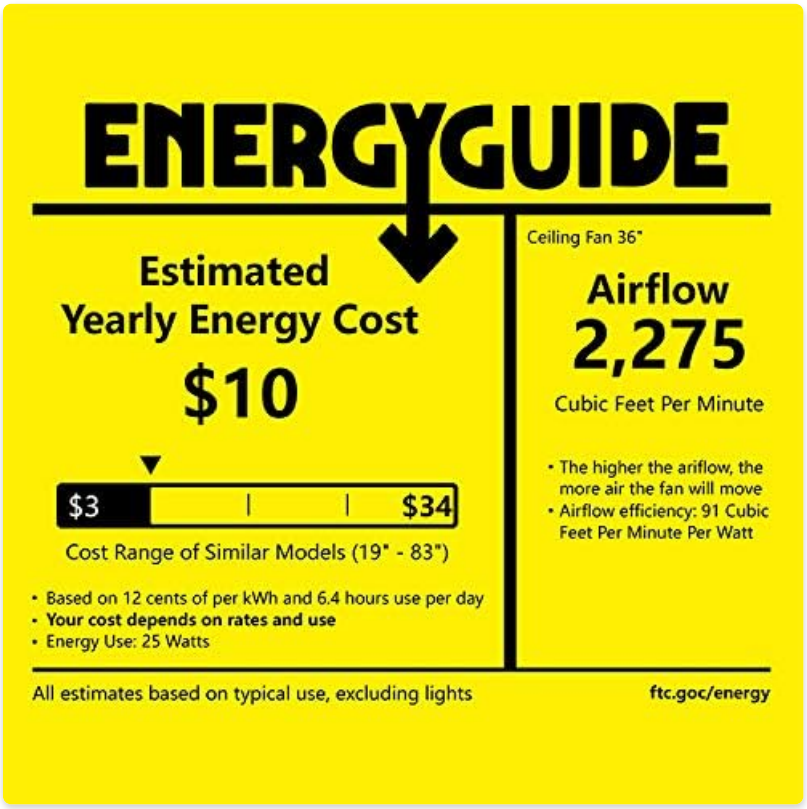

Image 10.1: EnergyGuide information for the 36-inch ceiling fan.

11. Warranty and Support

For warranty information, technical support, or replacement parts, please contact APBEAMLighting customer service. Refer to your purchase documentation for specific contact details or visit the official APBEAMLighting website.

© 2023 APBEAMLighting. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08LB9WY2X

More documents and user manuals: **https://manuals.plus/**