WOPET F09

WOPET Automatic Pet Feeder F09 User Manual

Model: F09

1. INTRODUCTION

The WOPET Automatic Pet Feeder (Model F09) is designed to provide scheduled and portion-controlled meals for your small or medium-sized dog or cat. This device ensures consistent nutrition, promoting healthy eating habits even when you are away. Its features include a transparent food tank, programmable feeding times, voice recording, and a reliable dual power supply system.

Thank you for choosing the WOPET Automatic Pet Feeder. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. PRODUCT OVERVIEW

The WOPET Automatic Pet Feeder F09 offers convenience and peace of mind for pet owners. Key features include:

- **Transparent Food Tank with Moisture-Proof Cover:** Easily monitor food levels. The cover helps maintain food freshness by protecting against moisture.

- **Timed and Portion-Controlled Feeding:** Program up to 6 meals per day, with each meal dispensing 1 to 20 portions (approximately 9g per portion). This ensures accurate feeding amounts and schedules.

- **4L Large Capacity:** The food tank holds approximately 1.8kg of dry pet food, allowing for up to 15 consecutive days of feeding, depending on your pet's consumption. Ideal for busy schedules, short trips, or early mornings.

- **10-Second Voice Recording Function:** Record a personalized message to call your pet to eat. This message will play automatically at each scheduled feeding time.

- **2-Way Power Supply:** Operates via the included AC adapter or 3 D-size alkaline batteries (not included) as a backup. This dual power system prevents feeding interruptions during power outages.

- **Easy to Clean:** The lid, food tank, and stainless steel food tray are removable for convenient cleaning.

Image: The WOPET Automatic Pet Feeder F09, a white unit with a transparent food tank, dispensing dry food into a stainless steel bowl. The digital display shows '5:30'.

3. SETUP INSTRUCTIONS

Follow these steps to set up your WOPET Automatic Pet Feeder:

1. **Unpack and Assemble:** Carefully remove all components from the packaging.

2. **Install Desiccant Bag:** Open the top lid by twisting it counter-clockwise. Locate the desiccant compartment inside the lid and insert the provided desiccant bag to keep food fresh. Close the lid securely.

3. **Attach Food Tank:** Place the transparent food tank onto the main body, ensuring it is properly aligned and secured.

4. **Fill Food Tank:** Open the top lid and pour dry pet food into the transparent tank. Do not overfill. Close the lid securely.

5. **Connect Power:**

   - **AC Power:** Connect the AC adapter to the feeder's power port and plug it into a wall outlet.
   - **Battery Backup (Optional but Recommended):** Open the battery compartment on the bottom of the feeder. Insert 3 D-size alkaline batteries (not included), ensuring correct polarity. Close the compartment. This provides backup power during outages.

6. **Turn On:** Locate the power switch on the bottom of the feeder and switch it to the 'ON' position.

7. **Place Food Bowl:** Place the stainless steel food bowl in front of the feeder's dispensing outlet.

Image: Visual guide for assembling the feeder, showing how to open the lid, insert the desiccant bag, attach the food tank, connect the power cable, and position the food bowl.

4. OPERATING INSTRUCTIONS

The control panel features a digital display and six buttons for programming. Refer to the image below for button layout.

餌量不足アラム

赤色光が頻繁点滅するとタンク
の食料足りないとヒントされます

Image: Detailed view of the feeder's control panel, showing the digital clock and meal indicators (1-6) along with the programming buttons.

4.1. Setting Current Time

1. Press and hold the **SET** button (gear icon) until the hour digit flashes.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **SET** again to move to the minute digit, then adjust with **UP** and **DOWN**.
4. Press **OK** to save the time.

4.2. Programming Automatic Meals

You can program up to 6 meals per day.

1. Press the **SET** button repeatedly until the desired meal number (e.g., '1' for Meal 1) flashes on the display.
2. **Set Meal Time:** The hour digit will flash. Use **UP** and **DOWN** to set the hour. Press **SET** to move to minutes, then adjust.
3. **Set Portion Size:** After setting the time, the portion number (e.g., 'P-01') will flash. Use **UP** and **DOWN** to select the desired portion size (01-20). Each portion is approximately 9 grams.

4. Press **OK** to save the settings for this meal.

5. Repeat for additional meals (up to 6). To disable a meal, set its portion size to '00'.

4.3. Recording Voice Message

Record a 10-second message to play at each feeding time.

1. Press and hold the **REC** button (microphone icon) until the display shows 'REC'.

2. Speak clearly into the microphone for up to 10 seconds.

3. Release the **REC** button to save the recording.

4. To play back the recording, press the **PLAY** button (speaker icon).

Image: A cat looking towards the feeder, with text indicating the 10-second voice recording feature, which allows owners to call their pets to eat.

4.4. Manual Feeding

To dispense food manually at any time:

1. Press the **MANUAL** button (hand icon).
2. Each press will dispense one portion of food.

5. MAINTENANCE

Regular cleaning ensures hygiene and extends the life of your feeder.

1. **Disassembly:** Turn off the feeder and unplug the AC adapter. Remove the food bowl, then twist and lift the food tank and lid.
2. **Cleaning Removable Parts:** The lid, food tank, and stainless steel food tray can be washed with water and mild detergent. Rinse thoroughly and dry completely before reassembly.
3. **Cleaning Main Body:** The main body is not waterproof. Wipe it clean with a damp cloth. Do not immerse the main body in water or expose it to excessive moisture.
4. **Desiccant Replacement:** Replace the desiccant bag every 1-2 months to maintain food freshness.
5. **Reassembly:** Once all parts are dry, reassemble the feeder in reverse order of disassembly.

Image: The feeder's components, including the lid, food tank, main body, and food tray, separated for cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	No power, food tank empty, food jammed, incorrect settings.	Check power connection/batteries. Refill food tank. Clear any food blockages. Verify meal schedule and portion settings.
Red indicator light flashing.	Low food level in the tank.	Refill the food tank.
Voice recording not playing.	No recording saved, volume too low.	Re-record your message. Ensure the volume is set appropriately (if adjustable).
Settings reset after power loss.	No battery backup installed or batteries are dead.	Install fresh D-size alkaline batteries for backup power.

Problem	Possible Cause	Solution
Inaccurate portion dispensing.	Food kibble size/shape, mechanism obstruction.	Different kibble sizes can affect dispensed weight. Test and adjust portion settings accordingly. Ensure no obstructions in the dispensing mechanism.

7. SPECIFICATIONS

- **Model Number:** F09

- **Product Dimensions:** 32.5 cm (L) x 19.8 cm (W) x 21 cm (H)

- **Food Capacity:** 4 Liters (approx. 1.8 kg of dry food)

- **Target Species:** Small to Medium Dogs and Cats

- **Feeding Schedule:** Up to 6 meals per day

- **Portion Size:** 1-20 portions per meal (approx. 9g per portion)

- **Voice Recording:** 10 seconds

- **Power Supply:** AC Adapter (included) or 3 x D-size alkaline batteries (not included)

- **Color:** White

- **Special Uses:** Care, Nursing, Overeating prevention, Food allergy management, General feeding
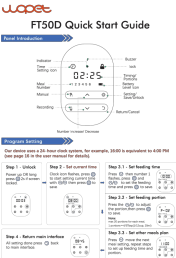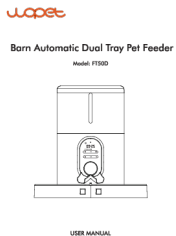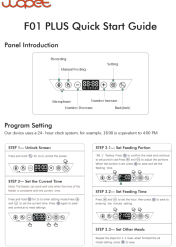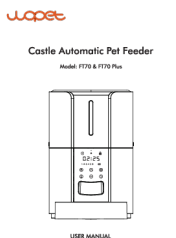
8. WARRANTY AND SUPPORT

Your WOPET Automatic Pet Feeder F09 comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

If you encounter any issues or have questions regarding your product, please do not hesitate to contact WOPET customer support. For assistance, please refer to the contact information provided with your purchase or visit the official WOPET website.

Please retain your proof of purchase for warranty claims.

Related Documents - F09

[WOPET FT50D Quick Start Guide - Easy Pet Feeding](#)

Get started with your WOPET FT50D automatic pet feeder. This guide provides step-by-step instructions for setup, programming feeding times and portions, and troubleshooting common issues for your pet's mealtime.

[WOPET Barn Automatic Dual Tray Pet Feeder FT50D User Manual](#)

Comprehensive user manual for the WOPET Barn Automatic Dual Tray Pet Feeder (Model FT50D), covering hardware installation, panel introduction, setting guidelines, troubleshooting, FCC warnings, and warranty information.

[WOPET F01 PLUS Automatic Pet Feeder Quick Start Guide](#)

Concise guide to setting up and using the WOPET F01 PLUS automatic pet feeder, covering panel introduction, programming settings, and frequently asked questions for easy operation.

[WOPET Castle Automatic Pet Feeder User Manual (FT70/FT70 Plus)](#)

Comprehensive user manual for the WOPET Castle Automatic Pet Feeder (Models FT70 and FT70 Plus), covering assembly, setup, operation, panel introduction, button functions, setting guidelines, FAQs, FCC warnings, and warranty information.

[WOpet Castle WiFi Automatic Pet Feeder User Manual](#)

User manual for the WOpet Castle WiFi Automatic Pet Feeder (Models FW70 & FW70 Plus), detailing product specifications, assembly, app usage, Wi-Fi/Bluetooth/AP modes, feeding settings, device removal, FAQs, FCC warnings, and warranty information.

[WOpet Sprite Automatic Feeder Instructions and Guide](#)

Comprehensive instructions for setting up, using, and maintaining the WOpet Sprite Automatic Feeder. Learn about programming feeding schedules, portion control, voice recording, cleaning, and troubleshooting.
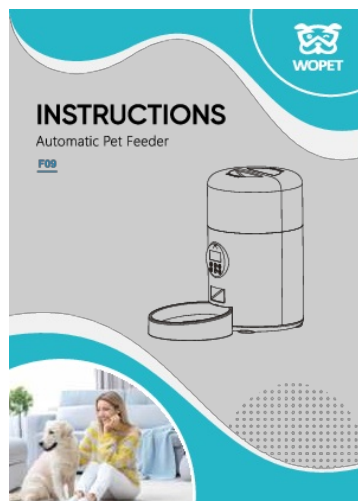
[pdf] User Manual

DOWNLOAD WOpet Products User Manual Download F09 1 wopet 2022 01 |||

...

lang: score:22 filesize: 2.43 M page_count: 24 document date: 2021-11-17