Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TRESKO THSL-004

TRESKO 2000W Infrared Patio Heater Instruction Manual

Model: THSL-004

Introduction

Thank you for choosing the TRESKO 2000W Infrared Patio Heater, model THSL-004. This electric radiant heater is designed for efficient and comfortable warmth in both indoor and outdoor environments. Featuring Instant-Heat technology, three power levels, and an adjustable height, this unit provides versatile heating solutions. Please read this manual thoroughly before assembly, operation, or maintenance to ensure safe and optimal use of your heater.

Important Safety Instructions

Failure to follow these safety instructions may result in fire, electric shock, or injury. Keep this manual for future reference.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles or knobs when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors in heavy rain or extreme weather conditions. The heater has an IP34 rating, indicating resistance to splashing water, making it suitable for outdoor use in sheltered areas.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is equipped with an anti-tip device for enhanced safety. If the heater is accidentally knocked over, it will automatically shut off.

Package Contents

Please check the package contents upon opening to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Heater Head Unit with Quartz Tubes and Protective Grille
- Adjustable Telescopic Pole
- Heavy-Duty Round Base Plate
- Mounting Hardware (screws, washers, etc.)
- Protective Cover
- Instruction Manual

Assembly and Setup

Follow these steps to assemble your TRESKO Infrared Patio Heater:

1. **Attach the Base Plate:** Secure the telescopic pole to the heavy-duty round base plate using the provided screws and tools. Ensure it is firmly attached for stability.
2. **Mount the Heater Head:** Attach the heater head unit to the top of the telescopic pole. Ensure all connections are tight and secure.
3. **Adjust Height:** Loosen the height adjustment knob on the telescopic pole. Extend the pole to your desired height (between 130 cm and 210 cm) and tighten the knob securely.
4. **Adjust Tilt Angle:** The heater head can be tilted up to 45 degrees. Adjust the angle to direct heat as needed. Ensure the tilt mechanism is locked in place after adjustment.
5. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 1 meter (3 feet) clearance from any combustible materials.
6. **Power Connection:** Plug the heater directly into a suitable 220V wall outlet. Do not use extension cords or power strips.



Image Description: This image illustrates key assembly and safety features. It shows a close-up of the robust round base, highlighting its stability. Another detail shows the height adjustment clamp on the telescopic pole, allowing users to set the heater's height between 130 cm and 210 cm. A third inset depicts the anti-tip switch, which automatically shuts off the heater if it is accidentally knocked over, enhancing safety.

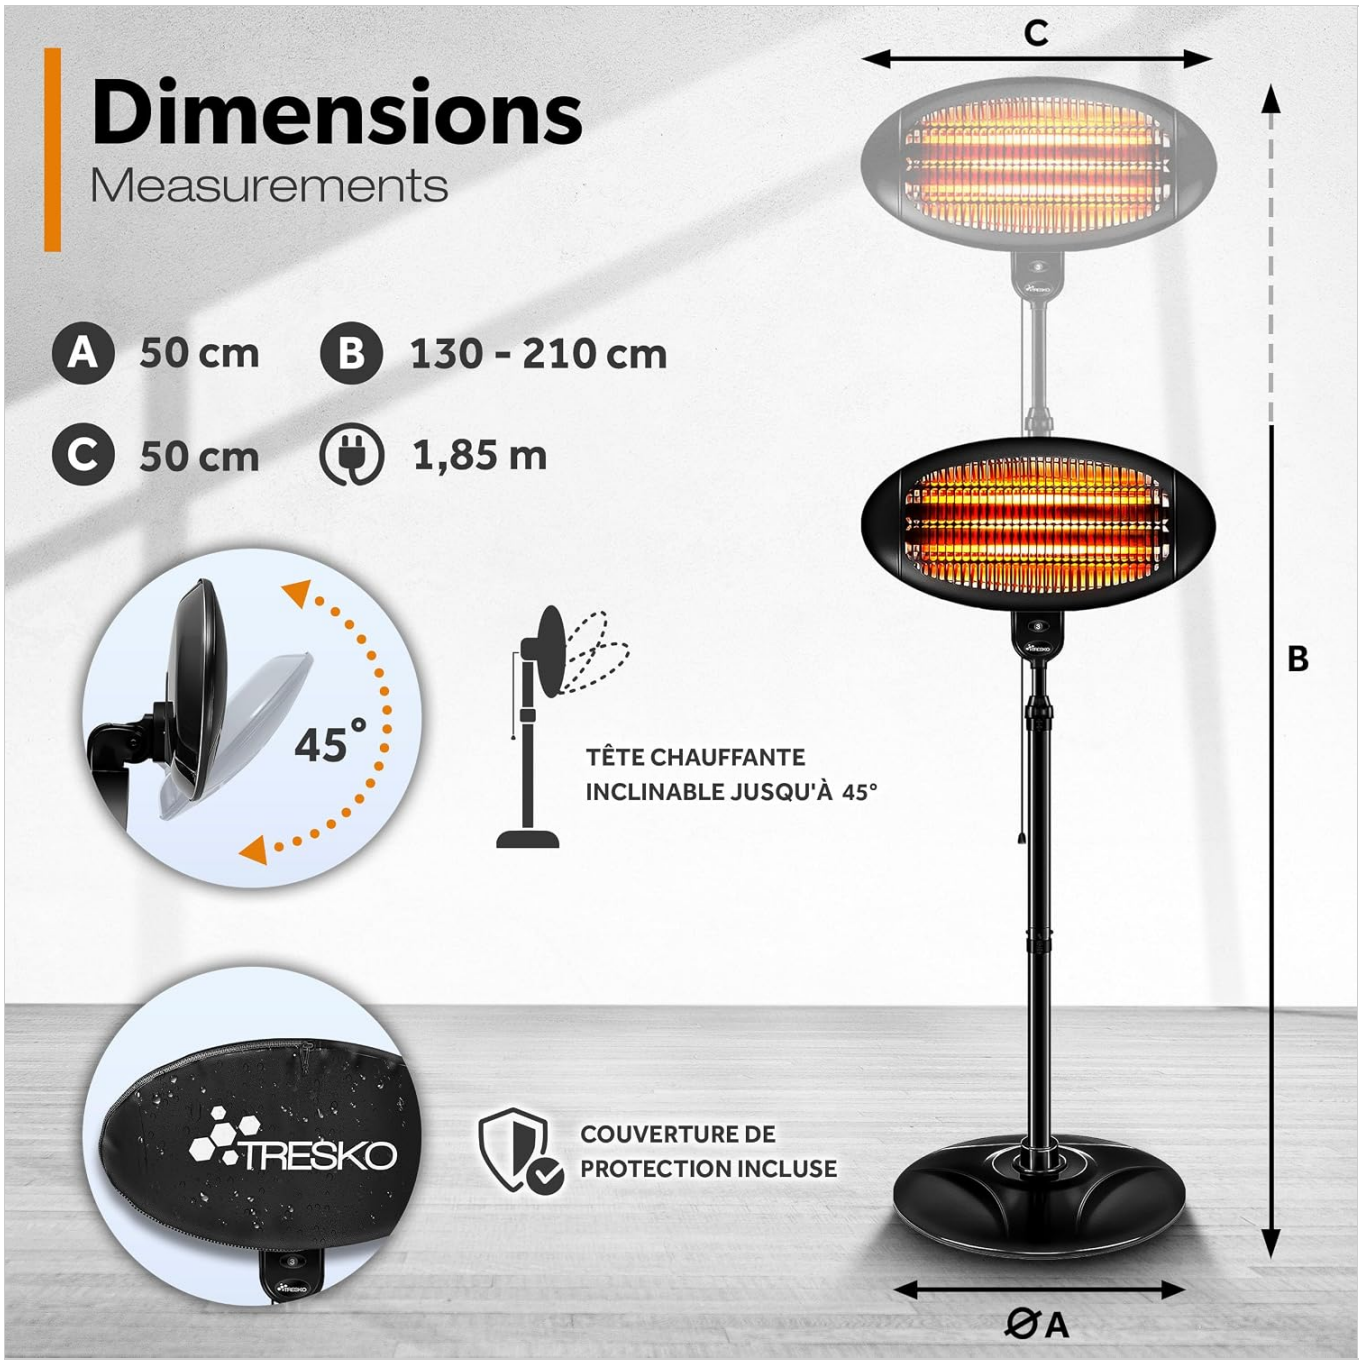


Image Description: This diagram provides detailed measurements of the TRESKO infrared heater. It indicates a base diameter (A) of 50 cm, an adjustable height (B) ranging from 130 cm to 210 cm, and a heater head width (C) of 50 cm. The diagram also visually explains that the heating head can be tilted up to 45 degrees, offering flexible heat direction. A protective cover is also shown as an included accessory.

Operation

The TRESKO Infrared Patio Heater is designed for simple operation with three distinct heat levels.

1. **Power On:** Once plugged into a suitable power outlet, pull the switch cord located on the heater head unit to turn the heater on.
2. **Select Heat Level:**
    - **Pull 1:** Activates Level 1 (650W - Low heat)
    - **Pull 2:** Activates Level 2 (1350W - Medium heat)
    - **Pull 3:** Activates Level 3 (2000W - Maximum heat)
3. **Power Off:** Pull the switch cord a fourth time to turn the heater off (Level 0). Always unplug the heater from the

power outlet when not in use.

4. **Adjusting Heat Direction:** The heater head can be manually tilted up to 45 degrees to direct the radiant heat precisely where it is needed.



Image Description: This image highlights the modern design of the TRESKO infrared heater and its operational controls. It shows the heater's sleek appearance and details the pull-cord switch used to cycle through the three heat levels: Level 0 (Off), Level 1 (650W - Low), Level 2 (1300W - Medium), and Level 3 (2000W - Maximum). The image also emphasizes the rapid heating capability of the unit.

Maintenance

Regular maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals. Do not immerse the heater in water.
- **Storage:** When not in use, especially during off-season, store the heater in a cool, dry place. Use the provided protective cover to shield it from dust and moisture.

- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. If damage is found, do not use the heater and contact customer support.

Troubleshooting

If you encounter issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	◦ Not plugged in securely. ◦ Power outlet malfunction. ◦ Anti-tip switch activated. ◦ Damaged power cord/plug.	◦ Ensure the plug is fully inserted into a working outlet. ◦ Test the outlet with another appliance. ◦ Ensure the heater is upright and on a stable surface. ◦ Do not use; contact customer support.
Heater turns off unexpectedly.	◦ Overheating protection activated. ◦ Heater tipped over (anti-tip switch).	◦ Unplug, allow to cool for 30 minutes, then restart. Ensure proper ventilation. ◦ Ensure the heater is upright and on a stable surface.
Insufficient heat output.	◦ Incorrect heat level selected. ◦ Heater too far from target area.	◦ Select a higher heat level (Level 2 or 3). ◦ Reposition the heater closer to the desired heating area, maintaining safety clearances.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Brand	TRESKO
Model Number	THSL-004
Color	Black
Power Output	2000 Watts (Max)
Voltage	220 Volts
Heat Levels	3 (650W, 1350W, 2000W)
Heating Method	Radiant (Quartz Tubes)
Product Dimensions (Max)	210 cm (Height) x 50 cm (Base Diameter) x 50 cm (Heater Head Width)
Adjustable Height	130 cm to 210 cm
Heater Head Tilt Angle	Up to 45 degrees
Item Weight	5 Kilograms

IP Rating	IP34 (Splash-proof)
Safety Features	Anti-tip switch, Overheating protection
Power Source	Electric Cable
Recommended Use	Indoor and Outdoor (sheltered areas)



Image Description: This image demonstrates the weather-resistant capabilities of the TRESKO infrared heater. It shows the heater operating outdoors under light rain, emphasizing its IP34 rating which signifies protection against splashing water. The image also visually reinforces the radiant heating method and the three available power levels (650W, 1300W, 2000W) suitable for both indoor and outdoor use.

Warranty and Support

The TRESKO 2000W Infrared Patio Heater is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. Spare parts availability is stated as 2 years from the date of purchase.

For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.

Video Resources

No official product videos from the seller are available for embedding at this time.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09NGGG2ZH

More documents and user manuals: **https://manuals.plus/**