Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Sunrosa 51-55" W x 76" H Sliding Shower Door

Sunrosa Frameless Sliding Shower Door User Manual

Model: 51-55" W x 76" H Sliding Shower Door with Handle, Brushed Gold

Brand: Sunrosa

Product Overview

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Sunrosa Frameless Sliding Shower Door. Designed for modern bathrooms, this door features durable tempered glass and high-quality stainless steel components, ensuring both aesthetic appeal and long-lasting functionality. Please read all instructions carefully before beginning installation to ensure proper setup and safe operation.



Image: The Sunrosa Frameless Sliding Shower Door in a bathroom setting, showcasing its brushed gold hardware and clear glass panels.

Safety Information

Your safety is paramount. Adhere to the following guidelines during installation and use:

- **Two-Person Installation:** It is highly recommended that at least two people install this product due to the weight and size of the glass panels.
- **Personal Protective Equipment:** Always wear gloves and safety goggles during installation to protect against cuts and eye injuries.
- **Glass Handling:** Tempered glass is strong but can shatter if impacted at the edges. Handle with extreme care.
- **Drilling Safety:** Ensure no electrical wires or plumbing are behind drilling locations. Use appropriate drill bits for your wall material.
- **Secure Installation:** Verify all components are securely fastened before using the shower door.

- **Adhesive Curing Time:** Allow all sealants and adhesives to cure completely (typically 24 hours) before using the shower to ensure a watertight seal.

Tools Required

The following tools are necessary for installation:

- Screwdriver
- Level
- Pencil
- Tape Measure
- Razor Knife
- Hacksaw
- Soft Head Hammer
- Silicone Sealant
- Allen Key (various sizes, typically 2.5mm and 5mm)
- Laser Level (recommended for precision)
- Power Drill
- Drill Bit Ø1/4" (6mm)
- Drill Bit Ø3/8" (10mm)

Important Note: Some users have reported discrepancies with drill bit sizes in previous versions of instructions. Always verify the required drill bit size against the actual hardware provided before drilling to ensure a proper fit.

Installation Guide

Follow these steps carefully for a successful installation. Refer to the accompanying video for visual guidance.

▶ **Watch video online**
Installation Video Of Shower Door

Video: Official Installation Video for Sunrosa Sliding Shower Doors. This video provides a step-by-step visual guide to the installation process.

1. **Prepare Wall for Mounting:** Place the installation height template (part 08) at 15.5mm (0.6102 inches) from the edge of the shower opening. Mark the positions for drilling.
2. **Drill and Insert Wall Plugs:** Punch the marked positions with a 10mm (3/8") drill bit. Insert the wall plugs into the drilled holes. Repeat this process for the opposite wall.
3. **Install Bottom Track:** Align the bottom track components (parts 17A, 17B, and 02) at 10mm (3/8") from the edge of the shower base. Mark their positions. Drill with a 6mm (1/4") drill bit. Secure the wall plug (17E) and tighten the screws (ST4x25) and nuts (17C). Peel off the protective film from the bottom of part 02 and firmly press it onto the floor.
4. **Cut Top Railing Pipe:** Measure the wall spacing width (L). The final length of the top railing pipe should be L - 30mm (1.18 inches). Cut the side without part 13. Remove any burrs after cutting.
5. **Assemble Top Rail:** Install part 13 into the top rail (part 01). Install the wall bracket (part 12) on both sides. Secure the

top rail (01) to the wall brackets using part 19. Ensure the top rail is perfectly horizontal using a level. Tighten all connections with the provided Allen key (part 19).

6. **Install Shower Door Strip:** Install the shower door strip (part 05) on the side of the glass panel (part 10). The soft edge at the strip bottom should be open by 20.5mm (0.807 inches).
7. **Place Glass Panel:** Carefully place the glass panel (part 10). When the glass panel is balanced, ensure the gaskets (part 15) are placed at three positions for stability. If the glass door is unbalanced, stack additional gaskets (part 15) to correct the imbalance.
8. **Install Rollers and Handle:** Install the handle (part 11) on the inside of the door panel (part 09). Insert the door strips (parts 06 and 07) into the bottom and side of the door panel (part 09). Install the roller (part 14) onto the glass panel (part 09) using the 5mm Allen key (part 20). Install another roller on the door panel and tighten using the Allen key. Hang the door panel onto the top rail.
9. **Adjust Door Perpendicularity:** Verify that the door panels (09 and 10) are perpendicular to the floor. If not, adjust the rollers using the 2.5mm Allen key (part 18) and 5mm Allen key (part 20) to make them perpendicular. Continue to install any remaining rollers.
10. **Final Sealing:** Cut the bottom strip (part 03) to the appropriate length to fit the top rail and rollers. Install it on the side of the glass panel. Apply glass glue (silicone sealant) to the dotted area along the bottom track. The sealed area must remain completely dry for 24 hours. Do not use the shower door during this curing time.

Shower Door Dimension

Min/Max Width


A:51 1/8"-55"(1297-1397mm)


Height

B:76"(1930mm)
C:72"(1828mm)

Opening Width

D:19 1/8"-23"(485-585mm)

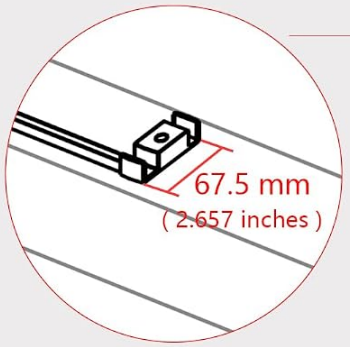

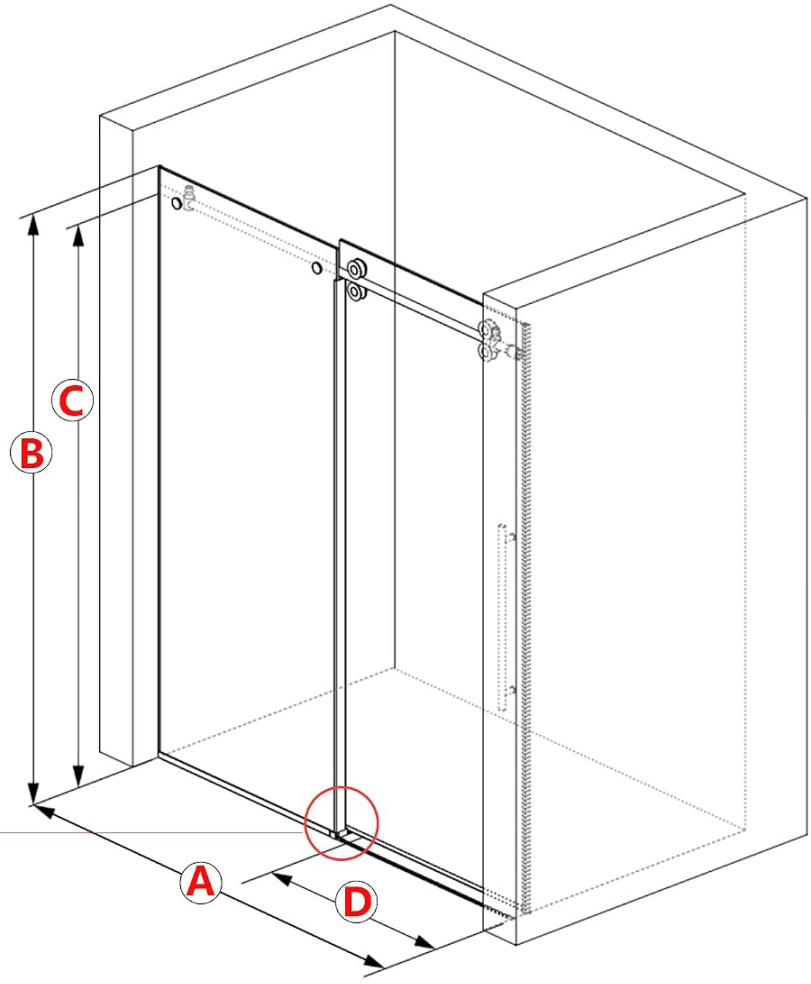

Note: C indicates the height fromthe bottom of the top track to the floor.

Image: Shower Door Dimension diagram, illustrating key measurements for installation.

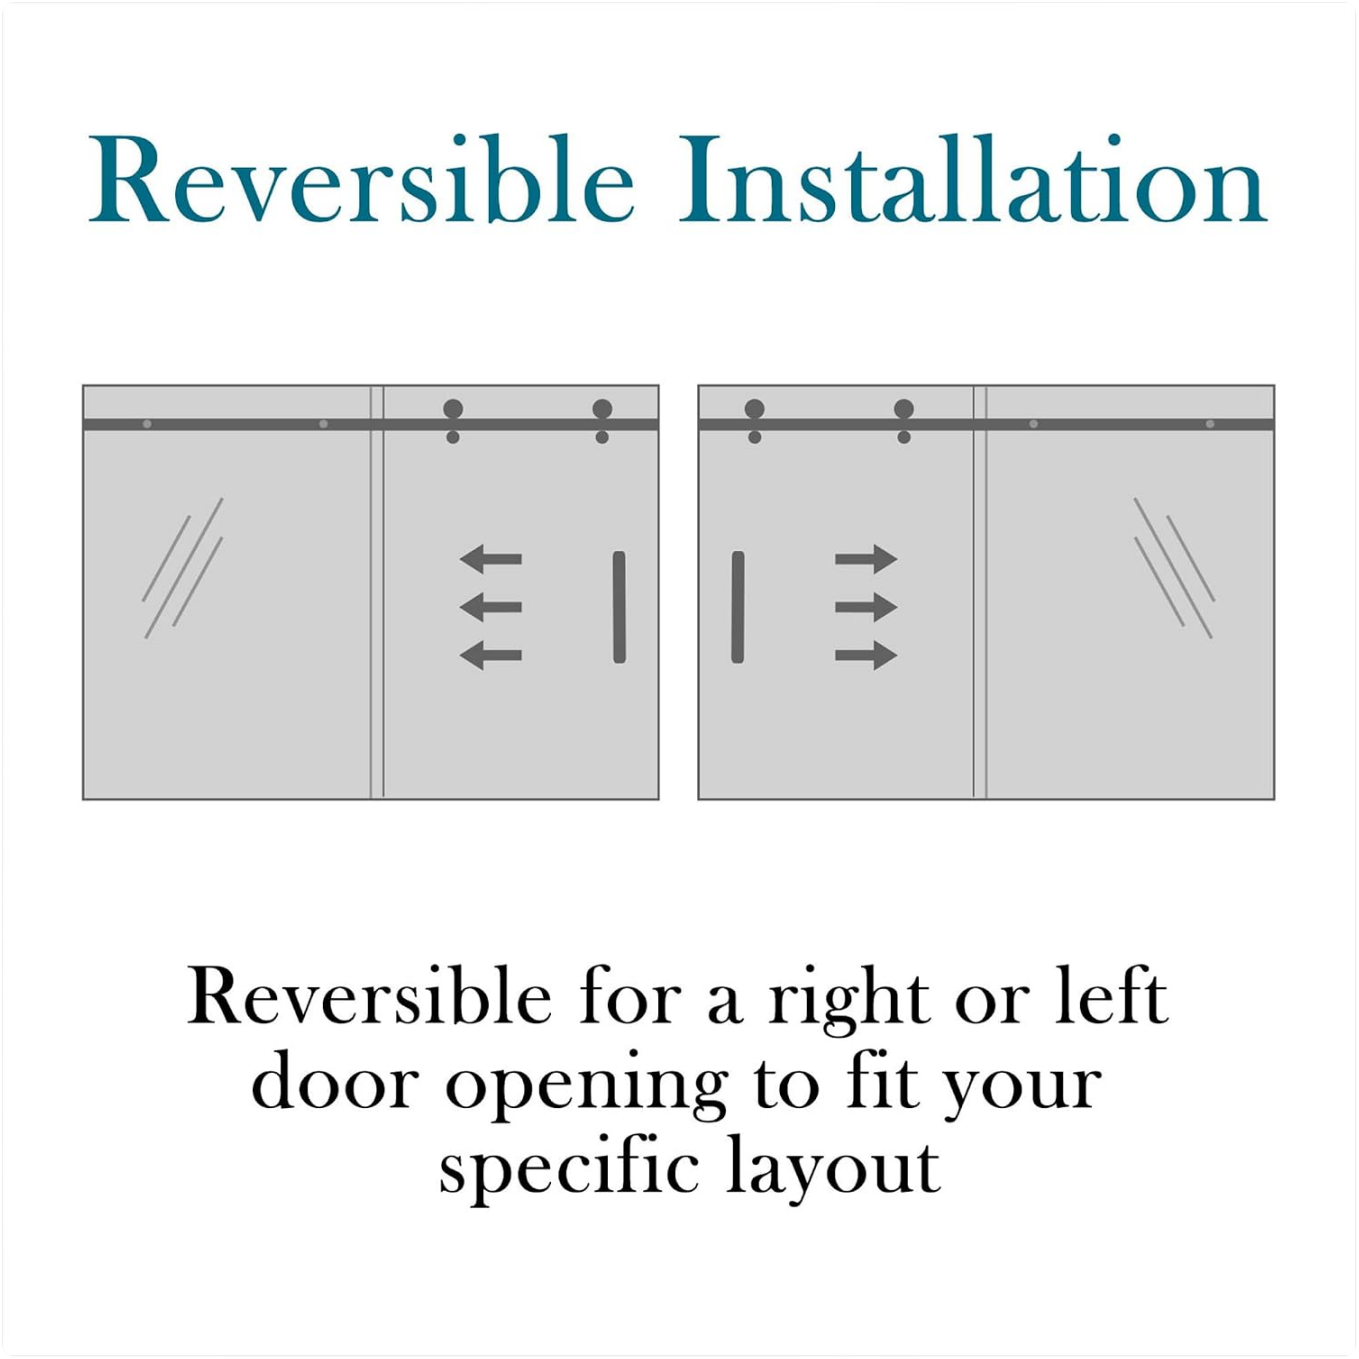


Image: Reversible Installation diagram, demonstrating how the door can be configured for left or right opening.

Operating Instructions

Once installed, your Sunrosa Frameless Sliding Shower Door operates smoothly. To open or close the door, gently slide the glass panel along the top rail using the handle. Avoid forcing the door or applying excessive pressure, as this can damage the rollers or track.

Maintenance

Regular cleaning and maintenance will ensure the longevity and pristine appearance of your shower door:

- **Glass Cleaning:** The 5/16" (8mm) clear tempered glass features a generous nano-coating for easy cleaning and stain

resistance. Use a soft cloth or sponge with mild, non-abrasive glass cleaner. Avoid harsh chemicals or abrasive pads that could damage the coating or glass surface.

- **Hardware Cleaning:** Clean the brushed gold stainless steel frame and handle with a soft, damp cloth. Dry immediately to prevent water spots. Do not use abrasive cleaners or scouring pads.
- **Seal Strip Inspection:** Periodically check the full-length glass seal strip for any signs of wear or damage. A properly maintained seal strip is crucial for effective water containment and keeping your bathroom floor dry. Replace if necessary.
- **Roller and Track Maintenance:** Keep the top rail and bottom track free of soap scum, hair, and debris to ensure smooth sliding operation. Clean regularly with a damp cloth.



Image: Illustration of the generous nano-coating on the glass, highlighting its stain resistance and easy cleaning properties.



Image: Detail of the 5/16" (8mm) clear tempered glass and the water containment strip, ensuring a dry bathroom floor.

Troubleshooting

If you encounter any issues with your Sunrosa shower door, please refer to the following common problems and solutions:

- **Door Not Sliding Smoothly:** Check the top rail and bottom track for any debris or obstructions. Clean thoroughly. Ensure rollers are properly aligned and tightened.
- **Water Leaks:** Verify that the full-length glass seal strip is correctly installed and free from damage. Ensure all silicone sealant applied during installation has fully cured (24 hours). Reapply silicone if necessary, ensuring a continuous bead.
- **Glass Panel Appears Unbalanced:** Refer to the installation steps regarding gaskets (part 15). Adjust or stack gaskets as needed to ensure the glass panel is level and balanced.
- **Missing or Damaged Parts:** If you received a product with missing or damaged parts, please contact customer support immediately.

- **Faulty Installation Instructions:** If you believe you have received an outdated version of the manual or encounter difficulties with specific steps, contact customer support for the latest electronic version of the installation instructions and further assistance.

Specifications

Feature	Detail
Brand	Sunrosa
Dimensions	51 1/8"-55" W x 76" H (1297-1397 mm W x 1930 mm H)
Walk-in Opening	19 1/8"-23" (485-585mm)
Glass Thickness	5/16" (8mm) SGCC Certified Tempered Glass
Glass Type	Clear, Frameless with Nano Coating
Frame & Handle Material	High-Quality Stainless Steel
Color	Brushed Gold
Item Weight	149.7 pounds (68.04 Kilograms)
Assembly Required	Yes
Style	Modern
UPC	616050967493

Warranty and Customer Support

Sunrosa is committed to providing high-quality products and excellent customer service. For any questions, concerns, or issues with your product, please contact our customer support team.

How to Contact Support:

1. **Navigate to "Your Orders":** Log in to your Amazon account and go to your order history.
2. **Click "Problem with order":** Locate your Sunrosa shower door order and select the option to report a problem.
3. **Select "Contact seller":** Choose to contact the seller directly.
4. **Describe the Issue in Detail:** Attach images showing the product issue in the message chat and provide a detailed description of the problem you are experiencing.

Our team will review your submission and provide a solution, which may include complimentary replacement of damaged or missing parts, or other appropriate resolutions.



Image: Customer Support process for resolving product issues.

© 2024 Sunrosa. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BRF5ZJRH

More documents and user manuals: **https://manuals.plus/**