Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Xbeauty YH-20-3D

Xbeauty Indoor 15" Electric Fireplace Stove User Manual

Brand: Xbeauty

Model: YH-20-3D

1. Introduction and Overview

Thank you for choosing the Xbeauty Indoor 15" Electric Fireplace Stove. This freestanding electric fireplace heater is designed to provide a warm and inviting ambiance with its realistic 3D flame effect, while offering efficient heating for small spaces like bedrooms or living rooms. It features adjustable heat settings (1000W/1500W) and advanced safety technology, including overheating protection, to ensure a comfortable and secure environment.



Figure 1: The Xbeauty Indoor 15" Electric Fireplace Stove, showcasing its compact design and the warm air output from the base.

2. Important Safety Information

Please read all safety instructions carefully before operating this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always plug the heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- **Overheating Protection:** This fireplace is equipped with an automatic overheating protection device. If the heater overheats, it will automatically shut off. Unplug the unit, wait 10 minutes for it to cool down, and then plug it back in.



Figure 2: The electric fireplace operating quietly in a room, emphasizing its safety features like overheat protection.

3. Package Contents

Please check the package contents carefully to ensure all items are present and undamaged.

- Xbeauty Indoor 15" Electric Fireplace Stove Unit
- Legs (4 pcs)
- Screws for leg attachment
- User Manual (this document)

4. Product Features

The Xbeauty Electric Fireplace Stove offers a range of features designed for comfort and convenience:

- **Vivid Flame Ambiance:** Realistic 3D flame effect that can be used independently of the heating function.
- **Portable Luxury:** Freestanding design with compact dimensions for easy placement and mobility.
- **Advanced Safety Technology:** Built-in overheating protection for enhanced safety.
- **Easy-to-Use Interface:** Intuitive controls for adjusting flame and heat settings.
- **Clean and Safe Heating:** An alternative to traditional heating methods without smoke or fire risks.
- **3-Sided Panoramic View:** Transparent glass on three sides provides a realistic flame view from multiple angles.



Figure 3: Highlighting the realistic flame lighting and integrated overheat protection of the fireplace.



Figure 4: Illustrating the panoramic 3-sided view design of the electric fireplace, allowing visibility from various angles.

5. Setup and Installation

The Xbeauty Electric Fireplace Stove requires minimal assembly.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Attaching Legs:** Turn the main fireplace unit upside down on a soft, non-abrasive surface. Align each leg with the designated screw holes on the bottom of the unit. Secure each leg using the provided screws.
3. **Placement:** Place the assembled fireplace on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from any combustible materials (curtains, furniture, bedding, etc.). Do not place it directly under a permanent wall-mounted electrical outlet.
4. **Power Connection:** Plug the power cord directly into a 120V AC, 60Hz grounded wall outlet. Do not use extension cords or power strips.



Figure 5: The electric fireplace positioned in a living room, demonstrating suitable placement within a home environment.

6. Operating Instructions

The control panel for the Xbeauty Electric Fireplace Stove is located at the bottom front of the unit, behind a small pull-down door.

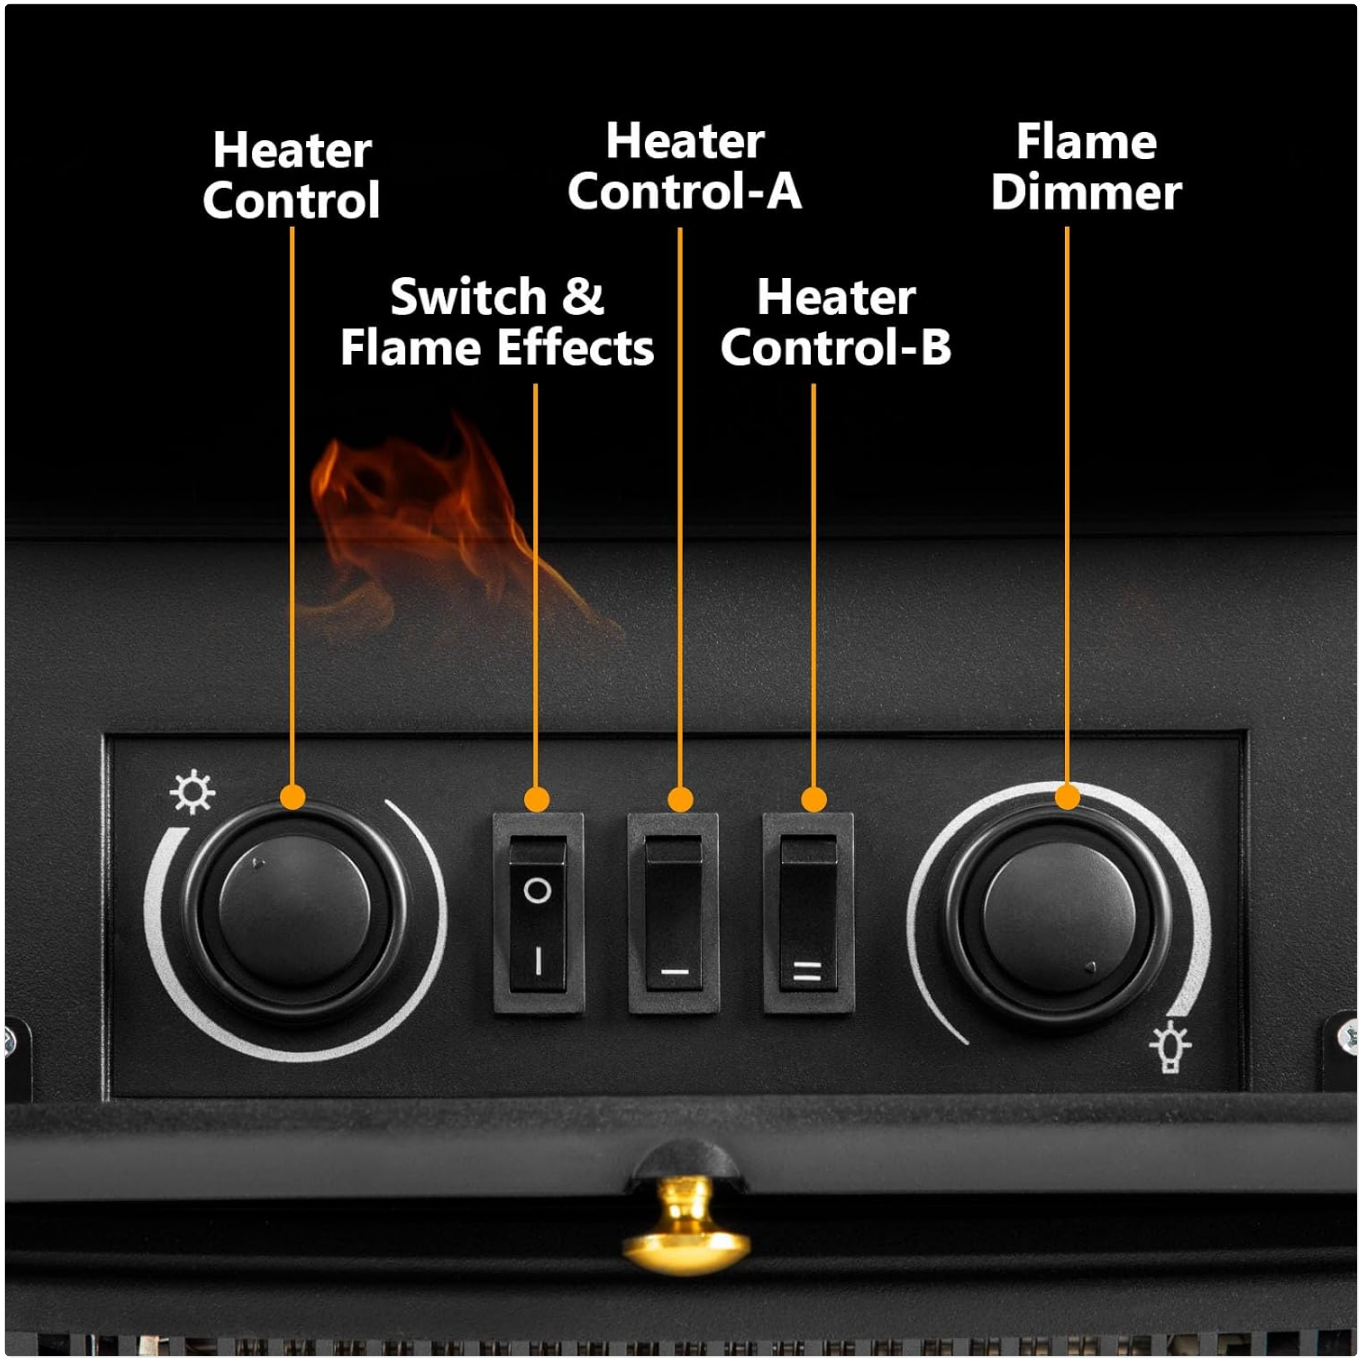


Figure 6: Detailed view of the control panel, indicating the functions of each knob and switch.

1. **Power On/Off:** Locate the main power switch (often labeled 'I' for On and 'O' for Off). Flip it to 'I' to power on the unit.
2. **Flame Effect Only:** To enjoy the flame effect without heat, ensure both Heater Control switches are in the 'Off' position. The flame effect will activate automatically when the unit is powered on.
3. **Adjusting Flame Brightness:** Use the 'Flame Dimmer' knob (usually on the right) to adjust the intensity of the flame effect. Turn clockwise for brighter flames, counter-clockwise for dimmer.
4. **Low Heat Setting (1000W):** Flip the 'Heater Control-A' switch to the 'On' position. The unit will begin to emit low heat.
5. **High Heat Setting (1500W):** Flip both 'Heater Control-A' and 'Heater Control-B' switches to the 'On' position. The unit will operate at its maximum heat output.
6. **Adjusting Temperature (Thermostat):** Use the 'Heater Control' knob (usually on the left) to set your desired room temperature. The heater will cycle on and off to maintain this temperature.
7. **Power Off:** To turn off the unit completely, flip all switches to the 'Off' position and then the main power switch to 'O'.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Always unplug the unit from the power outlet before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays. For the glass panel, use a soft cloth and a glass cleaner.
- **Ventilation:** Ensure the air intake and exhaust vents are clear of dust and debris. Use a vacuum cleaner with a brush attachment to gently clean these areas periodically.
- **Storage:** If storing the unit for an extended period, unplug it and allow it to cool completely. Store in a dry, cool location, preferably in its original packaging to protect it from dust and damage.

8. Troubleshooting

If you experience issues with your Xbeauty Electric Fireplace Stove, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	No power to the unit; Main power switch is off; Overheating protection activated.	Check if the unit is properly plugged into a working outlet. Ensure the main power switch is ON. Unplug the unit, wait 10 minutes, and plug back in.
No heat output.	Heater control switches are off; Thermostat set too low.	Ensure 'Heater Control-A' or both 'Heater Control-A' and 'Heater Control-B' switches are ON. Adjust the 'Heater Control' knob to a higher temperature setting.
Flame effect not working.	Flame effect switch is off; LED lights malfunction.	Ensure the main power switch is ON. If the issue persists, contact customer support.
Unit is noisy.	Normal fan operation; Obstruction in fan/vent.	Some fan noise is normal during heating operation. Check for any obstructions in the air vents and clean if necessary.

9. Specifications

Detailed technical specifications for your Xbeauty Electric Fireplace Stove:

Specification	Detail
Brand	Xbeauty
Model Name	YH-20-3D
Power Source	Corded Electric
Product Dimensions	22.24"D x 15.35"W x 9.45"H

Specification	Detail
Material	Glass
Finish Type	Powder Coated
Installation Type	Freestanding
Heat Output	5100 British Thermal Units
Special Feature	Flame Effect
Style	Classic
Room Type	Living Room
Ventilation Type	Vent Free
Heating Coverage	Under 500 sq ft
Included Components	Remote Control
Shape	Rectangular
Warranty Type	Limited
Chamber Depth	22.4 Centimeters
Burner type	Quartz
Maximum Compatible Size	15.35 Inches
Item Weight	15.92 pounds

10. Warranty and Support

The Xbeauty Indoor 15" Electric Fireplace Stove comes with a**Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions.
For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Xbeauty customer service. Contact information can typically be found on the product packaging or the official Xbeauty website.

© 2023 Xbeauty. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0C9Y93Q3Q

More documents and user manuals: **https://manuals.plus/**