Weehom MANTIZ-TW-PP

Weehom Twin Bed Frame Instruction Manual

Model: MANTIZ-TW-PP

Introduction

Thank you for choosing the Weehom Twin Metal Bed Frame. This manual provides detailed instructions for the assembly, usage, and maintenance of your new bed frame. Designed for durability and convenience, this platform bed features an elegant headboard and footboard, eliminates the need for a box spring, and offers ample under-bed storage. Please read these instructions carefully before beginning assembly to ensure proper setup and safe use.

Image: The Weehom Twin Bed Frame, showcasing its elegant design in a bedroom setting.

Setup and Assembly

Assembly of your Weehom Twin Bed Frame is designed to be straightforward. Please ensure all parts are present before you begin.

Package Contents

- Headboard
- Footboard
- Side Rails
- Support Slats
- Center Support Legs
- Hardware Pack (bolts, washers, nuts, Allen wrench)

Tools Required

- Included Allen Wrench

Assembly Instructions

Estimated assembly time: Approximately 35 minutes. It is recommended to assemble with two people.

Image: Illustration of the unique easy assembly design for the bed frame slats, showing 90-degree rotation for secure fitting.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify all parts listed in the package contents are present.
2. **Attach Headboard and Footboard Legs:** Secure the vertical support legs to the headboard and footboard sections using the provided bolts and Allen wrench. Do not fully tighten bolts yet.
3. **Connect Side Rails:** Attach the side rails to the headboard and footboard using the appropriate bolts. Ensure the connection points are aligned.
4. **Install Center Support Legs:** Fasten the center support legs to the designated points on the middle support beam or slats.
5. **Place Slats:** Position the metal slats across the side rails. For models with a unique assembly design, rotate the slats 90 degrees to lock them into place as shown in the diagram. Ensure all slats are evenly spaced and securely seated.
6. **Final Tightening:** Once all components are in place and aligned, systematically tighten all bolts using the Allen wrench. Ensure all connections are firm and secure.
7. **Attach Anti-slip Footpads:** Verify that the anti-slip and scratch-resistant footpads are securely attached to the bottom of each leg to protect your floors.

Your browser does not support the video tag.

Video: An official product video demonstrating the assembly process and key features of the Weehom Twin Bed Frame.

Usage Guidelines

Mattress Placement

This bed frame is designed to be used without a box spring. Place your twin-sized mattress directly onto the metal slats. Ensure the mattress is centered and fully supported by the frame.

Weight Capacity

The maximum weight capacity for this twin bed frame is **330 pounds**. Exceeding this limit may compromise the structural integrity of the frame and void any warranty.

Under-Bed Storage

The bed frame provides **11.23 inches** of clearance underneath, offering ample space for storage. Utilize storage bins or containers to keep your room organized and clutter-free.

Image: A view of the bed frame highlighting the 11.23 inches of under-bed storage space, suitable for baskets or boxes.

Care and Maintenance

Cleaning

To clean the metal frame, wipe it down with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the powder-coated finish.

Inspection

Periodically inspect all bolts and connections to ensure they remain tight. Re-tighten any loose hardware to maintain the bed frame's stability and prevent squeaking.

Footpad Care

The bed frame is equipped with anti-slip and scratch-resistant footpads. Ensure these remain intact to protect your flooring and provide stability.

Image: A close-up view of the bed frame's leg with an anti-slip and scratch-resistant footpad, designed to protect floors.

Troubleshooting

Problem	Possible Cause	Solution
Bed frame squeaks	Loose bolts or connections.	Inspect all bolts and re-tighten them securely using the Allen wrench. Ensure all parts are properly aligned.
Bed frame feels wobbly or unstable	Incomplete or incorrect assembly; loose connections.	Review assembly instructions to ensure all steps were followed correctly. Tighten all bolts. Verify all support legs are making firm contact with the floor.
Missing parts or damaged components	Shipping error or manufacturing defect.	Do not attempt to assemble with missing or damaged parts. Contact Weehom customer support immediately for assistance.

Product Specifications

Feature	Detail
Size	Twin
Product Dimensions (L x W x H)	78.35" x 37.01" x 37.9"
Material	Metal
Color	Purple
Finish Type	Powder Coated
Under-Bed Clearance	11.23 Inches
Weight Capacity	330 lbs
Assembly Required	Yes
Model Number	MANTIZ-TW-PP

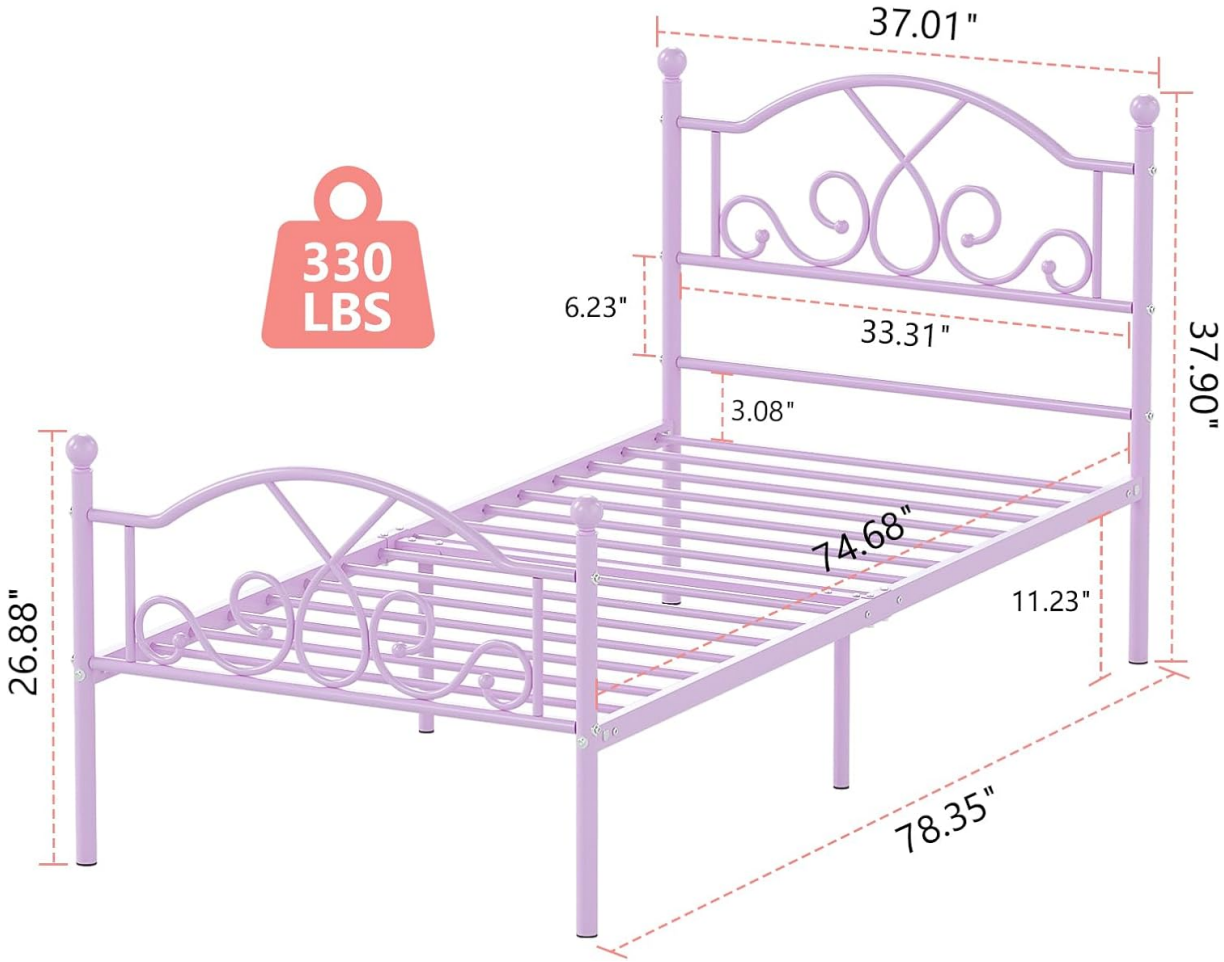

Image: A comprehensive diagram illustrating the dimensions and weight capacity of the Weehom Twin Bed Frame.

Warranty and Customer Support

Warranty Information

This Weehom product comes with a manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions. Keep your proof of purchase for warranty claims.

Contact Support

For any questions, missing parts, or assistance with assembly or troubleshooting, please contact Weehom customer support. You can typically find contact information on the packaging or on the official Weehom website. When contacting support, please have your model number (MANTIZ-TW-PP) and purchase details ready.