ARZOPA A1S

ARZOPA Portable Monitor A1S User Manual

Model: A1S | Brand: ARZOPA

1. Introduction

The ARZOPA Portable Monitor A1S is a 14.0-inch Ultra Slim Portable Laptop Monitor featuring FHD 1080P resolution and dual integrated speakers. Designed for versatility and portability, it serves as an excellent second screen for various devices, enhancing productivity and entertainment on the go. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your ARZOPA A1S portable monitor.

2. Key Features

- **Slim, Light & Portable:** Designed to be thin, slim, and lightweight, this portable monitor is only 0.16 inches thick and weighs 1.1 pounds. Its ultra-portable design makes it perfect for business trips or traveling.
- **FHD 1080P Monitor:** Enjoy a superb viewing experience with the 14.0" Full HD 1920 x 1080 anti-glare IPS display. With a 60Hz resolution, outstanding image quality, and high screen brightness, it delivers stunning visuals.
- **2nd Monitor with 2 Modes:** Enhance your work efficiency by using this portable laptop monitor as a second screen. It offers the flexibility to switch between horizontal and vertical modes, allowing you to choose the perspective that suits you best.
- **Widely Compatible:** Equipped with two fully functional USB Type-C connections and a Mini HDMI port, this monitor is compatible with laptops, PCs, Macs, smartphones, Xbox, PS5, Switch, Steam Deck, and more.
- **Plug and Play Convenience:** No need for apps or drivers. Simply connect the monitor with one USB-C cable for video signal and power. (Full-featured USB port required for phones). The built-in stand allows you to switch between landscape and portrait and adjust the angle of your sight to your liking.

3. Package Contents

Please check the package contents upon unboxing to ensure all items are present and in good condition:

- ARZOPA Portable Monitor A1S (14.0-inch)
- USB-C to USB-C Cable (for video and power)

- Mini HDMI to HDMI Cable (for video)
- USB-A to USB-C Power Cable (for additional power if needed)
- User Manual (this document)

4. Setup Instructions

Follow these steps to set up your ARZOPA portable monitor:

1. **Unpack the Monitor:** Carefully remove the monitor and all accessories from the packaging.
2. **Position the Monitor:** Place the monitor on a stable, flat surface. Utilize the integrated kickstand to adjust the viewing angle for optimal comfort. The kickstand allows for an 80-degree tilt adjustment.



Image: The integrated kickstand provides versatile viewing angles, allowing for up to 80 degrees of tilt.

3. **Connect to a Laptop/PC (USB-C):** If your laptop or PC has a full-featured USB Type-C port (which supports both video and power delivery), connect one end of the provided USB-C to USB-C cable to your device and the other end to one of the USB-C ports on the monitor. The monitor should power on and display the screen automatically.

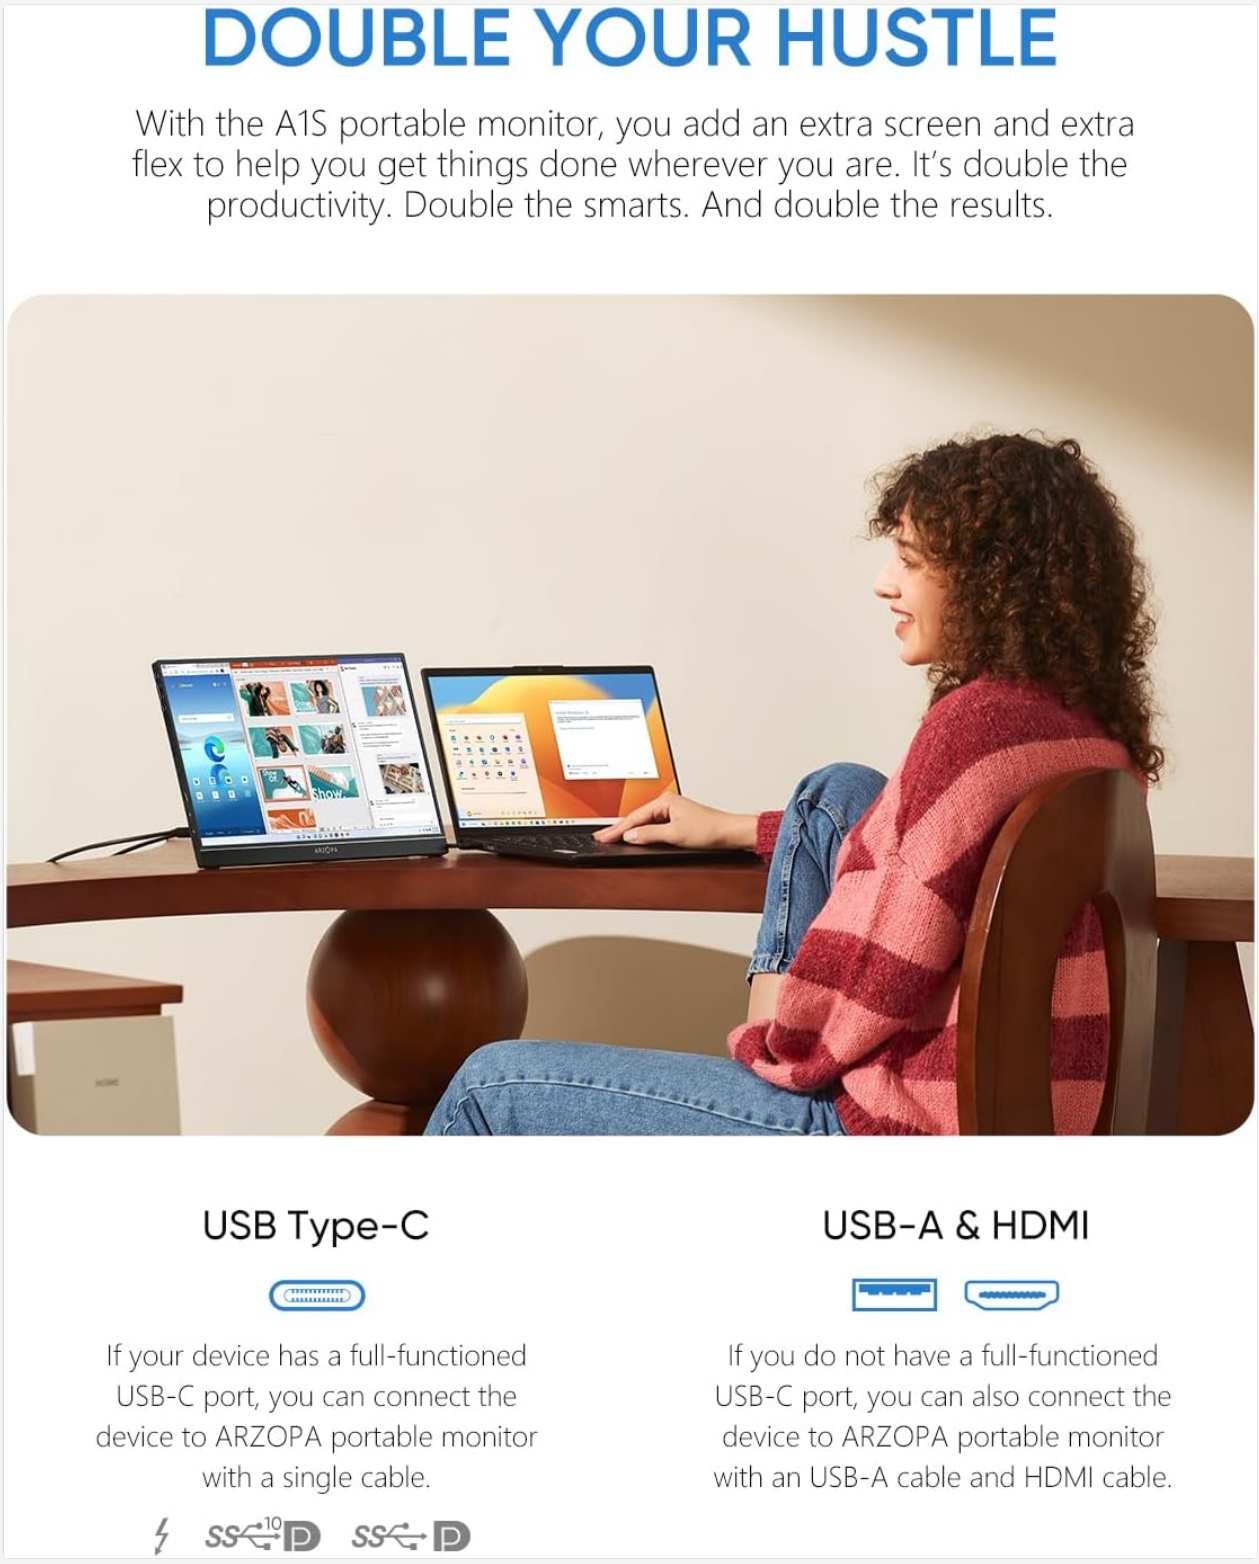

Image: Seamless dual-screen setup with a laptop and the ARZOPA portable monitor connected via a single USB-C cable.

4. **Connect to a Laptop/PC (HDMI & USB-A):** If your device does not have a full-featured USB Type-C port, use the Mini HDMI to HDMI cable for video signal and the USB-A to USB-C power cable for power. Connect the Mini HDMI end to the monitor and the HDMI end to your device. Then, connect the USB-C end of the power cable to the monitor's second USB-C port and the USB-A end to a USB port on your device or a power adapter (not included).

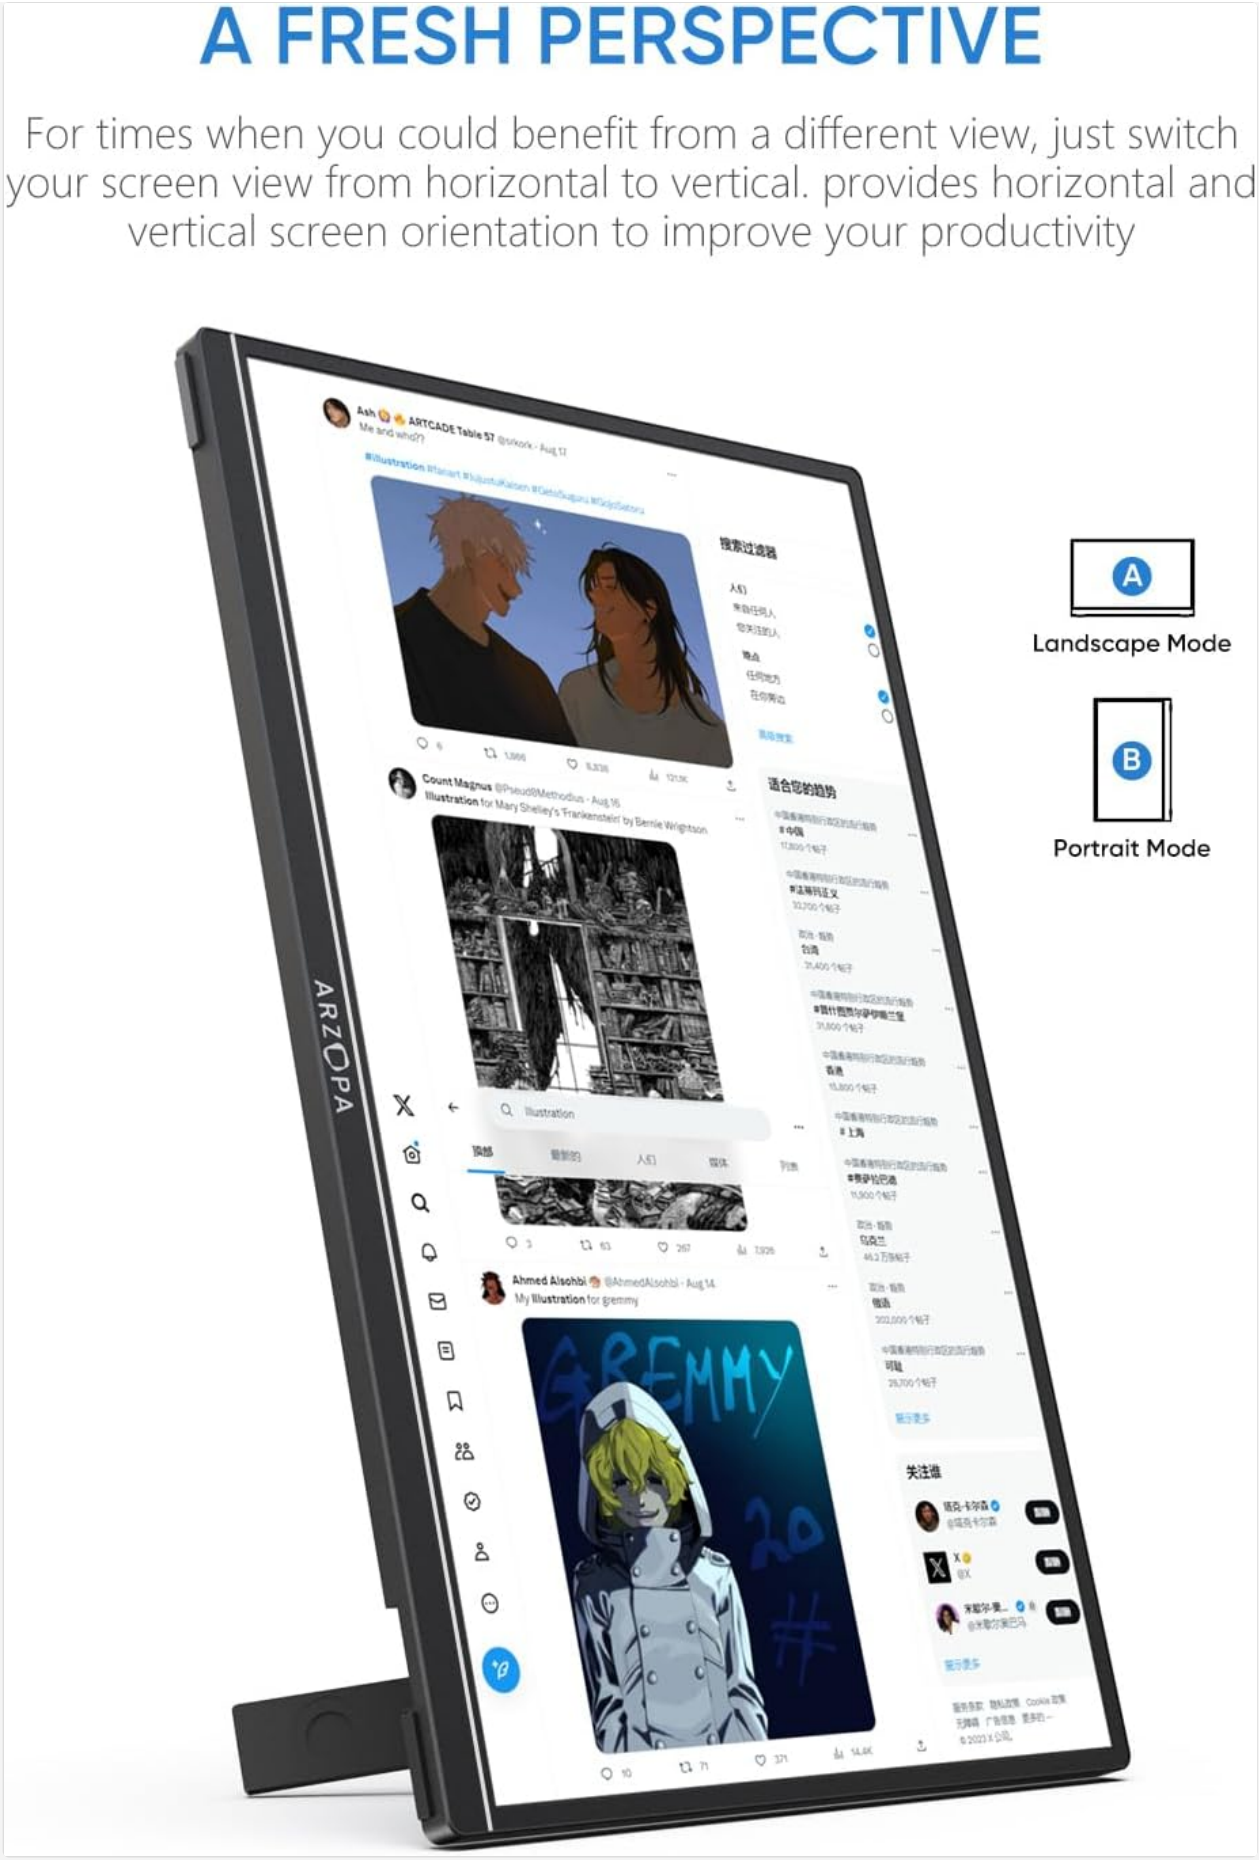

Image: The monitor features versatile connectivity options including two USB-C ports and a Mini HDMI port.

5. **Connect to a Smartphone (USB-C):** For smartphones with a full-featured USB Type-C port (supporting DisplayPort Alternate Mode), connect the USB-C to USB-C cable directly. For optimal performance and to charge your phone, it is recommended to connect an external power source to the monitor's second USB-C port.



Image: The monitor supports a wide range of devices, including smartphones, gaming consoles, and laptops.

5. Operating the Monitor

Once connected, your ARZOPA portable monitor is ready for use. Here are some operational guidelines:

- **Power On/Off:** The monitor typically powers on automatically when a signal is detected. To manually power off, press and hold the power button (location may vary, refer to physical monitor for exact button layout).
- **Adjusting Display Settings:** Use the OSD (On-Screen Display) menu to adjust settings such as brightness, contrast, color temperature, and input source. The OSD menu is usually accessed via dedicated buttons on the side of the monitor.

- **Switching Display Modes:** The monitor supports both landscape and portrait orientations. You can switch between these modes through your connected device's display settings (e.g., Windows Display Settings, macOS Display Preferences).

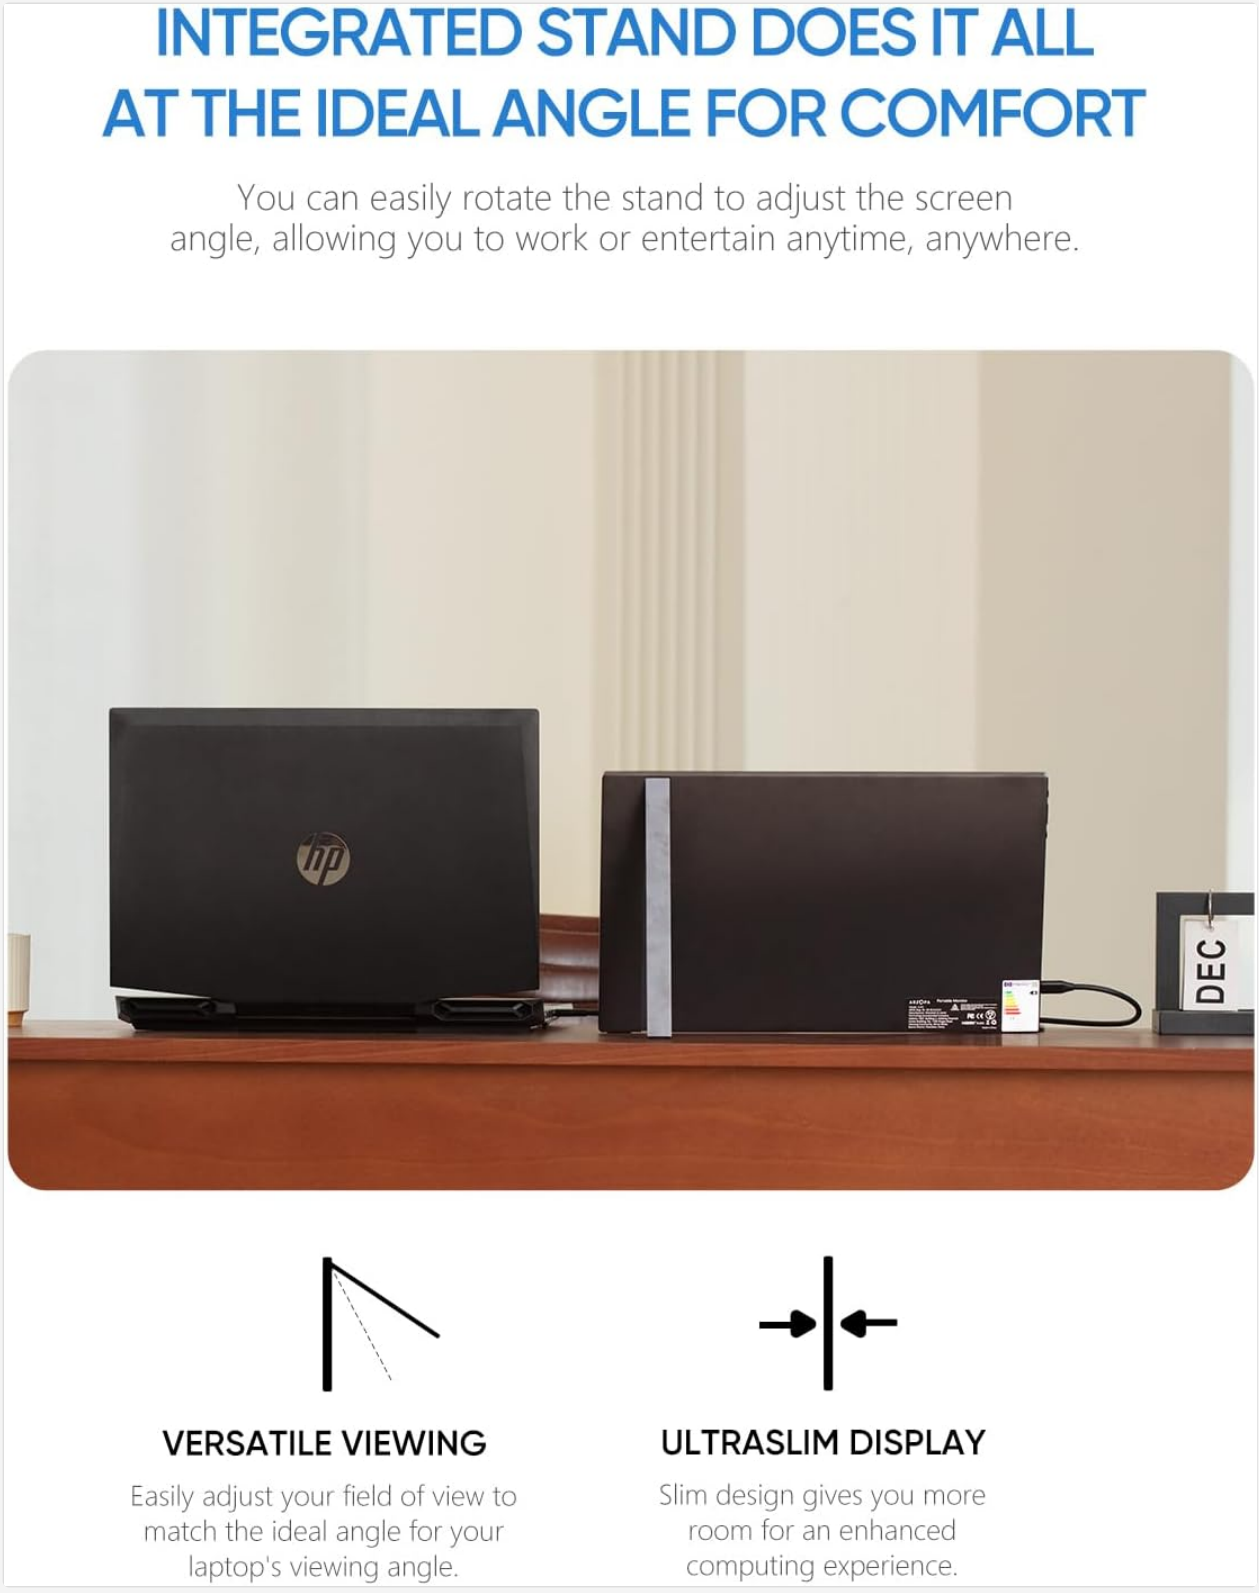

Image: The monitor can be easily switched to portrait mode for improved viewing of documents or social media feeds.

- **Audio Output:** The monitor features dual integrated speakers. Audio will be routed through the monitor when connected via HDMI or USB-C (if supported by the source device). You can adjust the volume via the OSD menu or your connected device's audio settings.
- **Gaming Console Connectivity:** Connect your Xbox, PS5, Switch, or Steam Deck using the Mini HDMI cable for video and a USB-A to USB-C cable for power (if the console cannot provide sufficient power via HDMI).

6. Maintenance

Proper care and maintenance will extend the lifespan of your ARZOPA portable monitor:

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics. Lightly dampen the cloth with water or a screen-cleaning solution. Never spray liquid directly onto the screen.
- **Cleaning the Body:** Wipe the monitor's casing with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the monitor in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging or a protective sleeve to prevent scratches and damage.
- **Handling:** Always handle the monitor by its edges. Avoid applying pressure to the screen.

7. Troubleshooting

If you encounter issues with your ARZOPA portable monitor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Signal / Black Screen	Incorrect input source selected; Loose cable connection; Insufficient power; Device not outputting signal.	Check all cable connections; Ensure the correct input source is selected via the OSD menu; Connect an external power source to the monitor if using a low-power USB port; Verify your device is configured to output to an external display.
No Power	Power cable not connected; Insufficient power from source.	Ensure the USB-C power cable is securely connected to a power source; If using a laptop's USB port, try connecting the monitor to a wall adapter for dedicated power.
Image Flickering	Faulty cable; Interference; Graphics driver issues.	Try a different cable; Ensure no strong electromagnetic interference nearby; Update graphics drivers on your connected device.
No Sound from Speakers	Volume too low; Muted; Incorrect audio output selected on device.	Increase volume via OSD or device settings; Ensure monitor is not muted; Select the monitor as the audio output device on your computer/console.
Cannot Switch to Portrait Mode	Operating system settings not configured.	Adjust display orientation settings in your computer's operating system (e.g., Windows Display Settings > Orientation).

8. Specifications

Product Dimensions:
8.27 x 14.96 x 19.29 inches

Item Weight:
1.43 pounds

Screen Size:
14 Inches

Resolution:
FHD 1080p (1920x1080 Pixels)

Aspect Ratio:
16:9

Image Brightness:
300 Candela

Total USB Ports:
2 (USB Type-C)

Screen Surface Description:
Matte

Model Number:
A1S

Manufacturer:
ARZOPA

Date First Available:
July 19, 2023

9. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your product packaging or visit the official ARZOPA website. Keep your purchase receipt as proof of purchase for warranty claims.
For further assistance, you may contact ARZOPA customer service through their official channels, typically found on their website or product support page.

© 2024 ARZOPA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question