Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ABBIDOT T60 Pro

ABBIDOT T60 Pro Dog Training Collar User Manual

Model: T60 Pro

1. Introduction

This user manual provides detailed instructions for the safe and effective use of your ABBIDOT T60 Pro Dog Training Collar. Please read this manual thoroughly before operating the device to ensure proper functionality and the well-being of your dog. This collar is designed to assist in training dogs through various humane correction modes and positive reinforcement techniques.



Image: The ABBIDOT T60 Pro Dog Training Collar system, showing the remote control, the collar receiver, and the product packaging.

2. Product Overview

2.1 Components

- T60 Pro Remote Transmitter
- T60 Pro Collar Receiver with Adjustable Strap
- USB Type-C Charging Cable
- Test Light Tool
- Silicone Contact Caps (4x)
- Metal Contact Points (4x, two short, two long)
- Lanyard
- User Manual (this document)
- Dog Training Booklet



Image: A visual representation of all components included in the ABBIDOT T60 Pro package, including the remote, collar, charging cable, and accessories.

2.2 Key Features

- **Multiple Training Modes:** Offers 4 correction modes including 9-tone, 36-vibration, and 2 custom stimulation modes.
- **E-Clicker Function:** Integrated E-Clicker with 12 sound modes for positive reinforcement training.
- **Extended Range:** Operates effectively up to 4100 feet (approximately 1250 meters), ideal for outdoor training.
- **Waterproof Design:** Both the remote and collar receiver are IP67 waterproof, allowing use in various weather conditions and during water activities.
- **Long Battery Life:** Remote battery lasts up to 45 days, and the collar receiver battery lasts up to 25 days on a single charge.
- **Safety Lock:** A dedicated safety lock on the remote prevents accidental stimulation.
- **Anti-Lost Light:** Collar features 3 light modes (flashlight, slow flash, explosive flash) for visibility in low-light conditions.
- **Multi-Dog Control:** Capable of controlling up to 6 dogs with additional collars (sold separately).

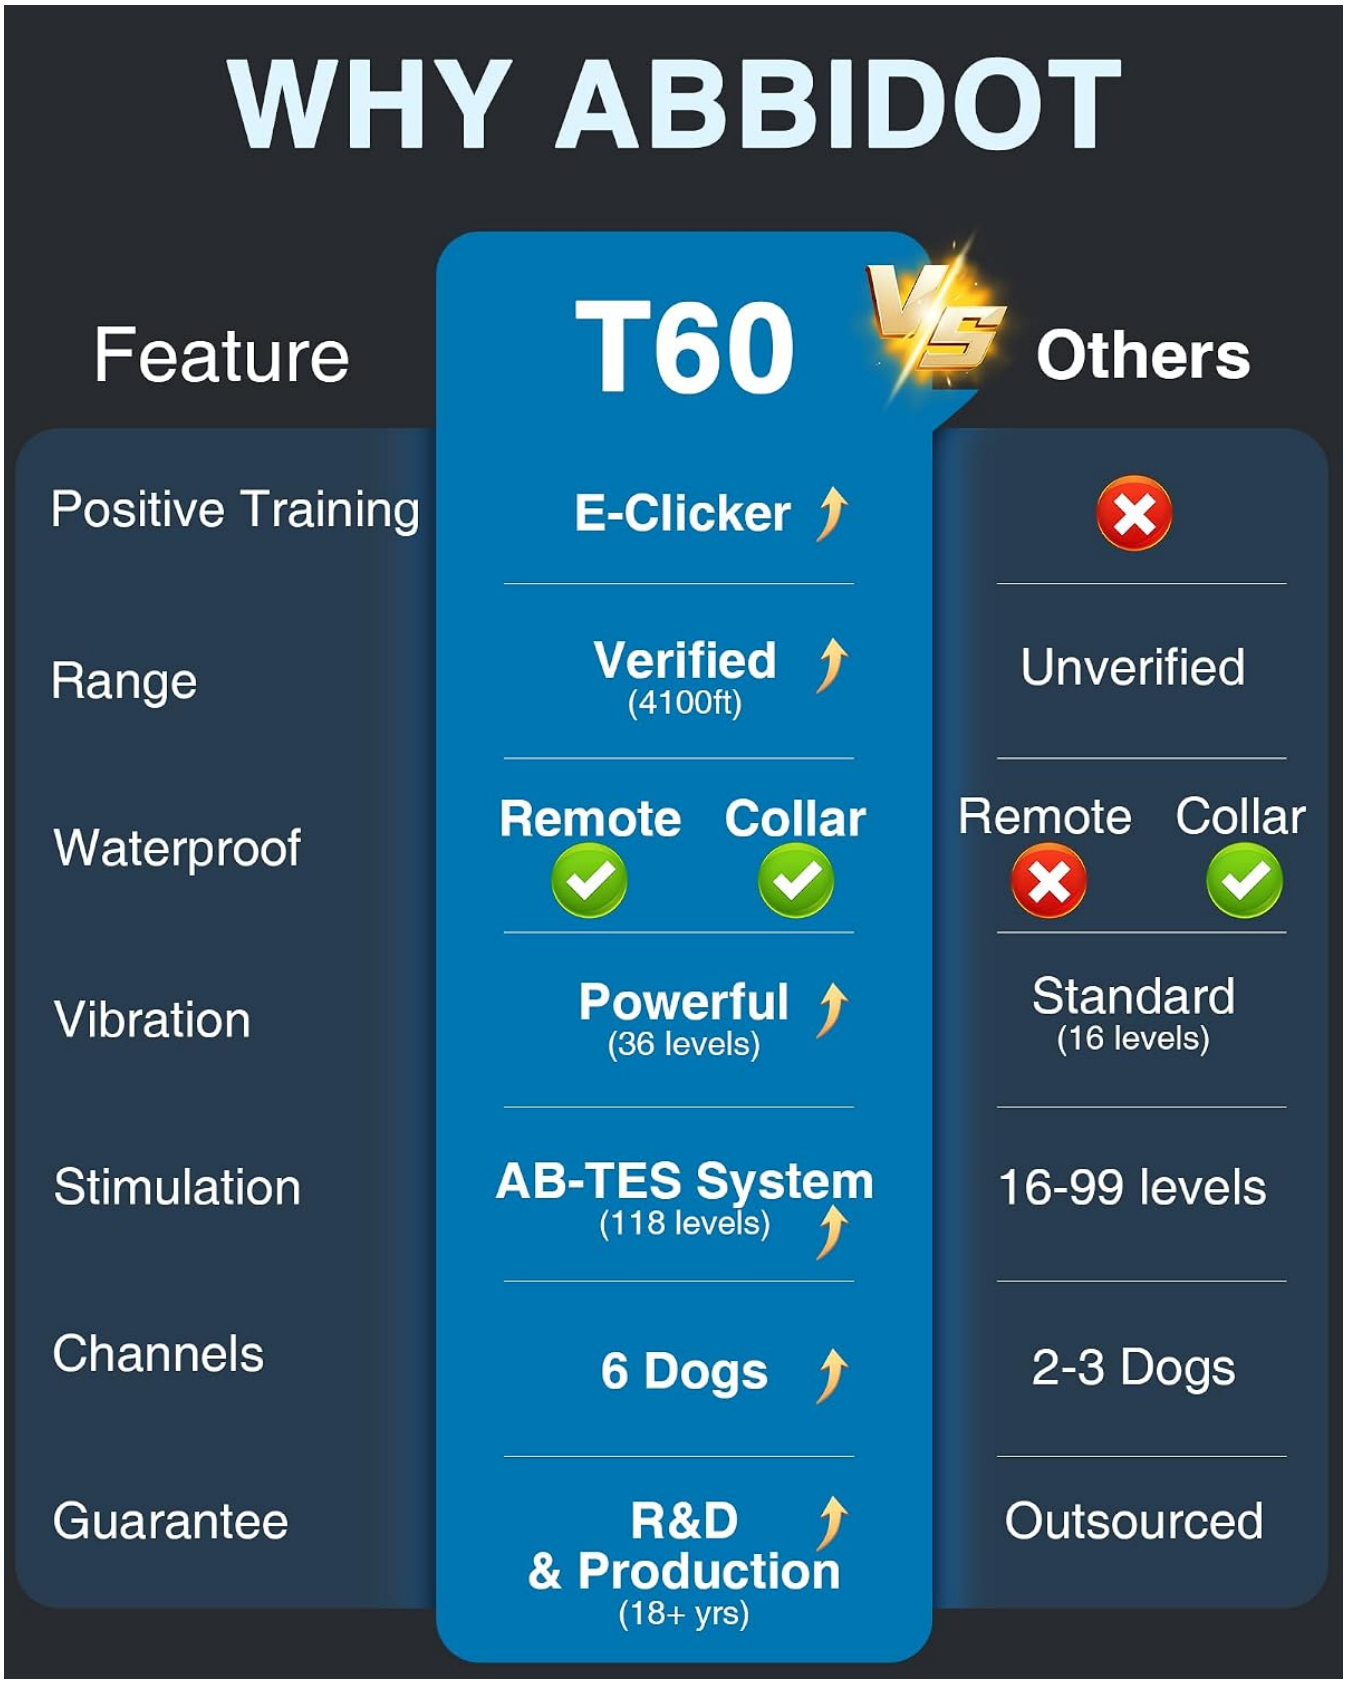


Image: A comparison chart highlighting the superior features of the ABBIDOT T60 Pro, such as E-Clicker, 4100ft range, waterproof remote and collar, 36 vibration levels, 118 stimulation levels, and control for up to 6 dogs.

3. Safety Information

- **Not for Aggressive Dogs:** Do not use this product on aggressive dogs. Consult a professional dog trainer or veterinarian to determine if this product is appropriate for your dog.
- **Proper Fit is Crucial:** Ensure the collar fits snugly but not too tightly. A loose fit can reduce effectiveness and cause skin irritation.

- **Avoid Prolonged Wear:** Do not leave the collar on your dog for more than 12 hours per day. Prolonged wear can lead to pressure necrosis (collar sores).
- **Regular Skin Checks:** Inspect your dog's neck daily for any signs of irritation, redness, or sores. If irritation occurs, discontinue use until the skin heals.
- **Supervised Use:** Always supervise your dog during training sessions.
- **Child Safety:** Keep the device out of reach of children.
- **Accidental Stimulation Prevention:** Utilize the safety lock feature on the remote to prevent unintended corrections.

4. Setup

4.1 Charging the Devices

Before first use, fully charge both the remote transmitter and the collar receiver. The devices use a Type-C charging port.

1. Connect the USB Type-C charging cable to the charging port on both the remote and the collar.
2. Plug the other end of the cable into a standard USB power adapter (not included), car charger, power bank, or computer USB port.
3. The battery indicator on the remote and collar will show charging status. Once fully charged, the indicator will change (refer to the device's display for specific icons).



Image: Illustration of the Type-C charging port on the remote and collar, showing various charging methods like USB adapter, car charger, power bank, and laptop/PC. Indicates 25 days for collar and 45 days for remote battery life.

4.2 Pairing the Remote and Collar

The remote and collar are typically pre-paired from the factory. If they are not paired or you need to pair additional collars, follow these steps:

1. Ensure both the remote and collar are powered off.
2. Press and hold the power button on the collar receiver until the indicator light flashes rapidly.
3. While the collar light is flashing, press any correction button (Tone, Vibration, or Stimulation) on the remote transmitter.
4. The collar's indicator light will stop flashing and remain solid, indicating successful pairing.
5. If pairing multiple collars, select a different dog channel on the remote before repeating the process for each

additional collar.

4.3 Fitting the Collar

Proper fit is essential for the collar's effectiveness and your dog's comfort.

1. Ensure the collar receiver is centered on your dog's neck, with the contact points touching the skin.
2. Adjust the strap so that it is snug enough for the contact points to make reliable contact, but loose enough to allow one or two fingers to fit comfortably between the strap and your dog's neck.
3. For dogs with thick coats, you may need to trim some fur around the contact points or use the longer contact points provided to ensure proper skin contact.
4. The adjustable strap fits dogs from 5 lbs to 120 lbs, with a minimum neck size of 6 inches and a maximum of 27 inches.



Image: The collar receiver with its adjustable strap, illustrating the minimum and maximum neck sizes (6 to 27 inches) and weight range (10-130 lbs) for suitable dogs. Also shows the anti-lost light feature.

5. Operating Instructions

5.1 Remote Control Layout

The remote features an LCD display and intuitive buttons for various functions.

- **LCD Display:** Shows current dog channel, battery indicators for remote and collar, levels display, LED indicator, E-Clicker indicator, and stimulation lock status.
- **Lock Knob:** Push down to lock/unlock stimulation.
- **E-Clicker Button:** Activates E-Clicker sounds.
- **Tone Button:** Delivers an audible tone correction.
- **Vibration Button:** Delivers a vibration correction.
- **Stimulation Button:** Delivers a static stimulation correction.
- **Channel Button (1/2):** Switches between dog channels (up to 6 dogs).
- **Level Adjustment Buttons (+/-):** Adjusts the intensity level for vibration and stimulation.



Image: Detailed view of the remote's LCD display, pointing out indicators for current dog, collar battery, tone, vibration, stimulation, levels, LED, E-Clicker, remote battery, and stimulation lock.

5.2 Training Modes

The T60 Pro offers various modes for effective training:

- **Tone Mode (9 Tones):** Press the Tone button to emit an audible sound from the collar. This is often used as a warning or attention-getter.
- **Vibration Mode (36 Levels):** Press the Vibration button to deliver a non-harmful vibration. Adjust the intensity using the level adjustment buttons.
- **Stimulation Mode (118 Levels):** Press the Stimulation button to deliver a static stimulation. Adjust the intensity carefully. Always start at the lowest level and increase gradually. Use the safety lock to prevent accidental stimulation.
- **E-Clicker Mode (12 Sound Modes):** Press the E-Clicker button to emit a distinct sound from the remote. This is used for positive reinforcement, marking desired behaviors immediately before a reward.
- **Safety Light Mode (3 Modes):** The collar receiver has an integrated light. Cycle through flashlight, slow flash, and explosive flash modes for visibility.



Image: Illustrates the 4 correction sessions for bad behavior, detailing 9 tone models, 118 stimulation levels, 36 vibration levels, and 3 safety light modes available on the ABBIDOT T60 Pro.



Image: Highlights the E-Clicker feature with 12 sound modes for positive reinforcement, showing examples of dogs performing good behaviors like shaking paws, playing dead, laying down, and retrieving.

5.3 Range and Waterproofing

The ABBIDOT T60 Pro offers a control range of up to 4100 feet, allowing for effective training even at a distance. Both the remote and collar are IP67 waterproof, meaning they can withstand submersion in water up to 1 meter for 30 minutes. This makes them suitable for training in wet conditions, near water, or during light rain and snow.

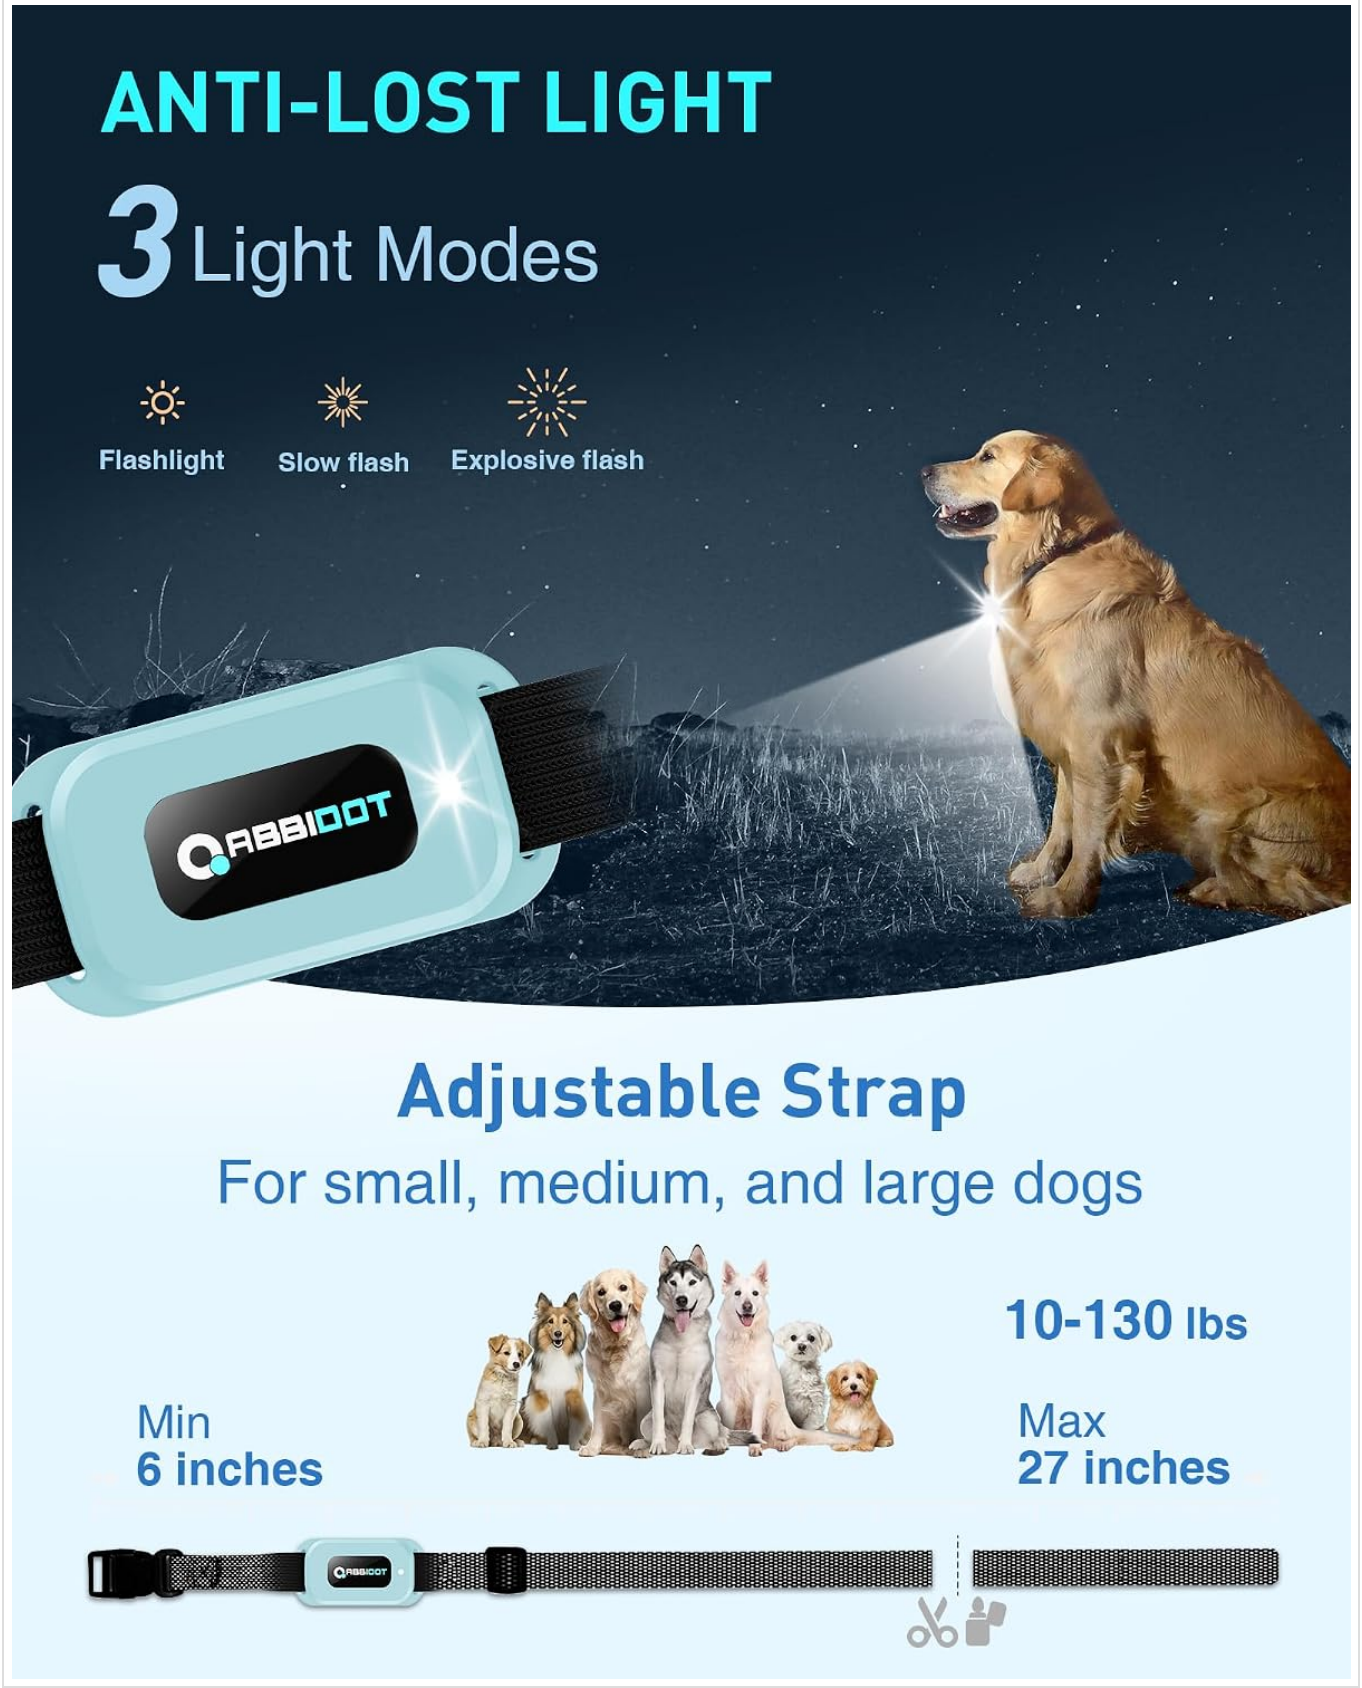


Image: Depicts the extended working time (25 days for collar, 45 days for remote) and the impressive 4100ft control range of the ABBIDOT T60 Pro, with a dog in the distance and a hand holding the remote.



Image: Shows the ABBIDOT T60 Pro collar and remote submerged in water, emphasizing their IP67 waterproof rating and suitability for swimming, rain, bathing, and snow.

6. Maintenance and Care

- **Cleaning:** Wipe the collar and remote with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Contact Points:** Regularly clean the contact points on the collar receiver to ensure proper conductivity.
- **Storage:** Store the device in a cool, dry place when not in use.

- **Battery Care:** To prolong battery life, avoid fully discharging the batteries frequently. Charge them regularly, even if the device is not in active use for extended periods.
- **Strap Replacement:** The collar strap is adjustable and replaceable. Ensure the strap is in good condition for secure fit.

7. Troubleshooting

Problem	Possible Cause	Solution
Collar not responding to remote	Low battery on remote or collar; Not paired; Out of range; Stimulation lock engaged.	Charge both devices; Re-pair the devices (Section 4.2); Move closer to the dog; Disengage stimulation lock.
Correction feels weak or inconsistent	Collar too loose; Contact points not touching skin; Dog's fur too thick; Low battery.	Adjust collar for snug fit; Ensure contact points are making contact; Use longer contact points or trim fur; Charge devices.
Collar light not working	Low battery; Light mode not activated.	Charge collar; Cycle through light modes on the remote.
Remote display is blank	Low battery; Remote is off.	Charge remote; Press and hold power button to turn on.
Dog shows signs of skin irritation	Collar worn too long; Collar too tight; Improper contact point size.	Remove collar immediately; Allow skin to heal; Ensure proper fit and wear time (max 12 hours/day); Consult a veterinarian if irritation persists.

8. Specifications

Feature	Specification
Model	T60 Pro
Brand	ABBIDOT
Correction Modes	Tone (9 levels), Vibration (36 levels), Stimulation (118 levels), E-Clicker (12 sounds)
Control Range	Up to 4100 feet (approx. 1250 meters)
Waterproof Rating	IP67 (Collar & Remote)
Remote Battery Life	Up to 45 days
Collar Battery Life	Up to 25 days
Adjustable Strap Length	Min 6 inches, Max 27 inches
Suitable Dog Weight	5 lbs - 120 lbs
Item Weight	12.6 ounces (total package)
Manufacturer	Shenzhen Zheer Life Technology Co., Ltd.

9. Warranty and Support

The ABBIDOT T60 Pro Dog Training Collar comes with a**1-year warranty** from the date of purchase, covering manufacturing defects.
For any questions, concerns, or technical support, please contact ABBIDOT customer service:

Email: Support@abbidot.com

Our dedicated customer service team is available to assist you with any inquiries regarding your product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question