Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Joso BSP-D8Pro

Joso D8 Pro Mobile Gaming Controller User Manual

Model: BSP-D8Pro

Brand: Joso

1. Introduction

Welcome to the user manual for your Joso D8 Pro Mobile Gaming Controller. This manual provides detailed instructions on setup, operation, and maintenance to ensure optimal performance and an enhanced gaming experience across multiple platforms. Please read this manual thoroughly before using the product.

2. What's in the Box

- 1 D8Pro Game Controller
- 1 USB-C Charging Cable
- 1 Disk Directional Key
- 2 Pads for iPad/Tablet
- 1 User Manual



Figure 2.1: Package Contents

The image displays the Joso D8 Pro game controller, a USB-C charging cable, a disk directional key, two pads for iPad/Tablet, and the user manual, all neatly arranged next to the product box.

3. Product Overview

Key Features

- Multi-Functional Mobile Controller: Features responsive dual Hall-Rocker, dual Hall-Trigger, clickable thumbsticks, turbo, dual vibrate, 6-axis gyro, and 2 programmable macro buttons.
- ABXY Key-value Interchange Function: Press 'Y+A+HOME' keys to switch the ABXY key value from Xbox setting to Switch setting, allowing free switching between layouts.
- Multi-Platform Compatibility: Supports direct play on iPad/iPhone/Android/Tablet/PC/NS Switch/PS4.
- RGB Rocker: Features 'lights breathing', 'lights fixed', and 'lights off' effects.

- Seamless Game Support: Compatible with popular titles like COD Mobile, COD Warzone Mobile, Minecraft, Roblox, Genshin Impact, Asphalt 9/8, GTA, Diablo Immortal, and more.
- Cloud Gaming Support: Compatible with Xbox Cloud Gaming and PS Remote Play.



Figure 3.1: Joso D8 Pro Controller with Tablet

This image showcases the Joso D8 Pro controller attached to a tablet, highlighting its use for mobile gaming, specifically Call of Duty Warzone Mobile, and its broad compatibility across different operating systems and gaming platforms.



Figure 3.2: Advanced Features Overview

This image provides a close-up of the controller's advanced features, including the Hall Effect triggers for accuracy, Hall Effect joysticks for responsiveness, the magnetic replaceable D-pad, and the customizable RGB lighting on the rockers.

4. Setup and Connection

4.1 Initial Setup

Fully charge the controller before first use using the provided Type-C charging cable. Ensure the controller is powered off before initiating any Bluetooth pairing connections.

4.2 Connecting to Nintendo Switch

To connect your Joso D8 Pro controller to a Nintendo Switch console, follow these steps:

1. Open the Switch console and navigate to 'Change Grip/Order page' in System Settings.

2. Ensure the D8 Pro controller is off.
3. Press and hold the 'RT' key on the controller, then press the 'HOME' key to boot the controller.
4. The indicator light for the 'HOME' key will turn green, and the controller will automatically connect to the Switch.

▶ **Watch video online**

Connect the Joso D8 Pro Controller to the Switch Console

Video 4.1: Connecting Joso D8 Pro to Nintendo Switch

This video demonstrates the process of connecting the Joso D8 Pro controller to a Nintendo Switch console, showing the necessary steps within the Switch's settings and the controller's button presses for successful pairing.

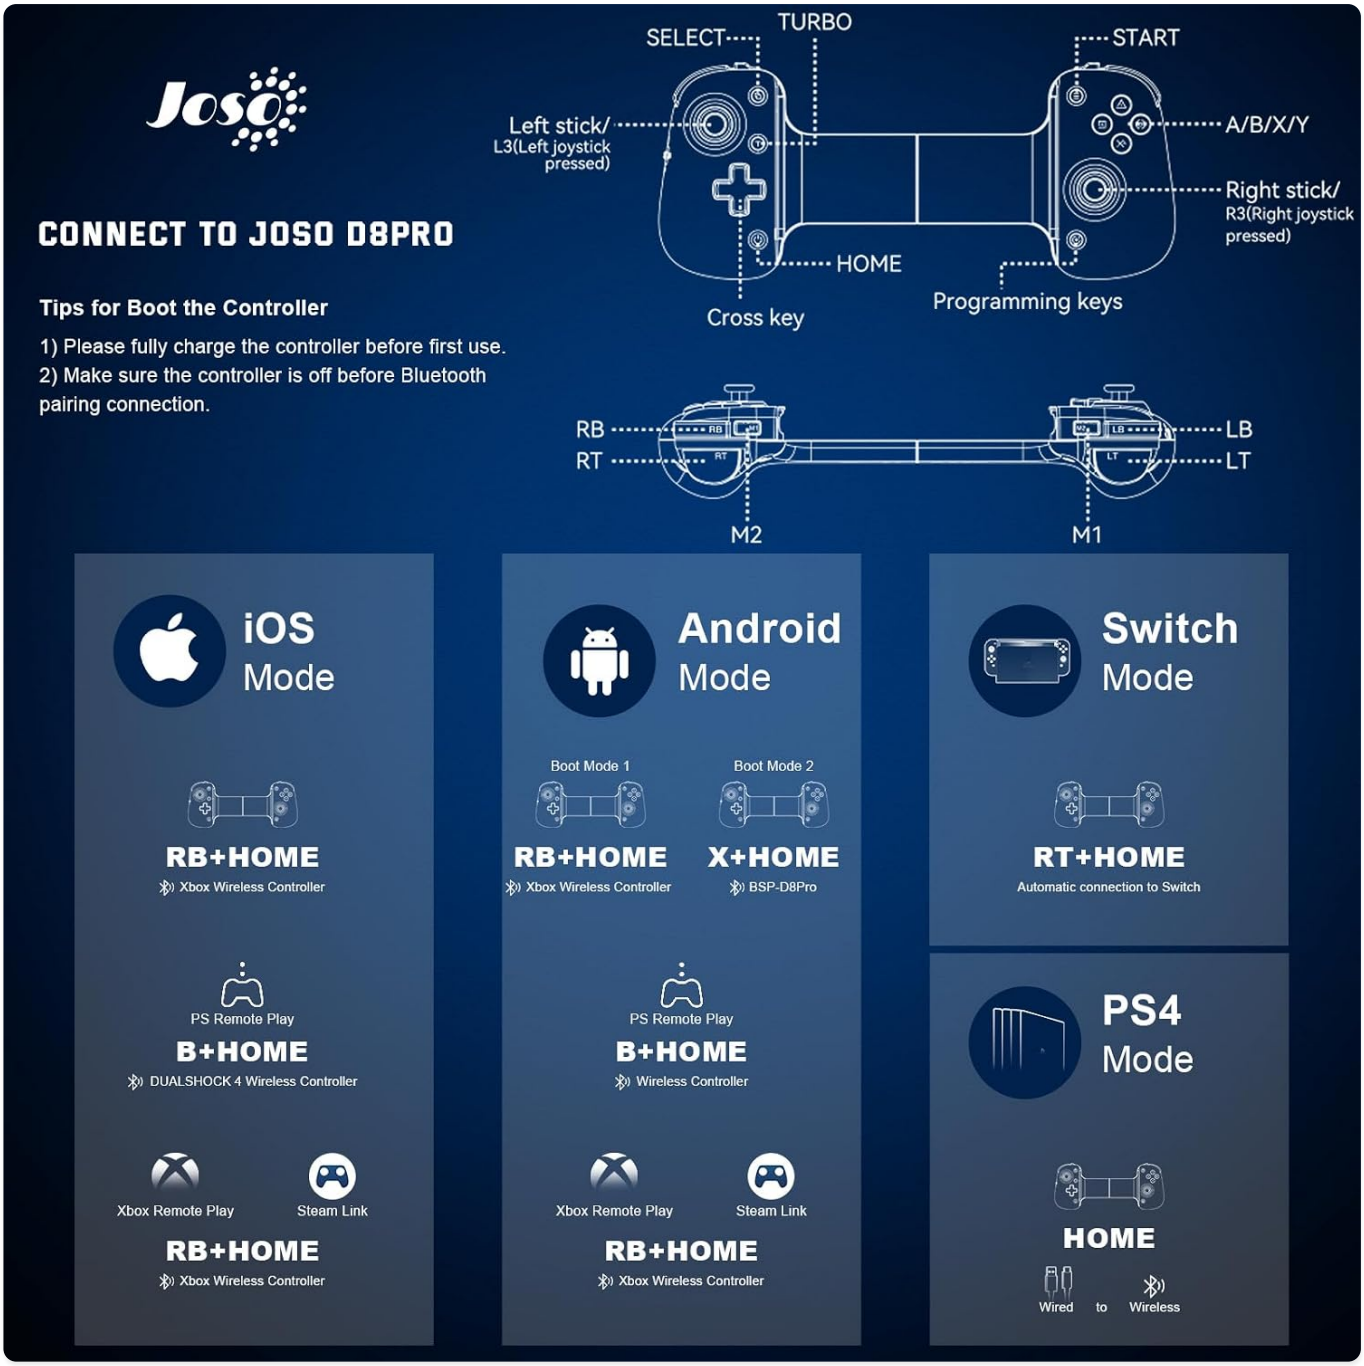

Figure 4.2: Connection Diagram

The diagram provides a visual guide to connecting the controller to different devices, detailing the specific button combinations required to enter iOS, Android, Switch, and PS4 modes.

4.3 Streaming to PS4/PS5 and Xbox Consoles

The Joso D8 Pro controller supports streaming PS4/PS5 games via the PS Remote Play app and Xbox games via the

Xbox mobile app. Ensure your console is connected to power and the internet, and that remote play features are enabled on your console.

1. Ensure the controller is off.
2. For PS Remote Play: Press and hold the 'B' key, then press the 'HOME' key to boot the controller. Connect the Bluetooth 'DUALSHOCK 4 Wireless Controller' on your iOS/Android device.
3. For Xbox Cloud Gaming/Remote Play: Press and hold the 'RB' key, then press the 'HOME' key to boot the controller. Connect the Bluetooth 'Xbox Wireless Controller' on your iOS/Android device.
4. Once connected, open the respective remote play app (PS Remote Play or Xbox app) and follow the in-app instructions to connect to your console.

▶ **Watch video online**
Streaming PS4/X-box Series S Connection Guide

Video 4.3: Streaming PS4/Xbox Series S Connection Guide

This video demonstrates how to connect the Joso D8 Pro controller for streaming games from PS4/PS5 and Xbox Series S consoles to a mobile device, showing the pairing process and in-game usage.

4.4 Connecting to iOS Devices

To connect your Joso D8 Pro controller to an iOS device (iPhone/iPad):

1. Ensure the controller is off.
2. Press and hold the 'RB' key, then press the 'HOME' key to boot the controller. The indicator light for the 'HOME' button will flash quickly.
3. Turn on Bluetooth on your iPhone or iPad.
4. Search for and select 'Xbox Wireless Controller' in the Bluetooth device list.
5. Once the connection is established, the indicator light for the 'HOME' button will be solid cyan.

▶ **Watch video online**
Connect the Joso D8Pro Wireless Controller to the iOS

Video 4.4: Connecting Joso D8 Pro to iOS

This video illustrates the steps to connect the Joso D8 Pro wireless controller to an iOS device, including the button sequence on the controller and the Bluetooth pairing process on the iPhone.

4.5 Connecting to Android Devices

To connect your Joso D8 Pro controller to an Android device:

1. Ensure the controller is off.
2. For most games: Press and hold the 'RB' key, then press the 'HOME' key to boot the controller. The indicator light for the 'HOME' button will flash quickly.
3. For some specific games (e.g., requiring a different boot mode): Press and hold the 'X' key, then press the 'HOME' key to boot the controller. The indicator light for the 'HOME' button will flash quickly.
4. Turn on Bluetooth on your Android phone or tablet.
5. Search for and select 'Xbox Wireless Controller' or 'BSP-D8Pro' (depending on the boot mode) in the Bluetooth device list.
6. Once the connection is established, the indicator light for the 'HOME' button will be solid cyan (for Xbox Wireless Controller mode) or yellow (for BSP-D8Pro mode).

▶ **Watch video online**
Connect the Joso D8Pro Controller to the Android

Video 4.5: Connecting Joso D8 Pro to Android

This video demonstrates the connection process for the Joso D8 Pro controller to an Android device, showing different boot modes and how to pair the controller via Bluetooth for various games.

5. Operating Instructions

5.1 ABXY Key-value Interchange Function

The controller allows you to switch the function of the ABXY buttons to match either Xbox or Switch layouts. To do this, press the 'Y+A+HOME' keys simultaneously. This provides flexibility for different gaming preferences.

5.2 Hall Effect Joysticks and Triggers

The Joso D8 Pro is equipped with Hall Effect joysticks and triggers, which use magnetic sensors for input. This technology provides high precision, responsiveness, and eliminates common issues like stick drift found in traditional potentiometers, ensuring a more accurate and durable gaming experience.

5.3 Magnetic D-Pad

The controller features a replaceable magnetic D-pad. This design allows for easy customization and provides a better tactile feel, especially beneficial for fighting games and other titles requiring precise directional input.

5.4 RGB Rocker Light Control

The RGB lighting on the rockers offers various visual effects:

- 'Lights Breathing': A pulsating light effect.
- 'Lights Fixed': A solid, constant light.
- 'Lights Off': Turns off the RGB lighting.

To change the lighting mode, press and hold the 'Programming' key, then press the 'L3' key (left joystick pressed down). The lights will cycle through the modes in the order of Breathing > Fixed (7 fixed colors) > Off.

5.5 Custom Programming Buttons (M1/M2)

The controller includes two programmable macro buttons (M1 and M2) located on the back. These buttons can be assigned to perform complex actions or sequences of button presses, allowing for personalized control and improved gaming efficiency. Refer to the detailed programming instructions in the full user manual for specific steps.

5.6 Joystick Fine-Tuning

The joysticks offer three factory-preset gear modes for fine-tuning the linear joystick and deadband:

- FPS (Gunfight) mode
- Normal mode (recommended for most players)
- Racing mode

These modes allow you to adjust the joystick's sensitivity and response curve to suit different game genres and personal preferences.

5.7 6-Axis Gyro Motion Control

The integrated high-sensitivity 6-axis gyro sensor provides precise motion control in games that support this feature. This allows for intuitive aiming, steering, or other in-game actions by simply tilting and rotating the controller.

5.8 Turbo Speed Function

The controller supports both AUTO Turbo and MANUAL Turbo modes, allowing for rapid, repeated button presses. You can set the turbo speed to 8, 15, or 25 shots per second, providing an advantage in games requiring fast input.

6. Compatibility

6.1 Supported Devices

- **Tablets:** iPad/iPad Pro/iPad Air/iPad mini (fits up to 13-inch iPad Pro and Tablets).
- **iOS Phones:** iPhone 15 Series/iPhone 14 Series and more iOS devices.
- **Android Phones/Tablets:** Galaxy Tab S9/S9+/Galaxy Tab S8/S8+, Galaxy S23/S22 and more Android devices (Note: Not supported for Fire Tablet).
- **PC:** Windows 10+ Laptops.
- **Consoles:** NS Switch, PS4, PS5 (via PS Remote Play), Xbox (via Xbox mobile app).

The controller stretches from 5.03-11.37 inches (128-289mm) and supports device thicknesses up to 0.51 inches (13mm), allowing for use with phones even with cases.

6.2 Supported Games & Platforms

- **Direct Play:** Supports most controller-supported games from App Store, Google Play, Steam, and Switch games. This includes popular titles like COD Mobile, COD Warzone Mobile, Minecraft, Roblox, Genshin Impact, Asphalt 9/8, GTA, Diablo Immortal, and more.
- **Cloud Gaming:** Fully compatible with Xbox Cloud Gaming and PS Remote Play, allowing you to stream games from your console or cloud service to your mobile device.



Figure 6.1: Supported Gaming Platforms and Games

This visual highlights the wide array of gaming platforms and popular game titles that are compatible with the Joso D8 Pro controller, covering direct play, PS Remote Play, Xbox Cloud Gaming, and Steam Link.

7. Troubleshooting

Common Issues and Solutions

- **Controller not connecting:** Ensure the controller is fully charged. Verify that Bluetooth is enabled on your device and that you are following the correct pairing instructions for your specific platform (iOS, Android, Switch, PC). Try restarting both the controller and your device.
- **Buttons not responding or incorrect input:** Check if the controller is in the correct operating mode for your device/game. Some games may require you to select 'Controller' as the input method within their in-game settings (e.g., Genshin Impact).

- **Lag or input delay:** Ensure your device is within close proximity to the controller and there are no significant wireless interferences (e.g., other strong Wi-Fi signals, large metal objects). Try disconnecting and reconnecting the controller.
- **Charging issues:** Use the provided Type-C cable and a compatible power source. Ensure the charging port on the controller is clean and free of debris.
- **Device not fitting securely:** The controller stretches from 5.03-11.37 inches (128-289mm) and supports thicknesses up to 0.51 inches (13mm). Ensure your device, including any case, fits within these dimensions.
- **Controller randomly disconnects:** Ensure the controller is fully charged. Avoid placing other Bluetooth devices or strong electromagnetic sources near the controller and your device during use.

8. Specifications

Specification	Detail
Model Number	BSP-D8Pro
Item Weight	12.3 ounces
Package Dimensions	10.91 x 5 x 2.36 inches
ASIN	B0D72YL274
Date First Available	June 14, 2024

9. Warranty and Support

For warranty information, technical support, and customer service, please refer to the contact details provided on the product packaging or visit the official Joso website. Please retain your purchase receipt as proof of purchase for any warranty claims.

© 2024 Joso. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0D72YL274

More documents and user manuals: **https://manuals.plus/**