Manuals+
Q & A | Deep Search | Upload

iPormis B0F292SFX2

iPormis King Platform Bed Frame User Manual

Model: B0F292SFX2

Introduction

Thank you for choosing the iPormis King Platform Bed Frame. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new bed frame. Designed for superb comfort and unparalleled stability, this bed frame features a fabric upholstered headboard, thickened legs, and solid wooden slats for noise-free support.

Product Features

- **Superb Comfort:** Linen fabric covers the body like a blanket, while generous foam provides a cloudlike embrace. Melt into the deeply upholstered headboard for lazy reading or late-night screen time.
- **Unparalleled Stability:** With a trapezoidal bed feet design and a robust solid wood bed frame, this bed guarantees exceptional stability and enduring durability, standing strong over time.
- **Zero Disturbance:** Thickened EVA mute pads eliminate frame-to-slat friction, bidding farewell to squeaks and welcoming every serene night.
- **No Box Spring Needed:** Equally spaced wooden slats are designed to support and extend mattress life. Without the need for a box spring, this platform bed provides a stable base. Mattress thickness recommendation is 8"-12".
- **Effortless Assembly:** All parts are clearly marked and conveniently packed in one box. Assembling this bed frame is a breeze in under 30 minutes.

Setup and Assembly

The iPormis King Platform Bed Frame is designed for quick and easy assembly. All necessary tools and accessories are included in the package. Please follow the steps below for a hassle-free setup.

Assembly Overview

Figure 1: Product Dimensions and Components. This diagram illustrates the overall dimensions of the King size bed frame (81.5"L x 78"W x 40"H) and indicates a maximum capacity of 800 lbs. It also recommends mattress thicknesses between 8-12 inches.

Key Structural Elements

Figure 2: Heavy-Duty Metal Frame Structure. This image highlights the robust metal frame and wooden slats that provide long-lasting durability and support for the mattress.

Stability and Noise Reduction

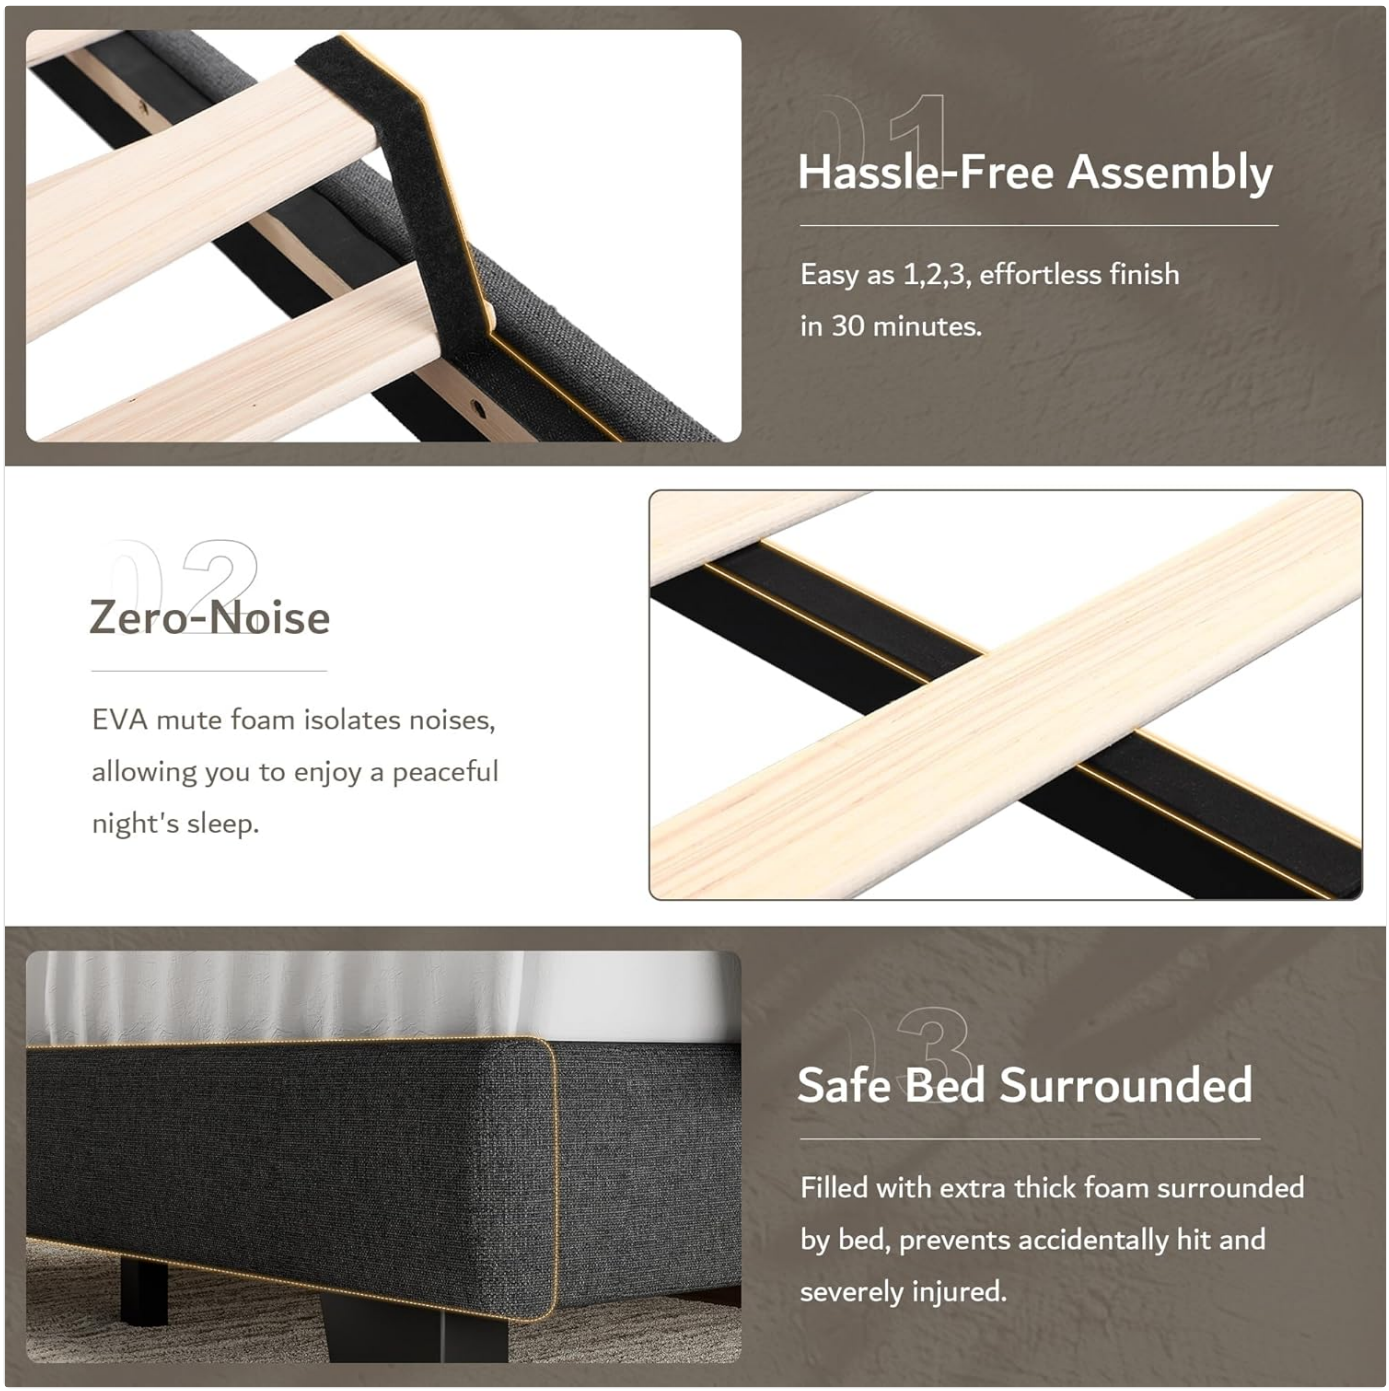

Figure 3: Larger Ground Contact Area. This image demonstrates the design of the thickened trapezoidal bed feet, which provide exceptional support and stability, contributing to the bed's overall durability.

Figure 4: Assembly and Noise Reduction Features. This composite image shows the ease of assembly, the EVA mute foam pads that prevent noise, and the extra thick foam surrounding the bed frame for safety.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: iPormis Platform Bed Frame Assembly. This video provides a visual guide to the assembly process, demonstrating the ease of putting together the bed frame and highlighting key features like the sturdy frame and noise-reducing elements.

For detailed step-by-step instructions, please refer to the included printed manual. Ensure all parts are accounted for before beginning assembly.

Operating Instructions

The iPormis King Platform Bed Frame is designed for direct mattress placement, eliminating the need for a box spring. Simply place your mattress directly onto the wooden slats. For optimal support and mattress longevity, a mattress thickness of 8 to 12 inches is recommended.

Figure 5: Recommended Mattress Height. This image illustrates the recommended mattress height range (8"-14") for use with the bed frame, indicating that no box spring is required.

Maintenance

- **Cleaning:** For the fabric upholstered headboard and frame, use a soft, damp cloth to wipe away dust and light stains. For deeper cleaning, a fabric cleaner suitable for linen may be used, following the product's instructions. Test on an inconspicuous area first.
- **Frame Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent squeaks.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals on any part of the bed frame, as this may damage the finish or fabric.
- **Weight Distribution:** Ensure weight is evenly distributed on the bed to prevent undue stress on the frame and slats.

Troubleshooting

Problem	Possible Cause	Solution
Squeaking noises	Loose bolts or connections; slats rubbing against the frame.	Ensure all assembly bolts are securely tightened. Verify that the EVA mute pads are correctly positioned between the slats and the frame.
Bed frame feels unstable	Improper assembly; uneven floor; loose legs.	Re-check all connections according to the assembly instructions. Ensure the bed is placed on a level surface. Tighten all leg connections.
Mattress sagging	Incorrect mattress thickness; damaged slats.	Ensure your mattress thickness is within the recommended 8"-12" range. Inspect wooden slats for any damage or breakage and replace if necessary.

Specifications

Attribute	Detail
Size	King
Color	Dark Grey
Material	Fabric & Wood & Iron
Product Dimensions (L x W x H)	81.5"L x 78"W x 40"H
Weight Capacity	800 lbs
Box Spring Required	No
Included Components	Installation Tools and Accessories, Slats
Special Features	Easy Assembly, Noise-Free, Upgraded Heavy-Duty Structure, Upholstered Headboard

Warranty and Support

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official iPormis store page. For any support inquiries, please contact iPormis customer service.
Visit the official iPormis store: iPormis Store on Amazon

© 2025 iPormis. All rights reserved.