Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VEVOR JC-60

VEVOR Electric Humidor JC-60 User Manual

Model: JC-60

1. Important Safety Instructions

Please read all instructions carefully before using this appliance to ensure safe operation and optimal performance. Retain this manual for future reference.

- Ensure the humidor is placed on a stable, level surface to prevent tipping.
- Do not block ventilation openings. Allow adequate space around the unit for proper air circulation.
- Keep the appliance away from direct sunlight, heat sources (radiators, heaters), and extreme cold.
- Do not operate the humidor with a damaged power cord or plug. If damaged, contact VEVOR customer support.
- Unplug the humidor before cleaning or performing any maintenance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is intended for household use only.
- Keep out of reach of children.

2. Product Overview

The VEVOR Electric Humidor JC-60 is designed to provide a stable and controlled environment for storing cigars. It features compressor cooling, precise temperature and humidity control, and Spanish cedar wood components.



Figure 2.1: Front view of the VEVOR Electric Humidor JC-60.

Key Features:

- **Capacity:** 60L, accommodating approximately 350 cigars (actual capacity varies by cigar size).
- **Temperature Control:** Adjustable range of 59–72°F (15–22°C).
- **Humidity Control:** Adjustable range of 60–80% RH.
- **Compressor Cooling:** Ensures stable temperature and humidity.
- **Spanish Cedar Wood:** Includes shelves and drawers for optimal cigar aging and aroma.

- **Double-Layer Tempered Glass Door:** Provides insulation and UV protection.
- **Soft LED Lighting:** Illuminates the interior for easy viewing.
- **Mechanical Door Lock:** For added security.

3. Setup and Installation

3.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the humidor for any shipping damage. If damage is found, do not plug in the unit and contact VEVOR customer support.
- Remove all internal packing, including shelves and drawers, for cleaning.

3.2 Placement

- Place the humidor on a firm, level floor or counter that can support its weight when fully loaded.
- Ensure there is at least 5 inches (12.7 cm) of space at the back and sides for proper ventilation.
- Avoid placing the unit in direct sunlight or near heat-generating appliances (e.g., oven, dishwasher, refrigerator).
- Do not install in areas with extreme cold or high humidity.

3.3 Initial Cleaning and Seasoning

- Before first use, wipe the interior and exterior with a clean, damp cloth. Do not use abrasive cleaners.
- The Spanish cedar shelves and drawers require seasoning to prevent them from absorbing moisture from your cigars. Lightly wipe the cedar components with a clean cloth dampened with distilled water. Do not soak.
- Allow the cedar to air dry completely before placing them back into the humidor.

3.4 Water Tank Preparation

The humidor includes a circulating water tank for humidity control.



Figure 3.1: Illustration of the circulating water tank and internal components.

- Locate the water tank at the bottom of the humidor.
- Fill the water tank with**pure or distilled water only**. Do not use tap water, as minerals can cause buildup and affect performance.
- Ensure the water level is between the minimum and maximum marks.

- Regularly check and refill the water tank as needed.

3.5 Power Connection

- After the humidor has been in its final position for at least 2-4 hours (to allow compressor fluids to settle), plug the power cord into a grounded electrical outlet.
- The display panel should illuminate.

4. Operating Instructions

4.1 Control Panel Overview

The humidor features a touch-control display panel for easy adjustments.



Figure 4.1: Touch control panel for temperature and humidity settings.

- **Power Button:** Turns the unit on or off.
- **Temperature Adjustment Buttons (+/-):** Increases or decreases the set temperature.
- **Humidity Adjustment Buttons (+/-):** Increases or decreases the set humidity.
- **Light Button:** Toggles the interior LED light on or off.
- **°C/°F Button:** Switches between Celsius and Fahrenheit temperature display.
- **Amonia Removal Button:** Activates the ammonia reduction function (if available on your model).

4.2 Setting Temperature and Humidity

1. Press the Power button to turn on the humidor.
2. Use the Temperature Adjustment buttons (+/-) to set your desired temperature between 59–72°F (15–22°C). The display will flash while adjusting and then set.
3. Use the Humidity Adjustment buttons (+/-) to set your desired humidity between 60–80% RH. The display will flash while adjusting and then set.
4. The humidor will automatically work to maintain these set conditions.

4.3 Loading Cigars

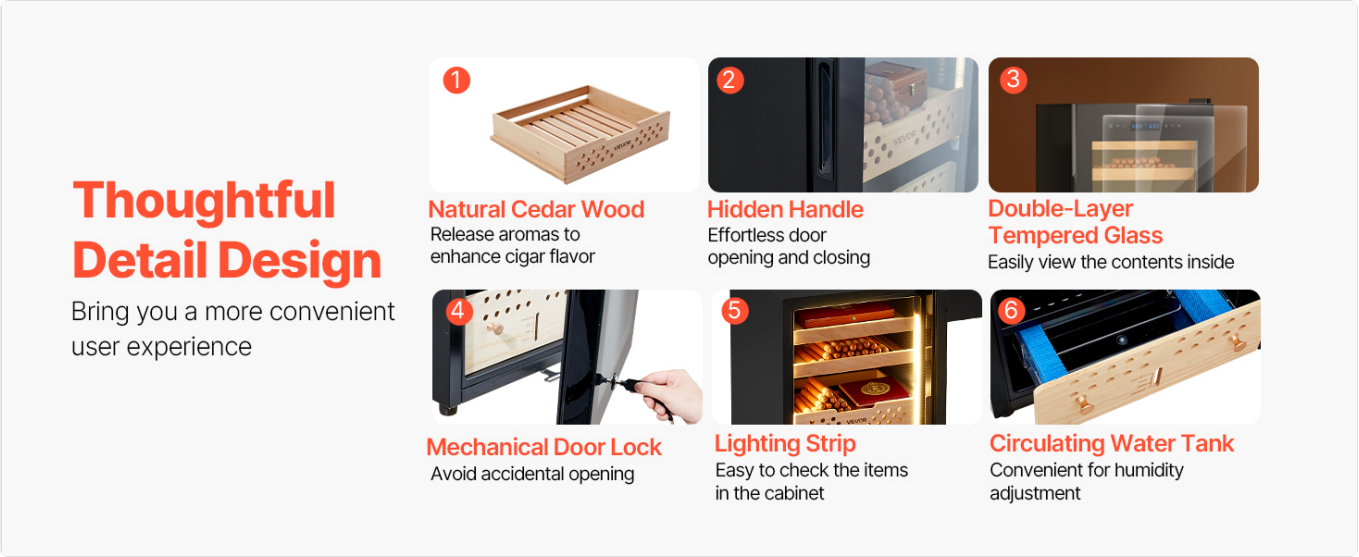


Figure 4.2: Interior with Spanish cedar shelves and drawers.

- Ensure the humidor has reached your desired temperature and humidity levels before adding cigars.
- Place cigars directly onto the Spanish cedar shelves or into the drawers. Avoid overcrowding to allow for proper air circulation.
- Close the door firmly. The mechanical lock can be used for security.

5. Maintenance

5.1 Cleaning the Interior and Exterior

- Always unplug the humidor before cleaning.
- Wipe the exterior with a soft, damp cloth. For stubborn stains, use a mild soap solution, then wipe with a clean damp cloth and dry thoroughly.
- Clean the interior with a soft cloth dampened with distilled water. Do not use harsh chemicals or abrasive cleaners, as they can damage the cedar wood and interior surfaces.
- Ensure the interior is completely dry before plugging the unit back in and reloading cigars.

5.2 Water Tank Maintenance

- Regularly check the water level in the tank and refill with pure or distilled water as needed.
- Clean the water tank every 1-2 months to prevent mold or mineral buildup. Remove the tank, empty it, and wash with a mild soap solution. Rinse thoroughly with pure water and dry before refilling and replacing.

5.3 Spanish Cedar Wood Care

- The Spanish cedar shelves and drawers are designed to enhance cigar flavor and maintain humidity. Avoid using any cleaning agents on them.
- If the cedar appears dry, you may lightly wipe it with a cloth dampened with distilled water, similar to the initial seasoning process.

6. Troubleshooting

Review the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Humidor does not power on.	No power supply; power cord not properly connected; faulty outlet.	Check power cord connection. Ensure outlet is functional by testing with another appliance. Check circuit breaker.
Temperature/Humidity not reaching set point.	Door not closed properly; humidor overloaded; poor ventilation; ambient temperature too high/low; water tank empty.	Ensure door is sealed. Reduce cigar load. Check for proper ventilation around the unit. Relocate humidor if ambient conditions are extreme. Refill water tank with pure water.
Excessive noise.	Humidor not level; objects touching the unit; normal compressor operation.	Adjust leveling feet to ensure the unit is stable. Ensure nothing is touching the humidor. A slight hum from the compressor is normal.
Display panel unresponsive or not working.	Temporary electronic glitch; power issue.	Unplug the unit for 5 minutes, then plug it back in. If the issue persists, contact customer support.
Unusual odor inside.	New unit odor; mold/mildew; cigars themselves.	Allow unit to air out before first use. Clean interior and water tank thoroughly. Ensure proper humidity levels are maintained to prevent mold.

7. Specifications

Technical specifications for the VEVOR Electric Humidor JC-60.

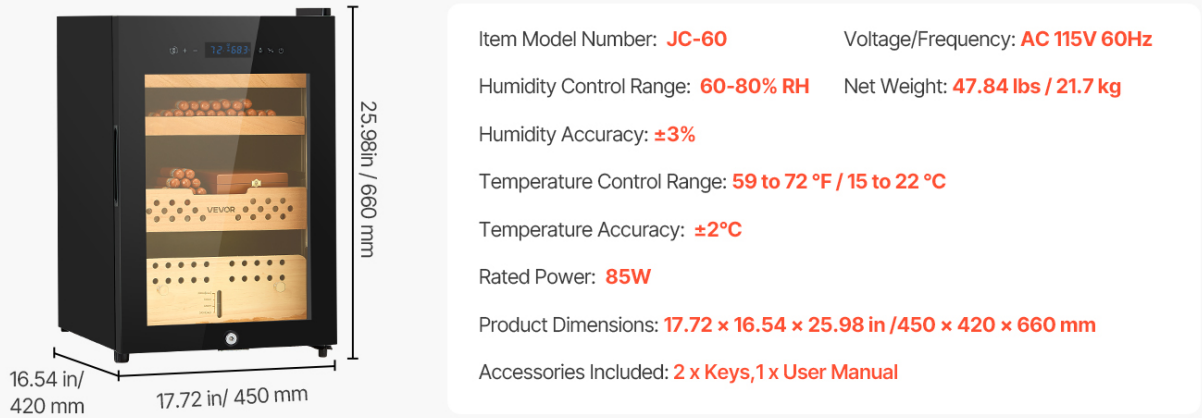


Figure 7.1: Product dimensions and specifications.

Feature	Specification
Model Number	JC-60
Product Dimensions (W x D x H)	17.72 x 16.54 x 25.98 inches (450 x 420 x 660 mm)
Net Weight	44.97 lbs (20.4 kg)
Temperature Control Range	59–72°F (15–22°C)

Feature	Specification
Temperature Accuracy	±2°C
Humidity Control Range	60–80% RH
Humidity Accuracy	±3%
Rated Power	85W
Voltage/Frequency	AC 220-240V 50Hz (Note: Some models may be AC 115V 60Hz)
Accessories Included	2 x Keys, 1 x User Manual

8. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or visit the official VEVOR website. If you encounter any issues not covered in this manual, please contact VEVOR customer service for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question