KOLINK Stronghold Prism ARGB Midi Tower Case User Manual
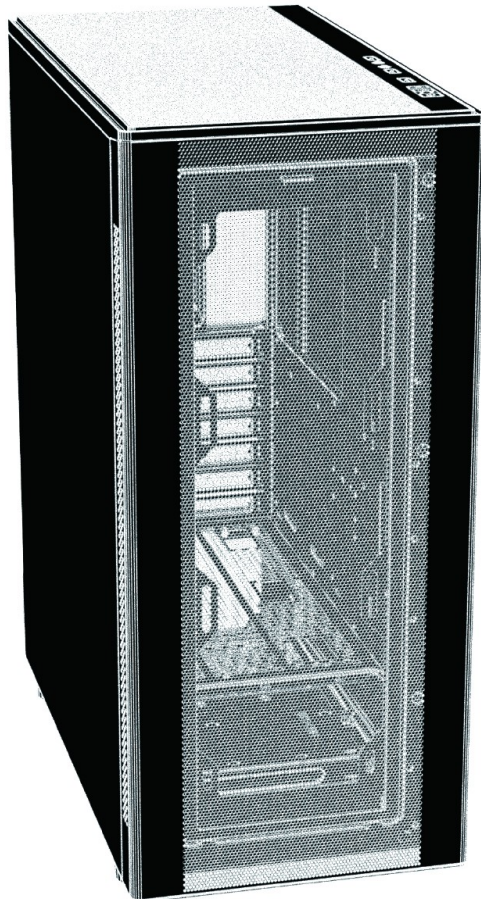
STRONGHOLD PRISM

ARGB MIDI TOWER CASE
USER MANUAL

Contents

ACCESSORY PACK CONTENTS

PANEL REMOVAL

PANEL REMOVAL

- Left Panel – Pull the tab to open the hinged glass panel and lift off the hinges
- Right Panel – Unscrew the two thumbscrews and slide off.
- Front Panel – Find the bottom cut out, stabilise the chassis with one hand, and pull from the cutout with a little force until the clips release
- Top Panel – Locate the lip at the back of the panel and pull firmly up and away, stabilising the chassis with your other hand.
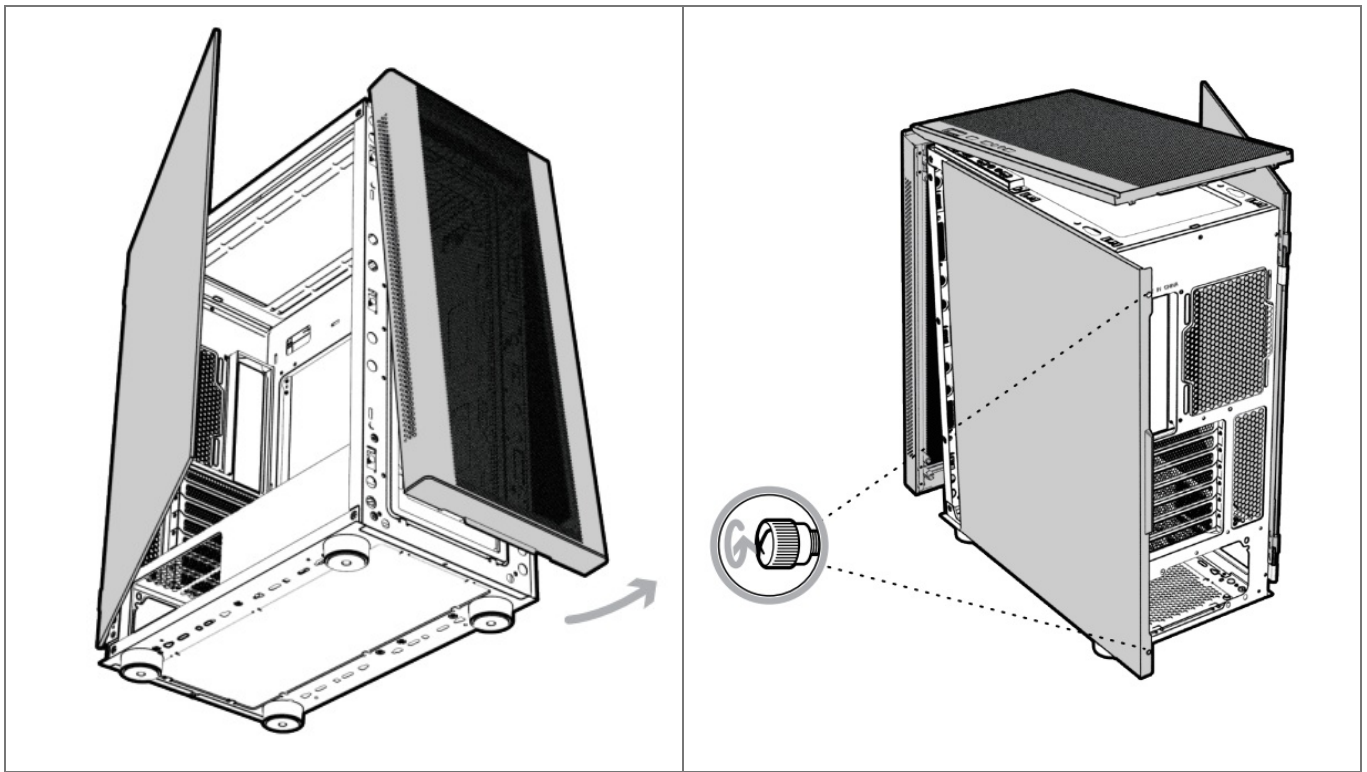
MOTHERBOARD INSTALLATION

MOTHERBOARD INSTALLATION

- Align your motherboard with the chassis to locate where the stand-offs should be installed. Once done, remove the motherboard and fasten stand-offs accordingly.
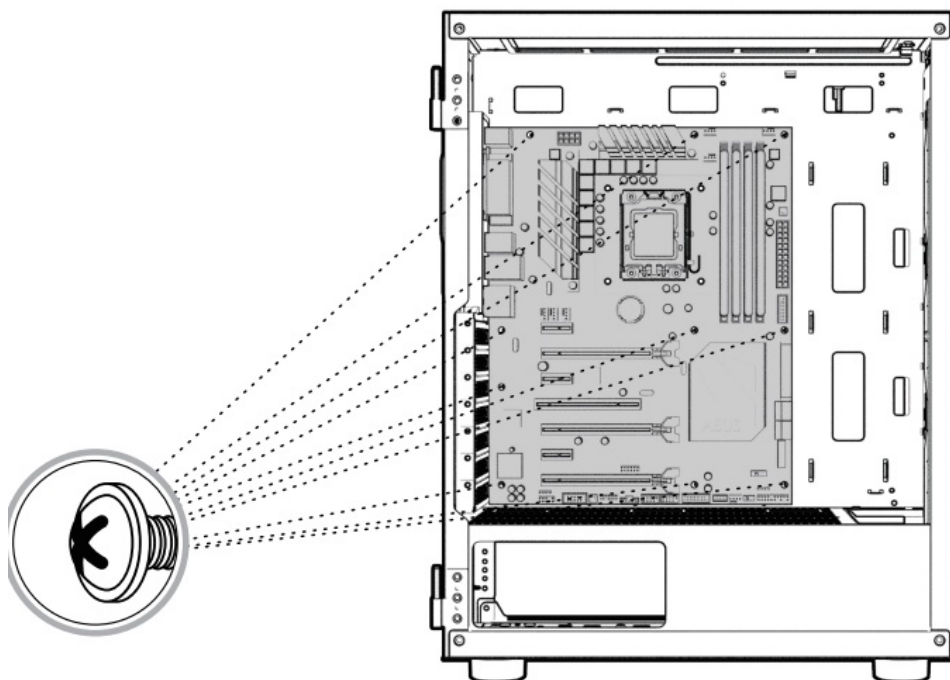- Insert your motherboard I/O plate into the cutout at the rear of the case.
- Place your motherboard into the chassis, making sure the rear ports fit into the I/O plate.
- Use the provided motherboard screws to attach your motherboard to the chassis.

POWER SUPPLY INSTALLATION

POWER SUPPLY INSTALLATION
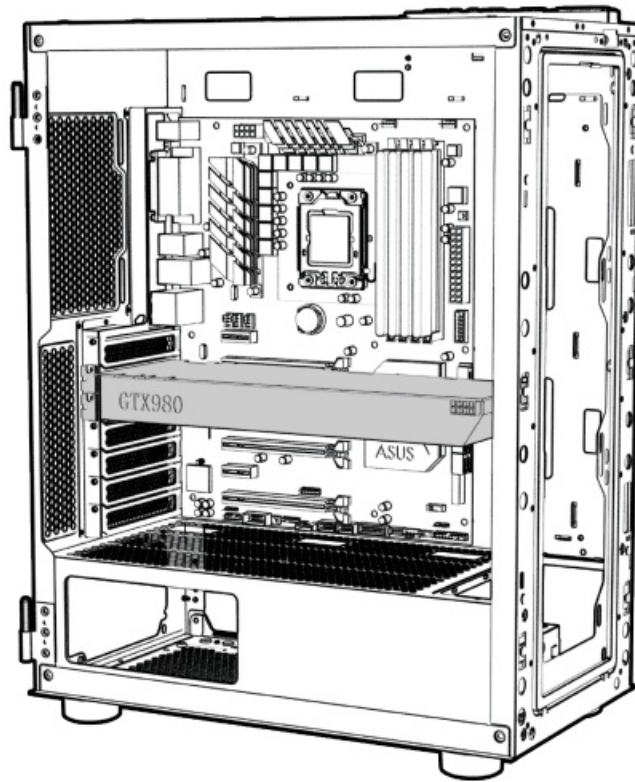
- Place PSU in the bottom rear of the case, within the PSU shroud.
- Align the holes and secure with screws.
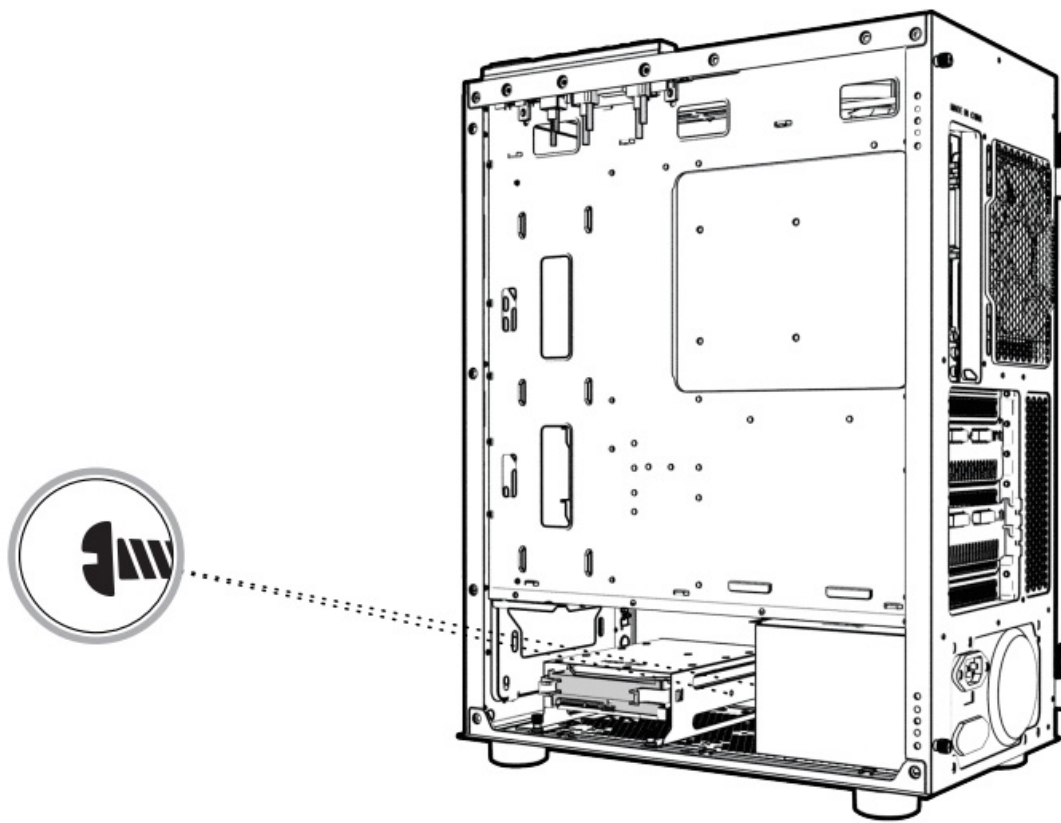
GRAPHICS CARD/PCI-E CARD INSTALLATION

VIDEO CARD/PCI-E CARD INSTALLATION

- Remove the rear PCI-E slot covers as necessary (depending on the slot size of your card)
- Carefully position and slide your PCI-E card into place, then secure with the add-on card screws supplied.
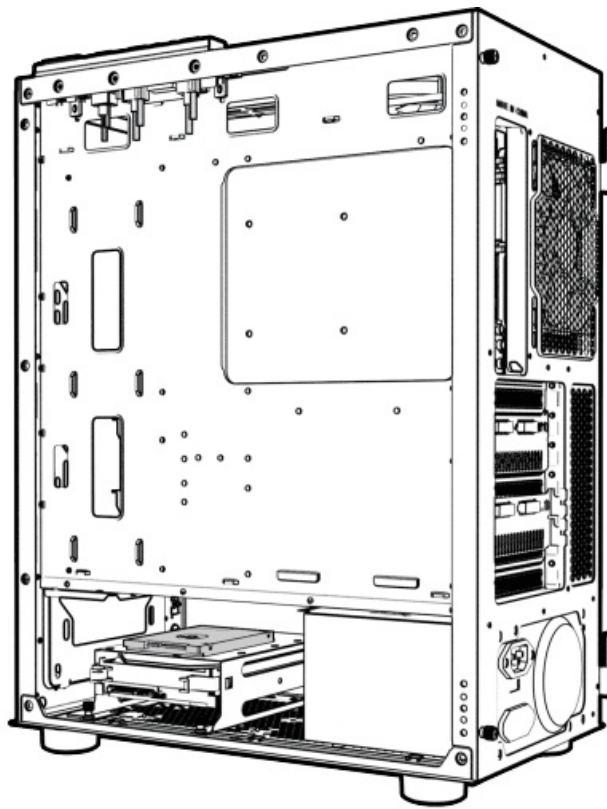
2.5″ SDD INSTALLATION (R)

2.5″ SSD INSTALLATION (REAR)

- Remove the bracket from the rear of the motherboard plate, attach your 2.5″ drives and then screw back into place.
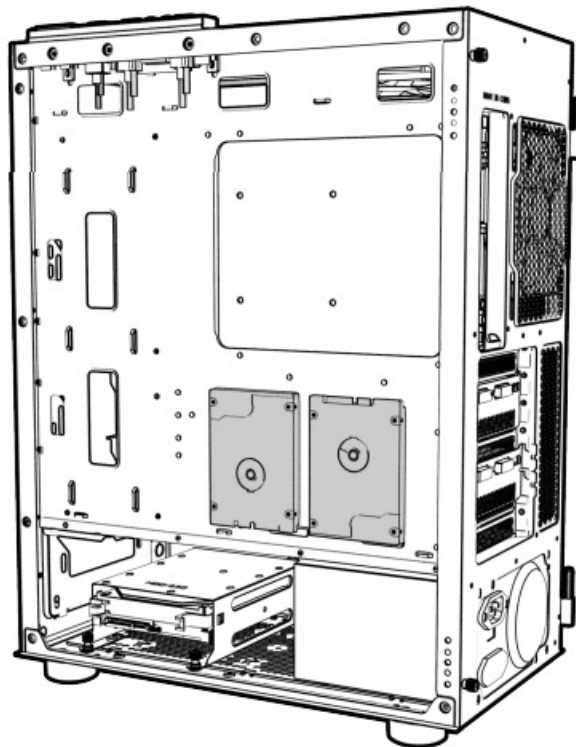
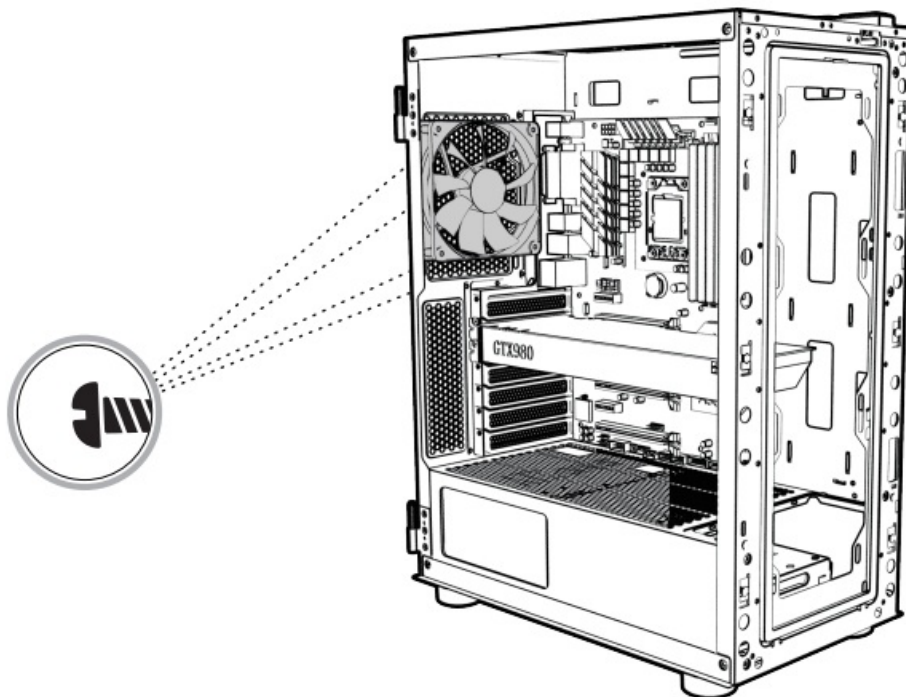2.5″ SSD INSTALLATION (REAR)

- Place the 2.5″ HDD/SSD into/on top of the HDD bracket and screw in if required.

3.5″ HDD INSTALLATION

3.5″ HDD INSTALLATION

- Place the 3.5″ HDD into/on top of the HDD bracket and screw in if requir
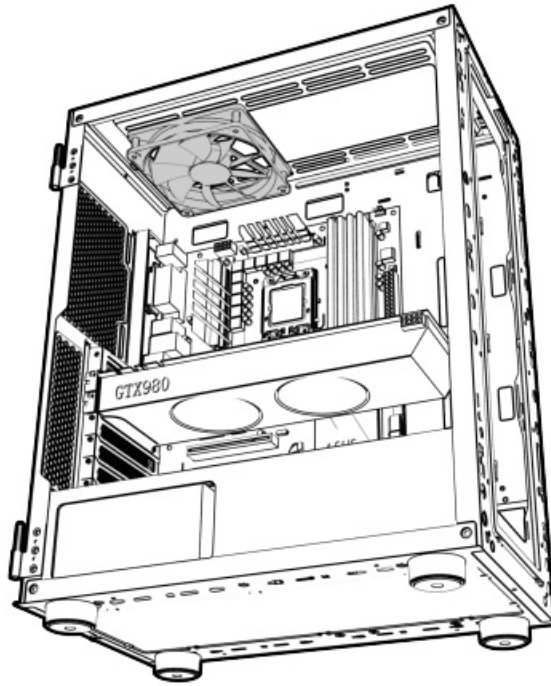

TOP FAN INSTALLATION

TOP FAN INSTALLATION

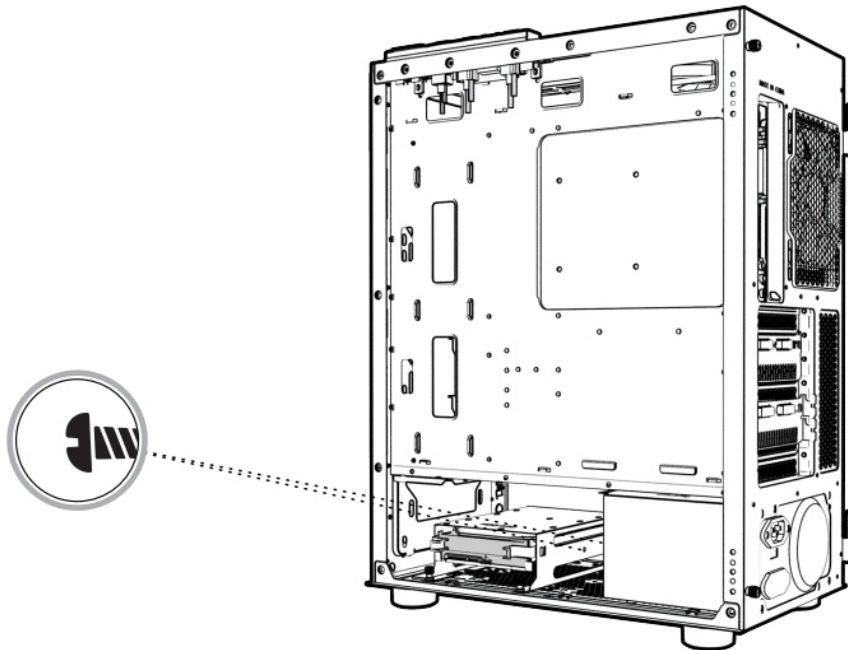- Remove the dust filter from the top of the case.

- Align your fan(s) to the screw holes on the top of the chassis and secure with screws.
- Replace your dust filter once secured.

FRONT/REAR FAN INSTALLATION
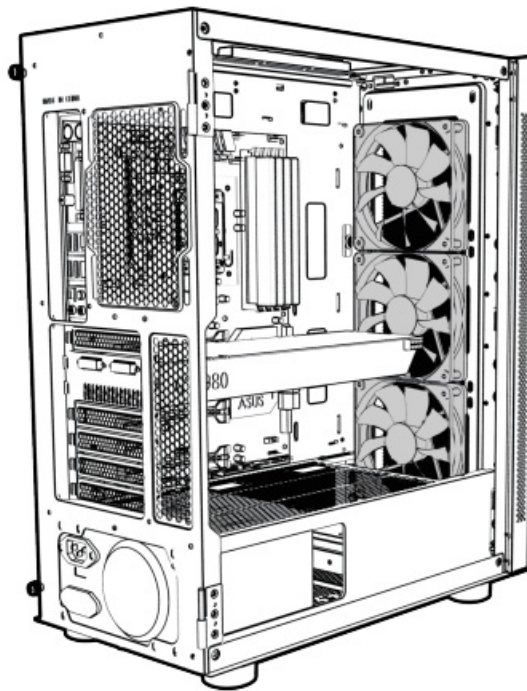
FRONT/REAR FAN INSTALLATION

- Align your fan to the screw holes on the chassis and secure with screws.

WATERCOOLING RADIATOR INSTALLATION

WATERCOOLING RADIATOR INSTALLATION

- Secure the fans to the radiator, then fasten the radiator inside the chassis by securing with screws from the outside.

Pro Gamersware GmbH
Gaußstraße 1, 10589 Berlin, Deutschland
info@gamersware.com
+49(0)30 83797272
www.kolink.eu | **support@kolink.eu**

The WEEE symbol indicates that this product must not be disposed of with normal household waste. Through the correct disposal of this product, you will help protect the environment. For more information on the disposal of this product, please contact your local municipality, your waste disposal service or the shop where you purchased the product.

Documents / Resources

KOLINK Stronghold Prism ARGB Midi Tower Case [pdf] User Manual
Stronghold Prism ARGB Midi Tower Case, Prism ARGB Midi Tower Case, ARGB Midi Tower Case, Midi Tower Case, Tower Case, Case

References

- 🌐 **Home**
- **User Manual**