Step2 5025 Timberview Mailbox and Post Kit User Manual

Contents

1 Step2 5025 Timberview Mailbox and Post Kit
2 REQUIRED FOR INSTALLATION
3 CLEANING INSTRUCTIONS
3.1 DISPOSAL INSTRUCTIONS
4 Mail Post Extender Bracket™ kit from Kingsley Park™.
4.1 REQUIRED (Not Included)
5 Documents / Resources
5.1 References
6 Related Posts

Step2 5025 Timberview Mailbox and Post Kit

SAVE THIS SHEET FOR FUTURE REFERENCE.

REQUIRED FOR INSTALLATION

Standard 4” x 4” treated (rot resistant) post cut to 80 – 84 inches in length (not included).
NOTE: With normal soil conditions and level ground, a standard 4”x4” post cut to 80-84 inches length is adequate for mounting your Step2 Timberview Mailbox and Post Kit™ with 24 inches in ground and 56-60 inches above ground.

CLEANING INSTRUCTIONS

General Cleaning: Use a 50/50 mixture of white vinegar and water.

DISPOSAL INSTRUCTIONS

Please recycle when possible. Disposal must be in compliance with all government regulations.
INSPECT THIS PRODUCT BEFORE EACH USE. TIGHTLY SECURE CONNECTIONS AND REPLACE DAMAGED OR WORN COMPONENTS. CONTACT THE STEP2 COMPANY FOR REPLACEMENT PARTS.

U.S.A RESIDENTS ONLY:
CUSTOMERS ARE REQUIRED TO CONTACT THE LOCAL POST OFFICE BEFORE INSTALLING THE MAILBOX TO ENSURE ITS CORRECT PLACEMENT AND HEIGHT AT THE STREET. GENERALLY, MAILBOXES ARE INSTALLED AT A HEIGHT OF 41 – 45 INCHES FROM THE ROAD SURFACE TO EITHER THE INSIDE SURFACE OF THE MAILBOX THAT THE MAIL IS PLACED ON BY THE CARRIER OR TO THE LOWEST EDGE OF MAIL ENTRY (FOR LOCKED MAIL SLOT DESIGNS) AND ARE SET BACK 6 – 8 INCHES FROM THE FRONT FACE OF CURB OR ROAD EDGE TO THE MAILBOX DOOR.

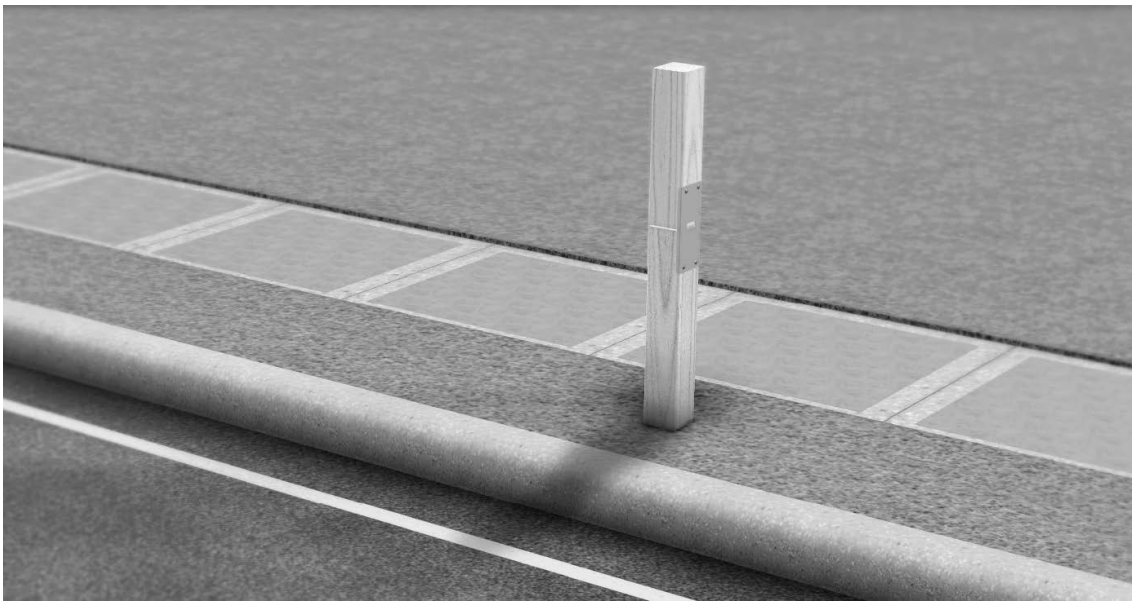

Mail Post Extender Bracket™ kit from Kingsley Park™.

- No need to dig, remove, or replace your existing 4×4 wood post to install a new mailbox or decorative mail post.
- The Mail Post Extender Bracket from Kingsley Park is a complete kit for easy installation to add height to an existing 4×4.
- Ideal for retrofit applications where an existing post is firmly mounted into the ground, in good condition, and straight (plumb).
- Simply connect the brackets to your existing post with the additional length of 4×4 wooden post required to install your new mailbox or mail post (4×4 posts are sold separately at most home and garden retailers).

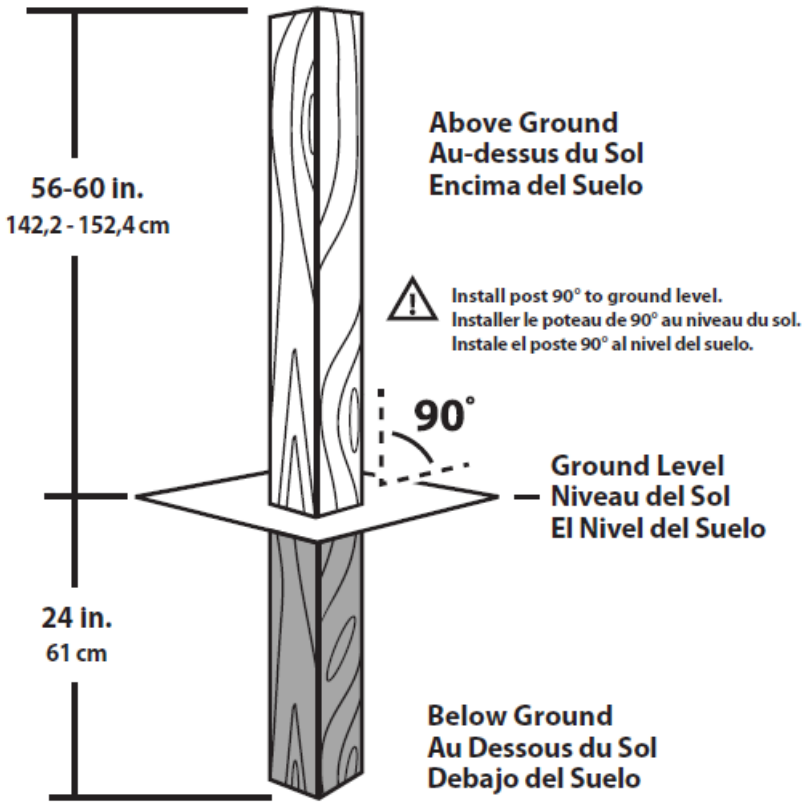

USING EXISTING POST:

Check that post is straight and firmly secured in ground.
Post must be 56 – 60 in. (142.2 – 152.4 cm) from ground.

- If post is higher than 60 in. (152.4 cm), measure from ground and cut post to proper height of 60 in. (152.4 cm).
- If post is shorter, post extender brackets (sold separately) can be used to extend post.

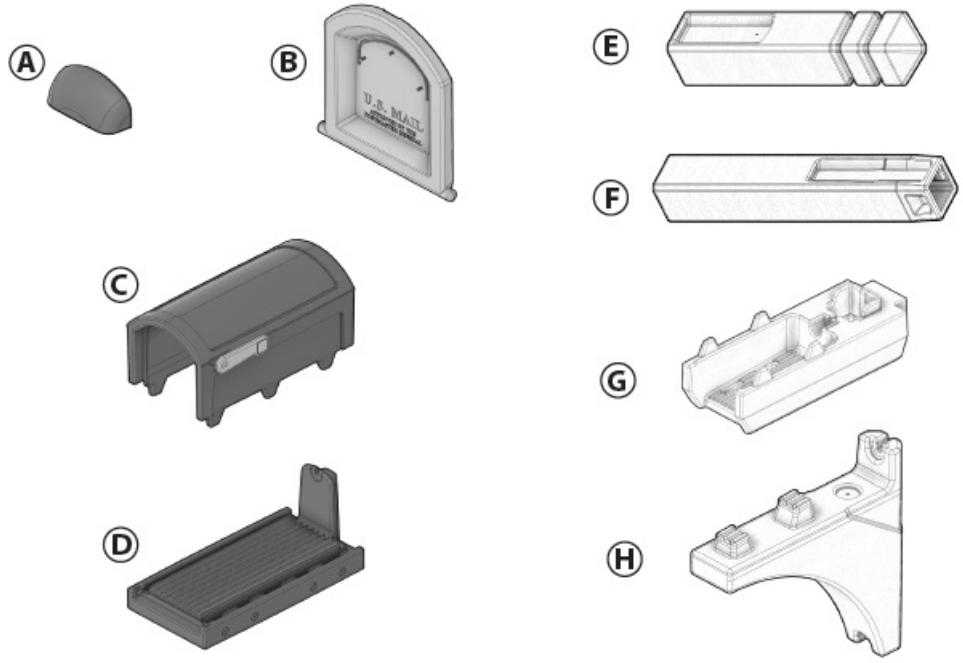

REQUIRED (Not Included)

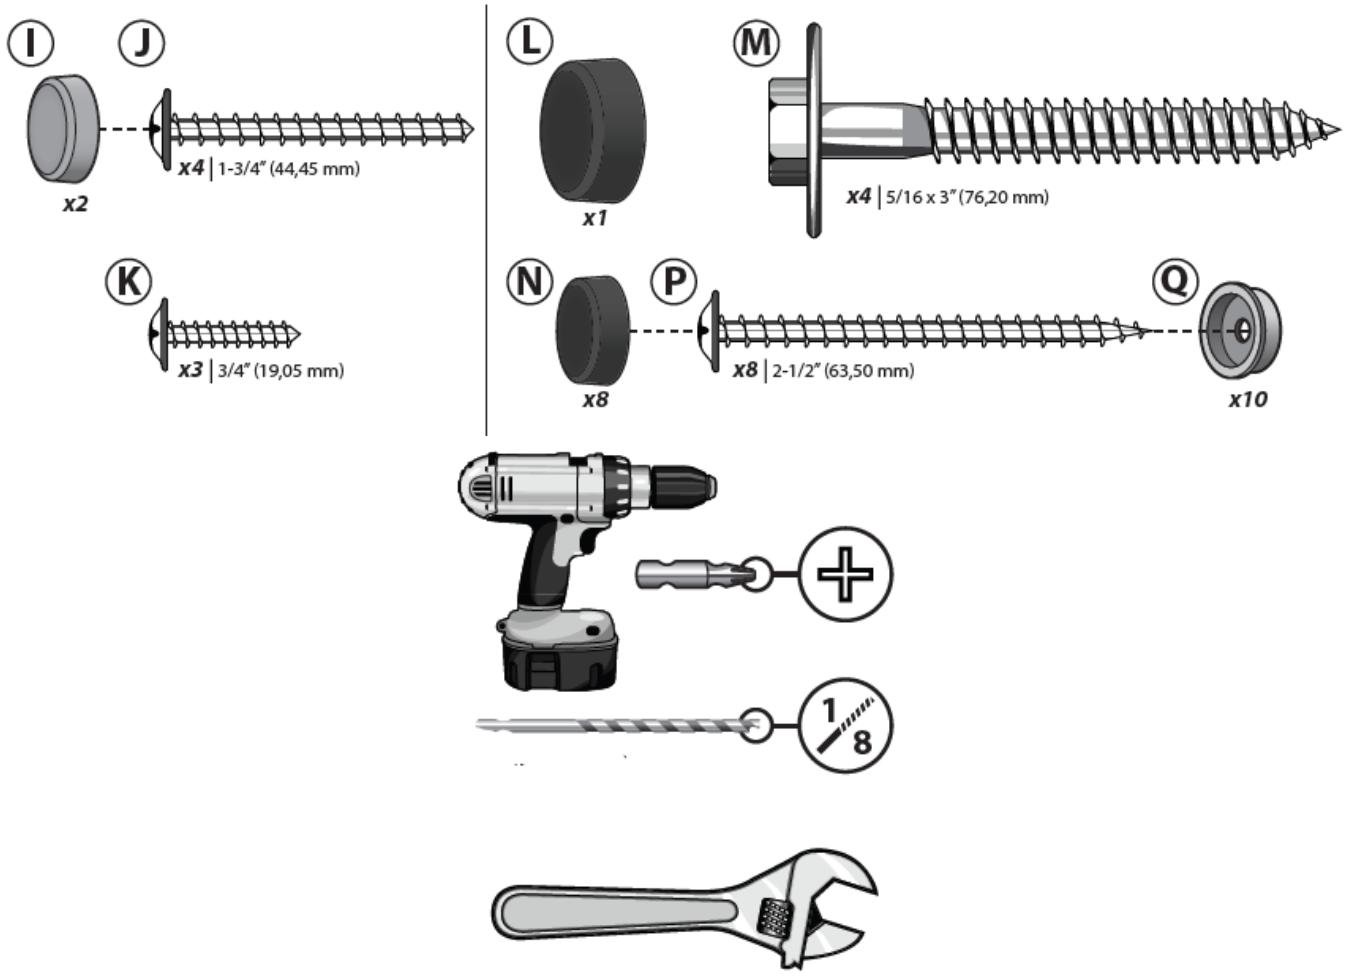

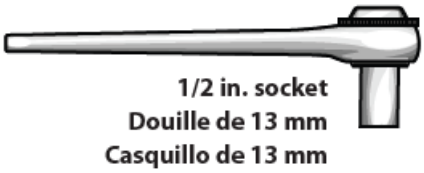

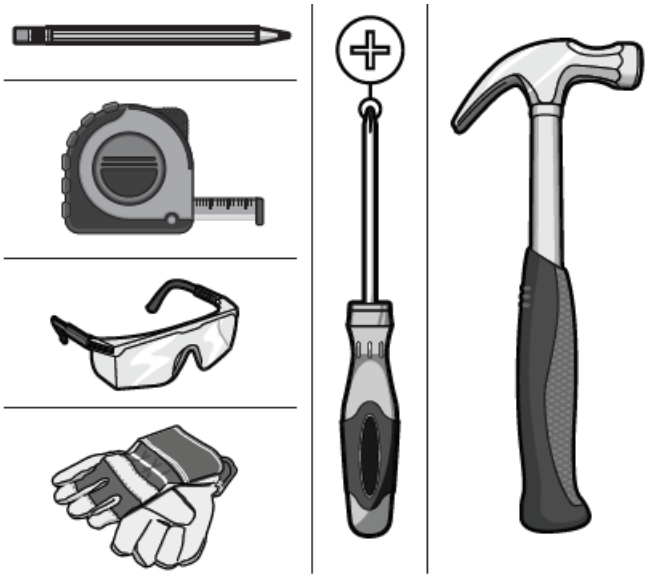

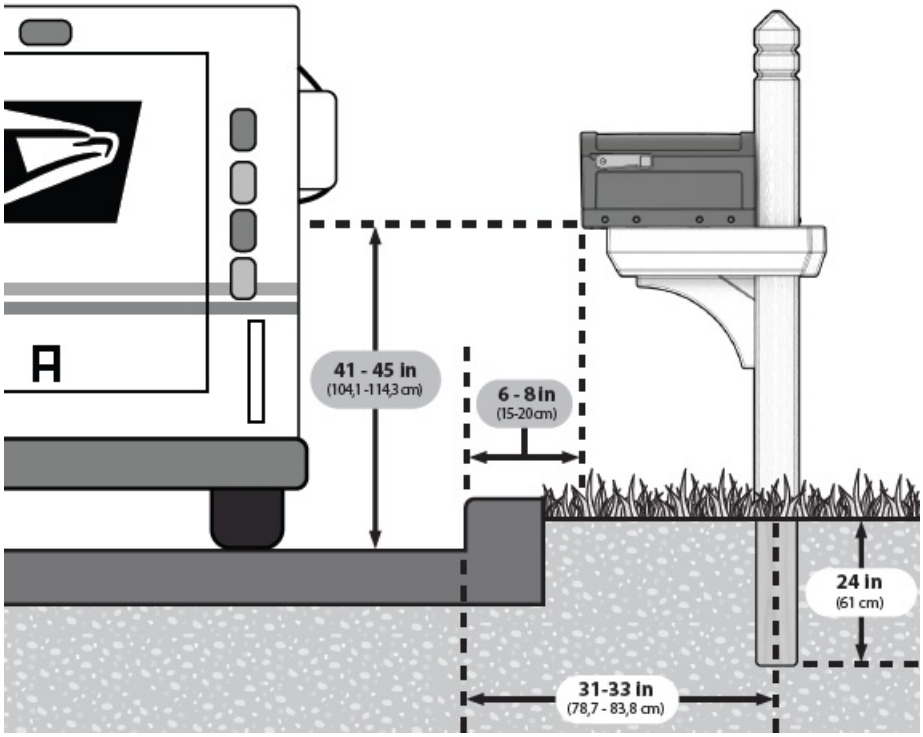

Measure mailbox to ensure a height of 41 – 45 inches (104.14 – 114.3 cm) from road surface to inside of shelf. Also make sure that mailbox is 6 – 8 Inches from the front face of the road edge to the mailbox door. Adjust your wood post accordingly to meet these requirements before bolting down mailbox.

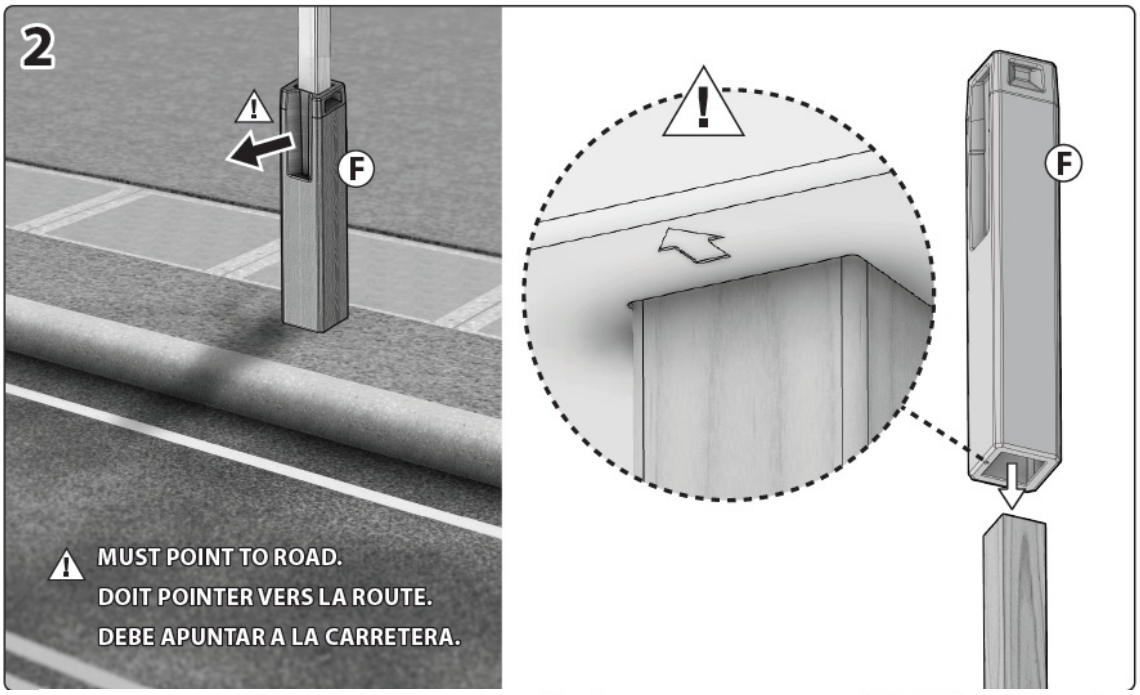
2
F
MUST POINT TO ROAD.
DOIT POINTER VERS LA ROUTE.
DEBE APUNTAR A LA CARRETERA.
F

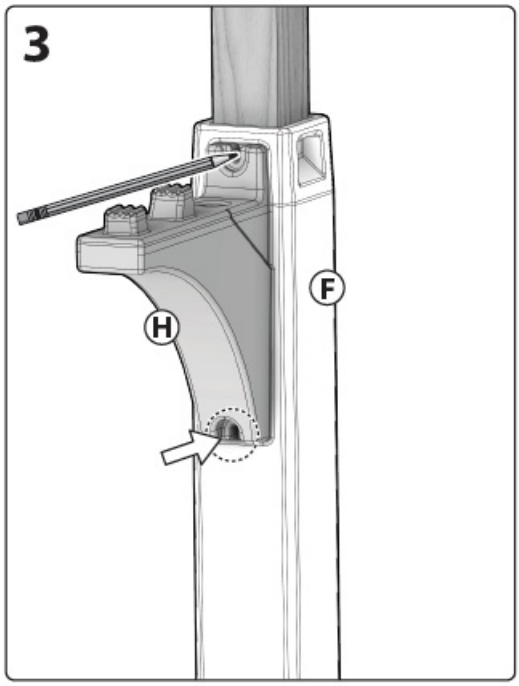
3
F
H

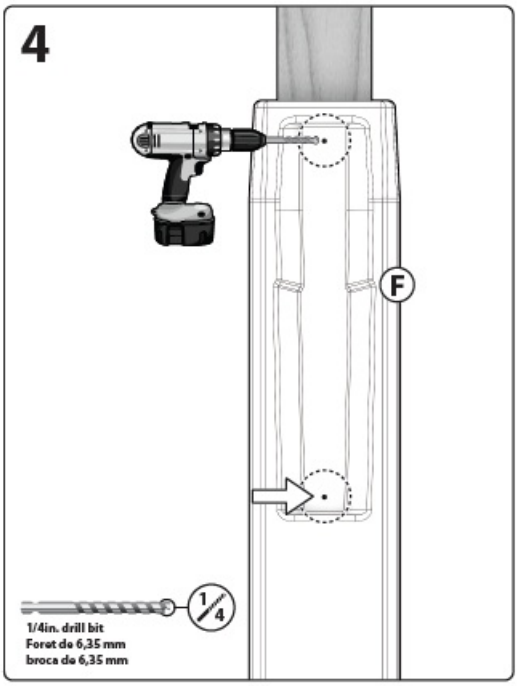
4
F
1/4
1/4in. drill bit
Foret de 6,35 mm
broca de 6,35 mm

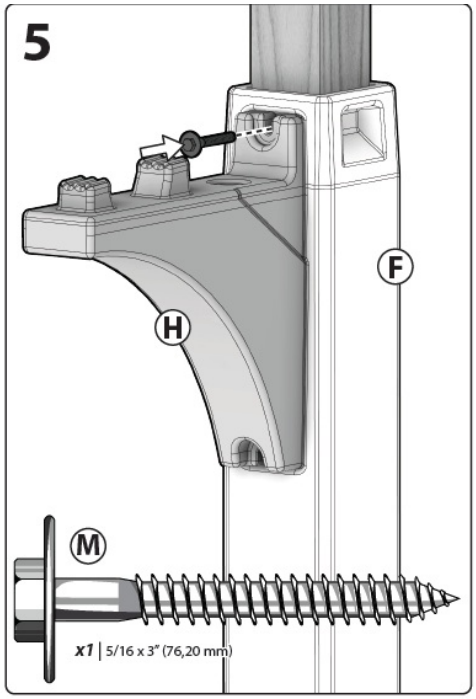
5
F
H
M
x1 | 5/16 x 3" (76,20 mm)

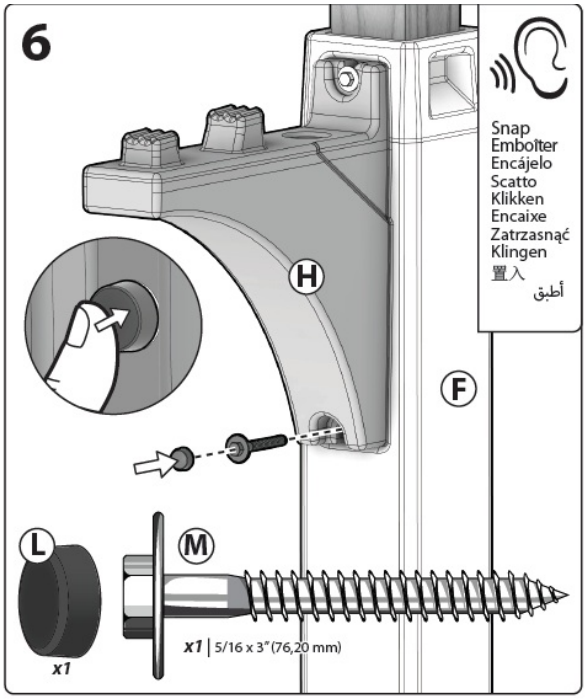
6
Snap
Emboîter
Encájelo
Scatto
Klikken
Encaixe
Zatrzasnąć
Klingen
置入
أطبق
H
F
L
x1
M
x1 | 5/16 x 3" (76,20 mm)

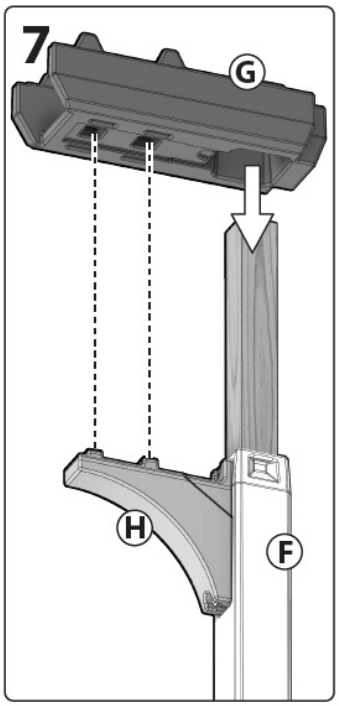
7
G
H
F

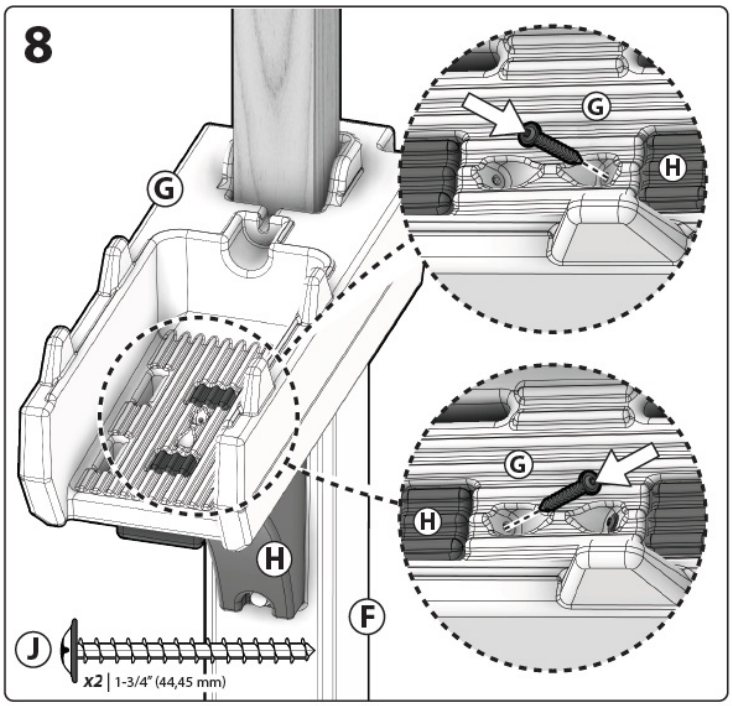
8
G
H
G
H
G
H
F
J
x2 | 1-3/4" (44,45 mm)

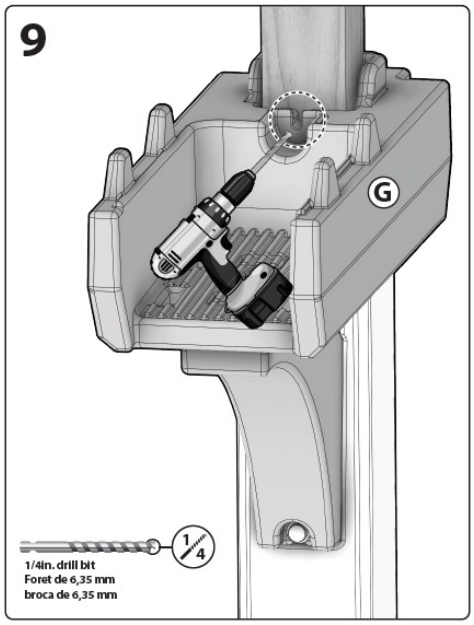
9
G
1/4
1/4in. drill bit
Foret de 6,35 mm
broca de 6,35 mm

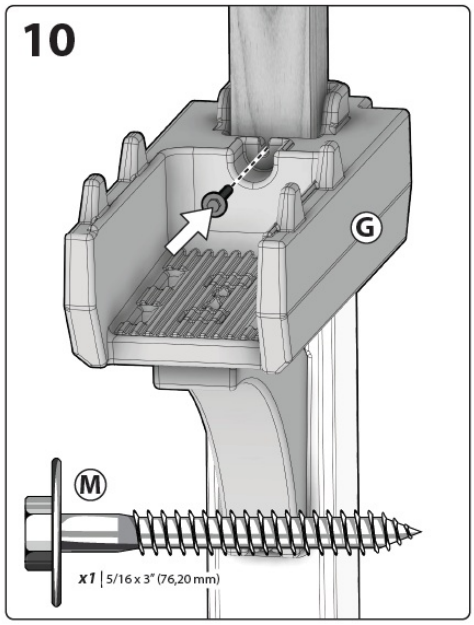
10
G
M
x1 | 5/16 x 3" (76,20 mm)

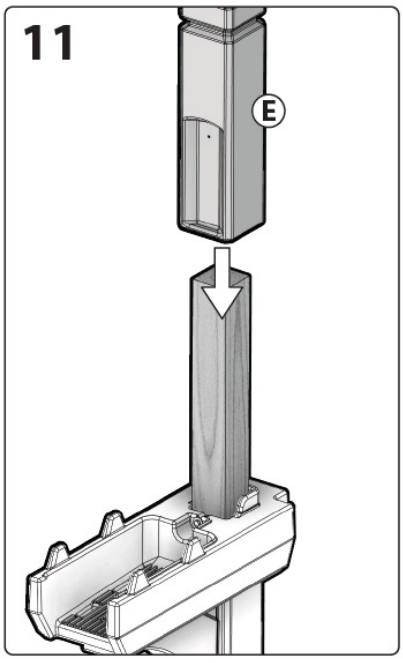
11
E

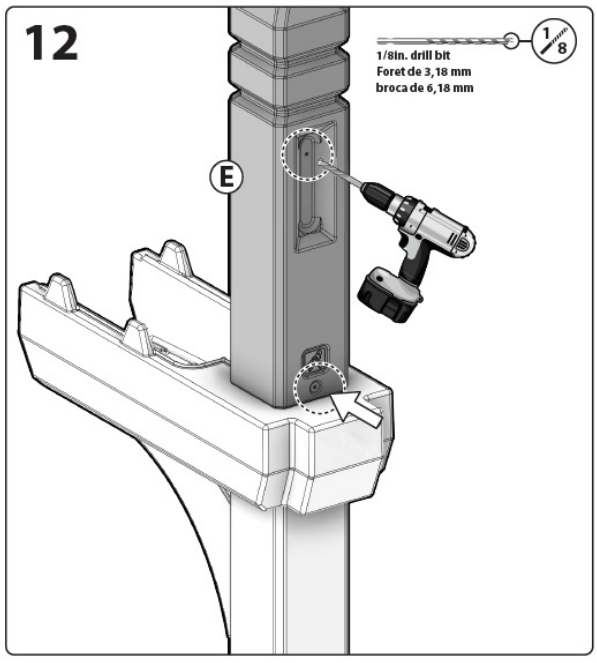
12
1/8
1/8in. drill bit
Foret de 3,18 mm
broca de 6,18 mm
E

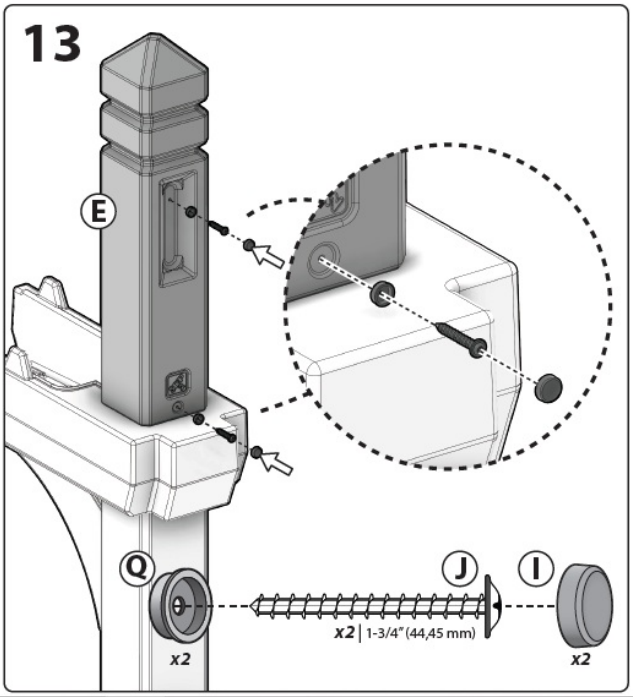
13
E
Q
J
I
x2 | 1-3/4" (44,45 mm)
x2
x2

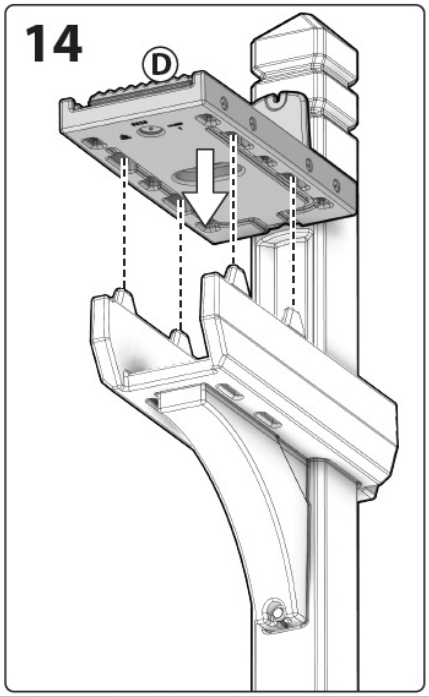
14
D

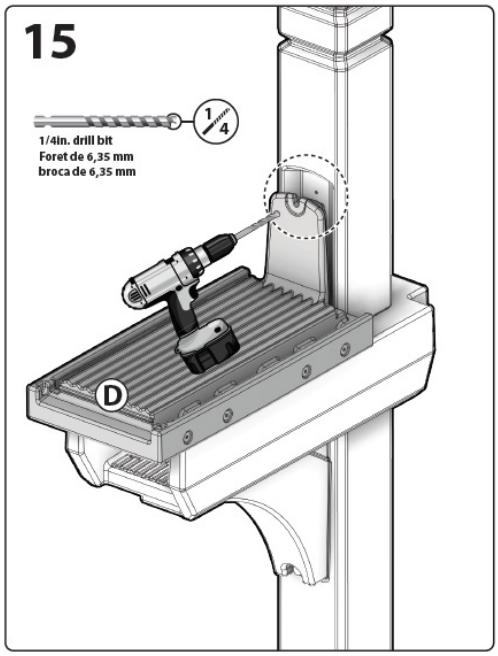
15
1/4
1/4in. drill bit
Foret de 6,35 mm
broca de 6,35 mm
D

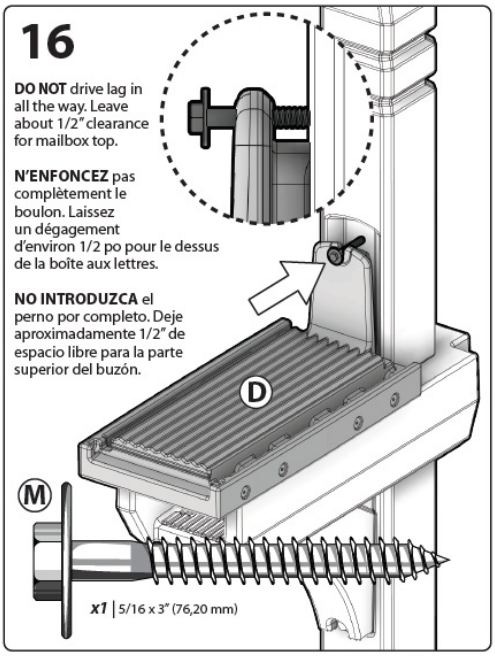
16
DO NOT drive lag in all the way. Leave about 1/2" clearance for mailbox top.
N'ENFONCEZ pas complètement le boulon. Laissez un dégagement d'environ 1/2 po pour le dessus de la boîte aux lettres.
NO INTRODUZCA el perno por completo. Deje aproximadamente 1/2" de espacio libre para la parte superior del buzón.
D
M
x1 | 5/16 x 3" (76,20 mm)

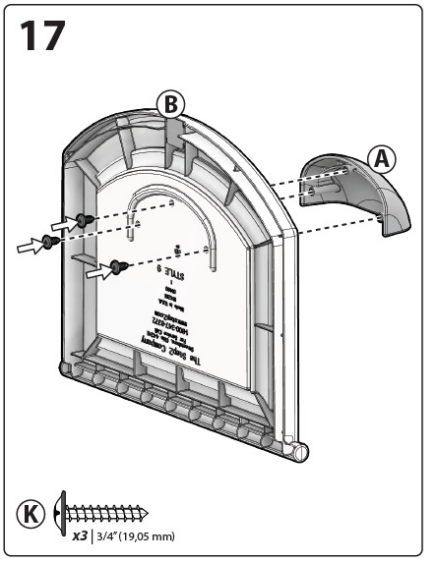
17
B
A
K
x3 | 3/4" (19,05 mm)

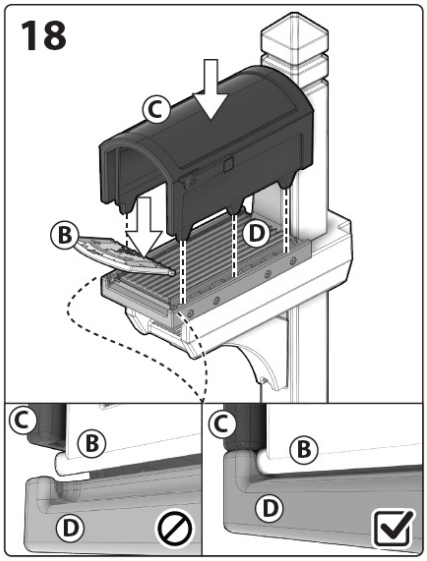
18
C
B
D
C
B
D
C
B
D

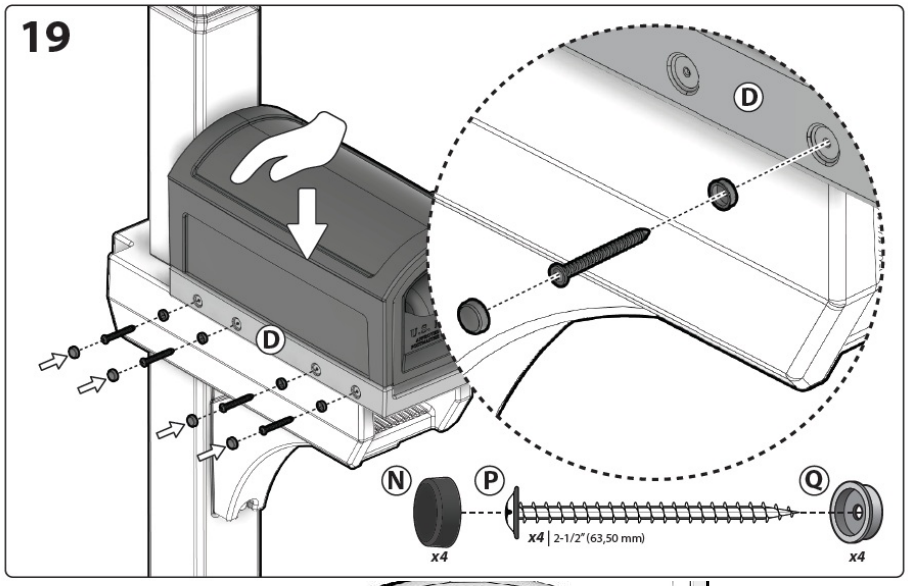
19
D
D
N
P
Q
x4
x4 | 2-1/2" (63,50 mm)
x4

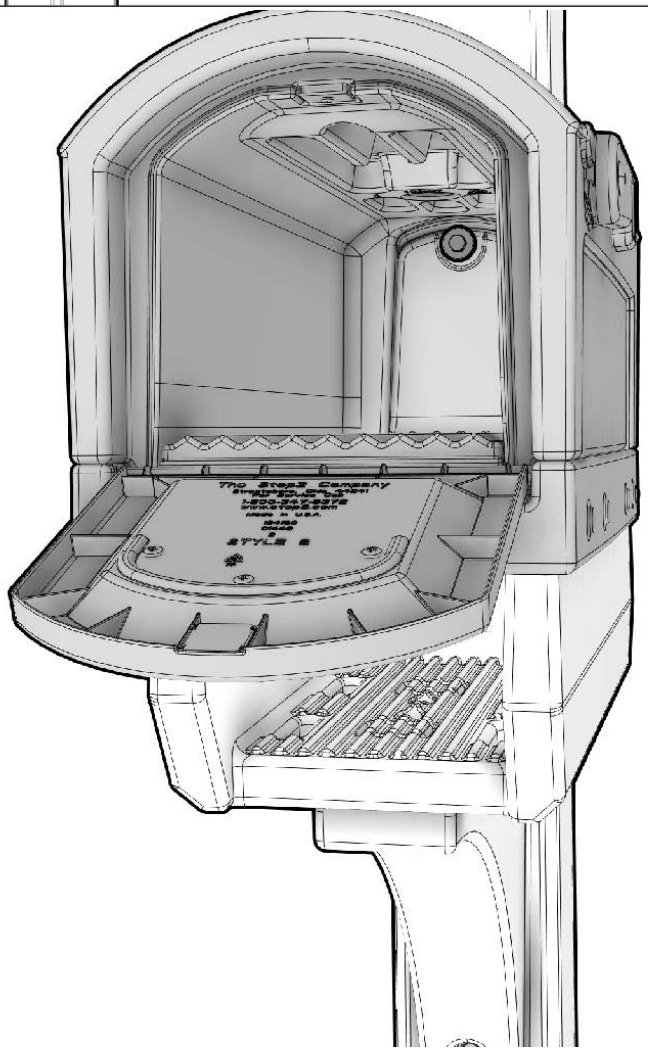

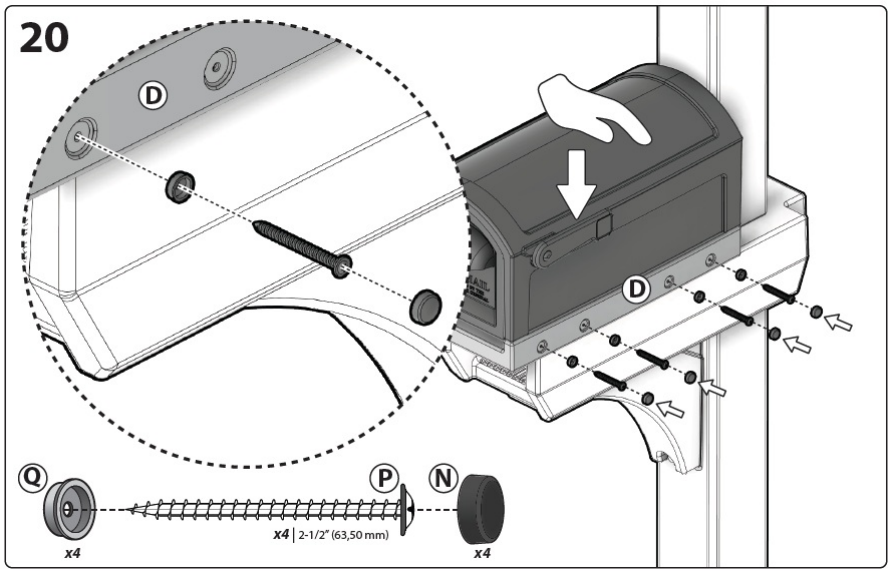

Planter Hanging Instructions: (Sold Separately)
REMOVE screw “J” (shown in step 13) and use hole for hanger.
Use same size screw 1 – 3/4” (44,45 mm) to mount hanger.
MEASURE plant hanger before purchasing from your preferred retailer.

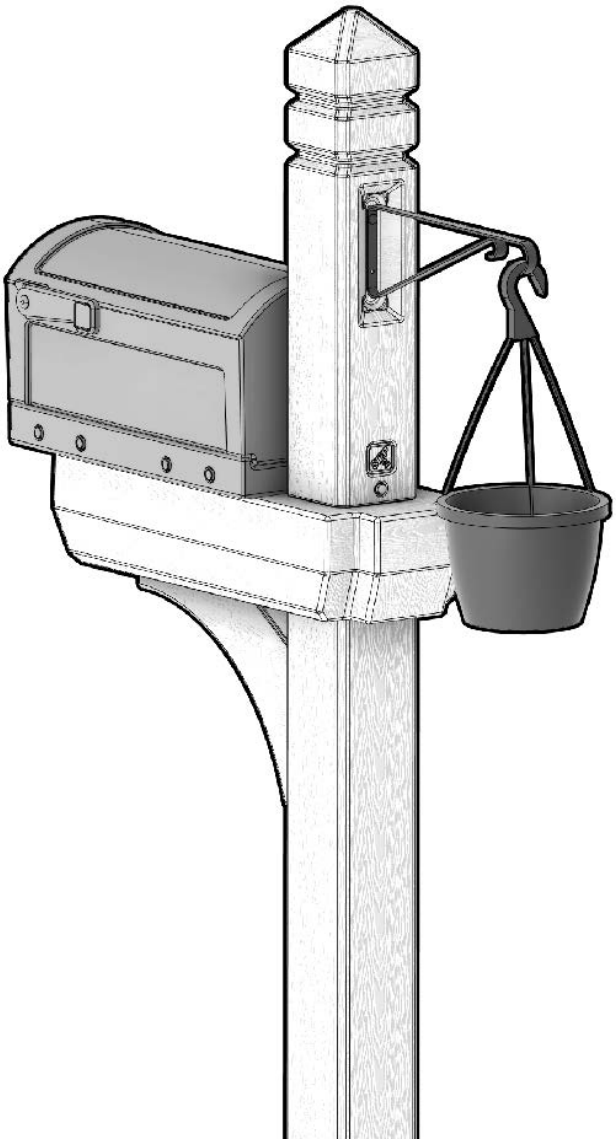

Documents / Resources

	Step2 5025 Timberview Mailbox and Post Kit [pdf] User Manual 5025, Timberview Mailbox and Post Kit, 5025 Timberview Mailbox and Post Kit, Mailbox and Post Kit, Post Kit

References

- Kingsley Park
- Kids Toys, Playhouses, Wagons & Outdoor Toys | Step2
- Kids Toys, Playhouses, Wagons & Outdoor Toys | Step2
- Assembly is easy with these tips & tricks!

Manuals+,