MobileDemand Scanner Combo Bundle for Surface Go Installation Guide

Contents

Scanner Combo Bundle for Surface Go

Surface Go Scanner Installation
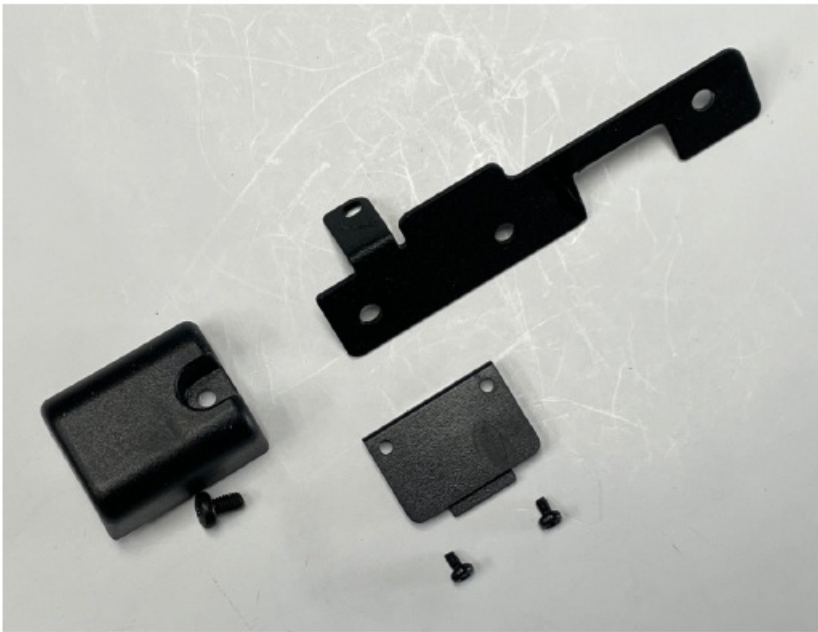
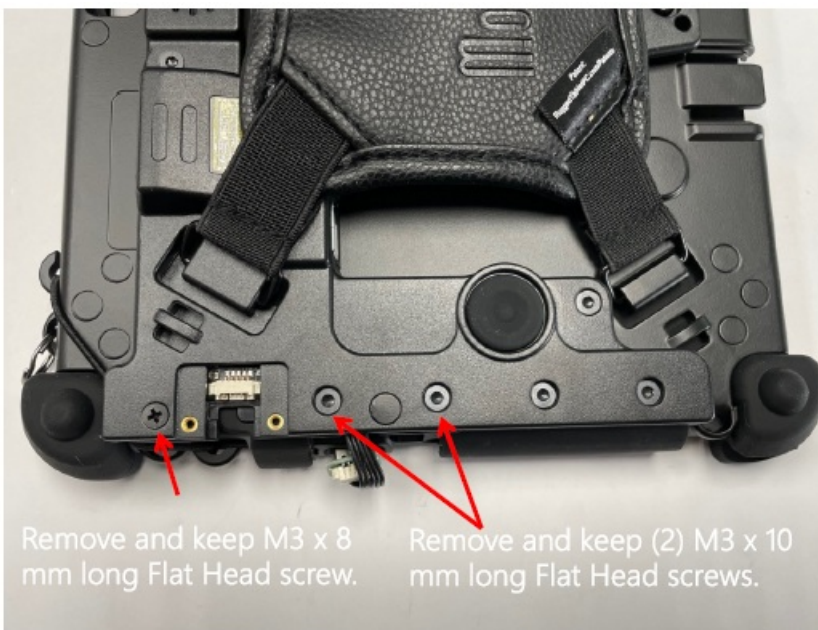1. Shown are the parts included in the Scanner Only Kit SG-SCN-ONLY-KIT-DFS.
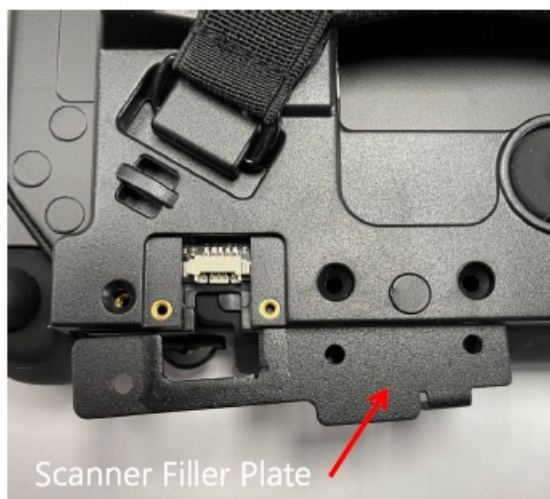
2. Install Tablet into the Case per instructions included with Case.
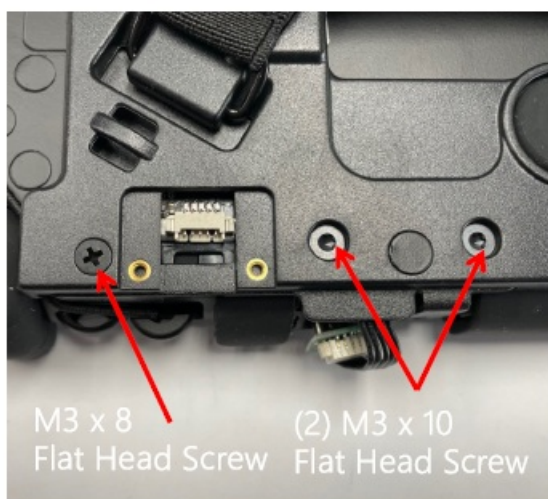Make sure the Scanner USB PCB does not extend into Case.

Remove and keep M3 x 8 mm long Flat Head screw.

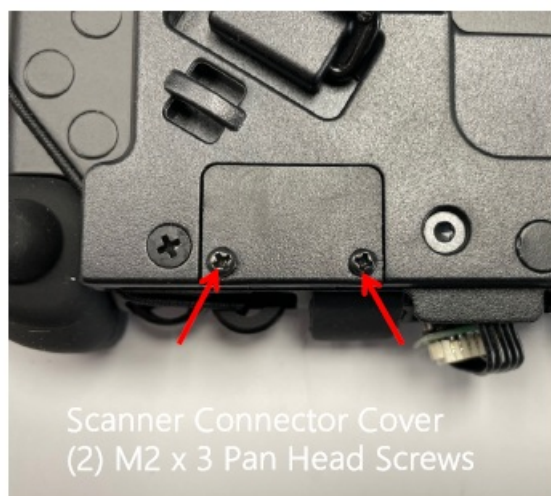Remove and keep (2) M3 x 10 mm long Flat Head screws.

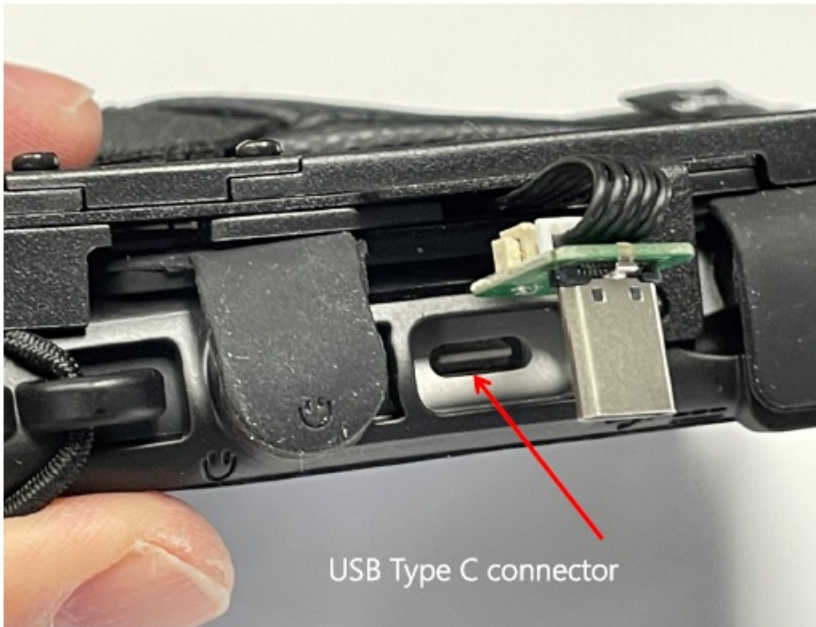3. Remove M3 x 8 & (2) M3 x 10 Flat Head screws.

Scanner Filler Plate

4. Install the Scanner Filler Plate.
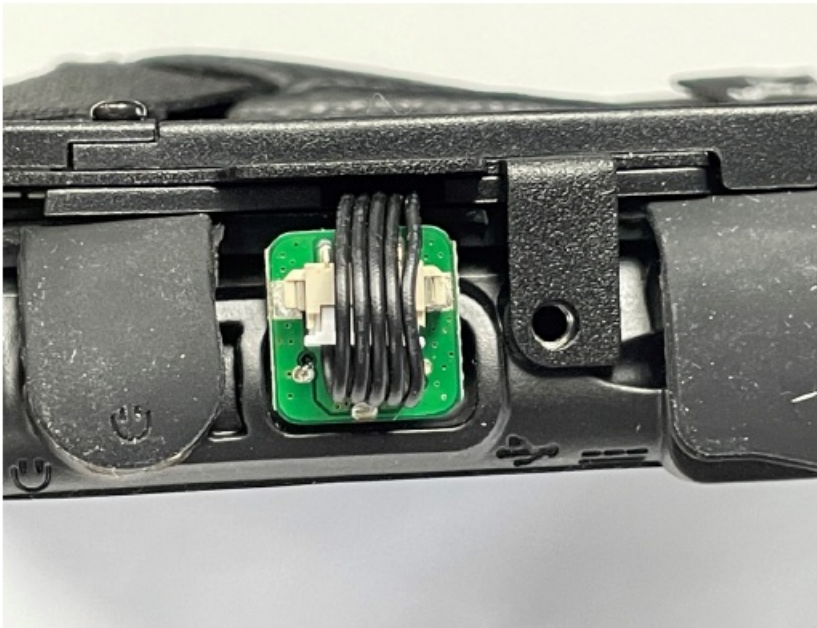

M3 x 8
Flat Head Screw

(2) M3 x 10
Flat Head Screw

5. Re-install the M3 x 8 and (2) M3 x 10 Flat Head screws.

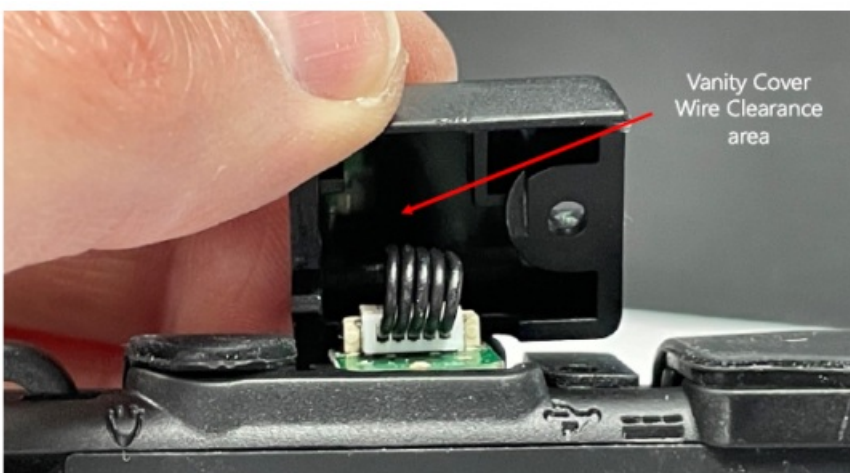Scanner Connector Cover
(2) M2 x 3 Pan Head Screws

6. Install the Scanner Connector Cover using (2) M2 x 3 Pan Head screws.

USB Type C connector

7. Locate USB Type C connector in tablet.

8. Plug USB Type C PCB into USB Type C connector as shown.

Vanity Cover
Wire Clearance
area

9. Install Vanity Cover over USB Type C PCB. Ensure wires are aligned in Vanity Cover clearance area so that wires are not pinched.

10. Install the M3 x 5 Pan Head screw.

11. Vanity Cover should look like this when properly installed.

Documents / Resources

	MobileDemand Scanner Combo Bundle for Surface Go [pdf] Installation Guide Scanner Combo Bundle for Surface Go