



## ACU-RITE Thermometer 03121DIX Instruction Manual

[Home](#) » [ACU-RITE](#) » ACU-RITE Thermometer 03121DIX Instruction Manual 

### Contents

- [1 ACU-RITE Thermometer 03121DIX](#)
- [2 Instructions for use:](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

# ACU>RITE®

ACU-RITE Thermometer 03121DIX




### Instructions for use:

1. Clip to side of pitcher.
2. Do not let tip of the thermometer touch the bottom of the pitcher.
3. For best accuracy place tip of thermometer 2.5" (6 cm) into liquid.
4. Follow the temperature instructions of your favorite recipe.

**To calibrate:** To check thermometer for accuracy, fill a container with crushed ice and add water. Wait 1 minute. Insert 5cm of probe into ice bath for 30 seconds, or until temperature indicator stops. If unit does not read 0°C, grip the recalibration nut (see figure A) by hand. Rotate the thermometer right or left until the pointer reaches 0°C.

**Care Instructions:** Hand wash. Not dishwasher safe.

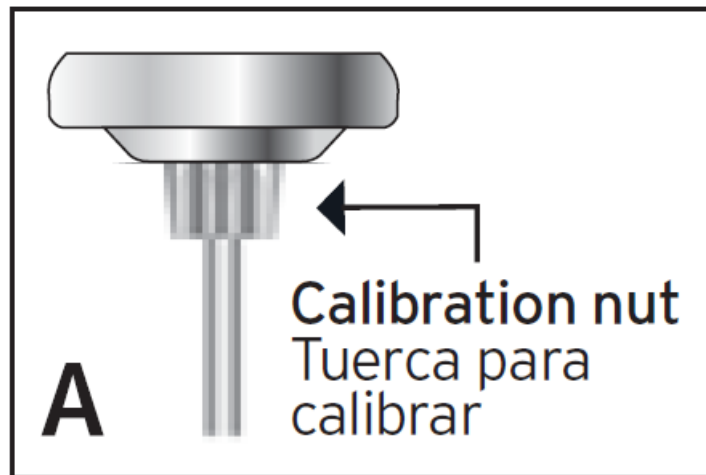

### WARNING:


- DO NOT wipe handle or hot thermometer with wet cloth.
- DO NOT lay hot thermometer on cold wet surface.
- DO NOT heat beyond thermometer's temperature capacity.
- DO NOT use in oven.
- DO NOT wash in dishwasher.
- DO NOT submerge in water.

Product Facts



REV0327 AcuRite is a registered trademark of Chaney Instrument Co. 965 Wells St. Lake Geneva, WI 53147

Documents / Resources



The thumbnail shows the front cover of the instruction manual for the AcuRite 03121DIX thermometer. It features the AcuRite logo, a list of instructions for use, and a small image of the thermometer itself. The text is in both English and Spanish.

[ACU-RITE Thermometer 03121DIX \[pdf\] Instruction Manual](#)  
ACU-RITE, Thermometer, 03121DIX

References

- ▶ [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)