



Aeotec AEGPAEOBTNUS Button Smart Home Hub User Guide

[Home](#) » [Aeotec](#) » Aeotec AEGPAEOBTNUS Button Smart Home Hub User Guide 

Contents

- [1 Aeotec AEGPAEOBTNUS Button Smart Home Hub](#)
- [2 Familiarize yourself with Aeotec Button](#)
- [3 Connect the Aeotec Button](#)
- [4 Programming Aeotec Button](#)
- [5 Factory reset your Aeotec Button](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)




Aeotec AEGPAEOBTNUS Button Smart Home Hub



- Aeotec Button was developed to control devices connected to Aeotec Smart Home Hub (<http://aeotec.com/smarthings>) through the use of a physical and wireless button. It is powered by Aeotec Zigbee technology.
- Aeotec Button must be used with an Aeotec Smart Home Hub in order to work. Aeotec works as Smart Home Hub user guide (<https://aeotec.freshdesk.com/support/solutions/articles/6000240160-table-of-contents-smarthings>) can be viewed at that link.

Familiarize yourself with Aeotec Button

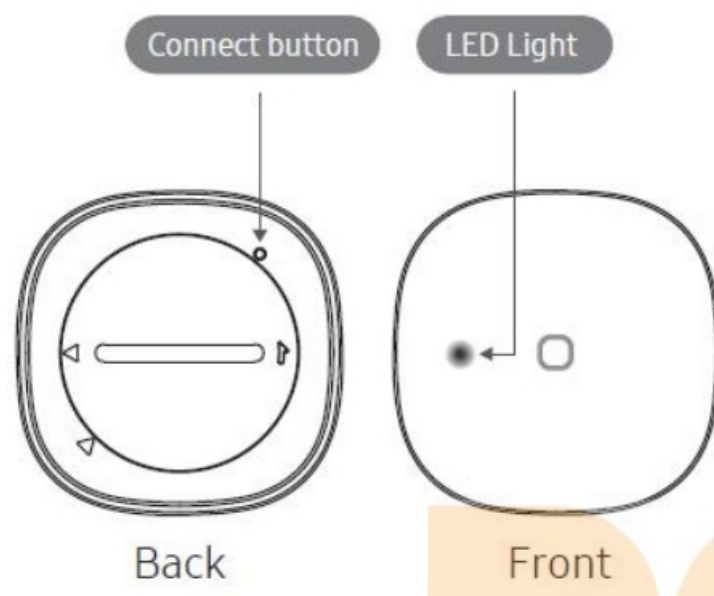

Package contents:

1. Aeotec button
2. User manual
3. 1x CR2 battery

Important safety information.

- Read, keep, and follow these instructions. Heed all warnings.
- Clean only with a dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Only use attachments and accessories specified by the Manufacturer

Connect the Aeotec Button

Steps in SmartThings Connect.

1. From the Home screen, tap the Plus (+) icon and select Device.
2. Select Aeotec and Remote/Button.
3. Tap Start.
4. Choose a Hub for the device.
5. Choose a Room for the device and tap Next.
6. While the Hub searches:
 - Pull the “Remove when Connecting” tab found in the sensor.
 - Scan the code on the back of the device.

Programming Aeotec Button

Aeotec Button supports 3 separate button presses that can be used in an Automation in your Aeotec Smart Home hub. You can program the Aeotec button either from (1) Aeotec Button interface, (2) Custom Automation (<https://aeotec.freshdesk.com/a/solutions/articles/6000240462>) (to learn how to program Custom Automation, click on that link), or SmartApps such as (3) WebCoRE (<https://www.webcore.co/>).

This section will go over how to program (1) Aeotec Button interface.

Steps in Smartthings Connect.

1. From the Home screen, scroll down to your Aeotec Button and tap its widget.
2. Look for the 3 button press options and tap on any of them to program them.
 - Single Press
 - (Pressed) Double Pressed
 - Held
3. Under “Then”, tap on Plus (+) icon.
4. Select one of the 2 options

Control Devices

1. Select all devices you want to control
2. Tap Next
3. Tap on each device that you want to change the reaction.

Run Scenes

1. Select all scenes you want this button press to run.
5. Tap Done
6. Test your button control by pressing the Aeotec Button.

Factory reset your Aeotec Button

Aeotec button can be factory reset at any time if you come across any issues, or if you need to re-pair Aeotec Button to another hub.

Video.

Steps in Smartthings Connect.


1. Press and Hold the recessed connect button for five (5) seconds.
2. Release the button when the LED starts blinking red.
3. The LED will blink red and green while attempting to connect.
4. Use the Smartthings app and steps detailed in "Connect a Aeotec Button" above.

(<https://aeotec.freshdesk.com/a/solutions/articles/6000241280>)Next to:


Aeotec Button technical specification (<https://aeotec.freshdesk.com/a/solutions/articles/6000241280>)

<https://help.aeotec.com/support/solutions/articles/6000241279-aeotec-button-user-guide>

Documents / Resources

	AeoTec AEGPAEOBTNUS Button Smart Home Hub [pdf] User Guide AEGPAEOBTNUS Button Smart Home Hub, AEGPAEOBTNUS, Button Smart Home Hub
--	--

References

- [SmartThings – Aeotec](#)
- [Loading...](#)
- [Loading...](#)
- [Smart Home Hub Table of Contents : Aeotec Help Desk](#)
- 

s3.amazonaws.com/cdn.freshdesk.com/data/helpdesk/attachments/production/6112398449/original/Fo_sh1598580934

- [webCoRE](#)