

aiwa SW-A2000 Smartwatch With GPS Health Sensors



aiwa SW-A2000 Smartwatch With GPS Health Sensors User Guide

[Home](#) » [Aiwa](#) » aiwa SW-A2000 Smartwatch With GPS Health Sensors User Guide 

Contents


- 1 aiwa SW-A2000 Smartwatch With GPS Health Sensors
- 2 WHAT'S IN THE BOX
- 3 OVERALL VIEW
- 4 WATCH FUNCTION
- 5 CHARGING
- 6 POWER OFF/ON
- 7 APP CONNECTION
- 8 SCREEN DESCRIPTION
- 9 Features
- 10 FAQs
- 11 Contact Information
- 12 Documents / Resources
 - 12.1 References

aiwa

aiwa SW-A2000 Smartwatch With GPS Health Sensors




WHAT'S IN THE BOX

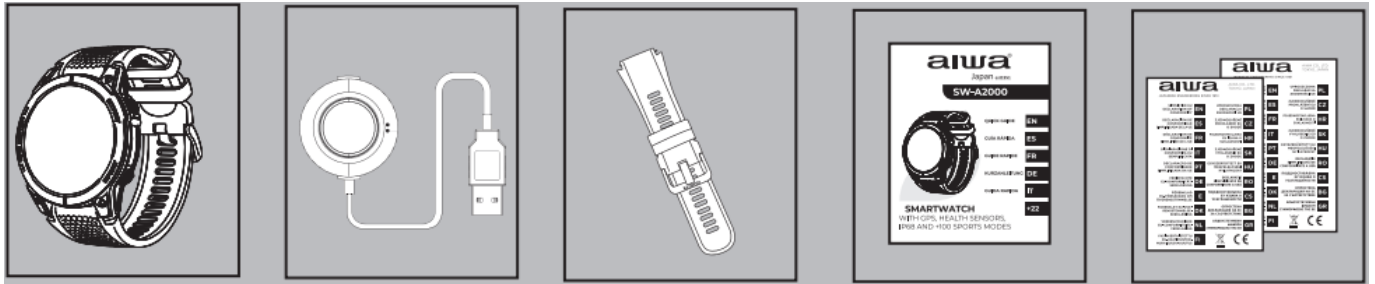


OVERALL VIEW

1. SHORT WATCHBAND
2. LONG WATCHBAND
3. UP BUTTON (POWER ON AND OFF KEYS/ FUNCTION MENU)
4. DOWN BUTTON (MULTI-MOTION FUNCTION)
5. GREENLIGHT SENSOR
6. THIMBLE CONTACTS FOR CHARGING

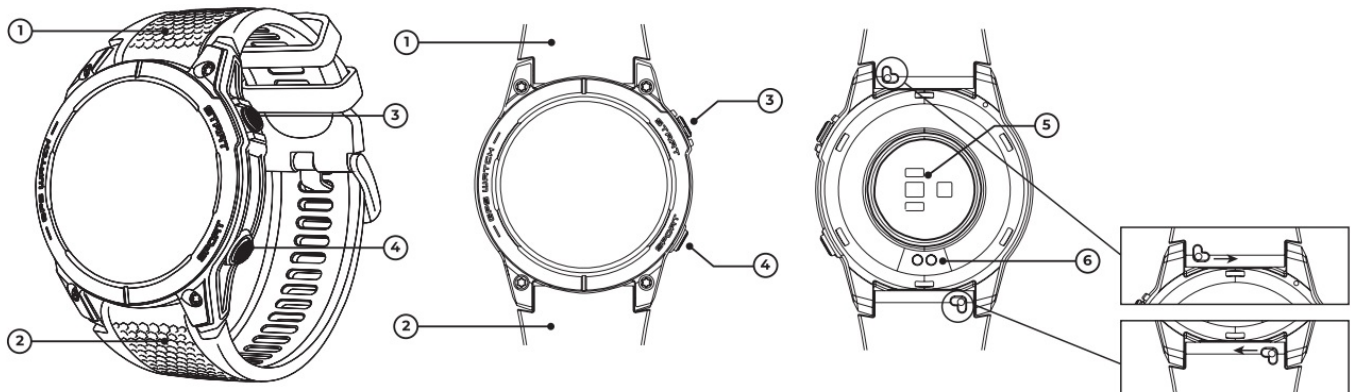


WATCH FUNCTION


- 7. BLUETOOTH CONNECTION STATUS
- 8. CALLING CONNECTION STATUS
- 9. BATTERY
- 10. MUTE MODE
- 11. REST SCREEN DISPLAY → AOD DISPLAY ON / OFF
- 12. POWER SAVING MODE
- 13. LOCK SCREEN FUNCTION
- 14. BRIGHTNESS ADJUSTMENT
- 15. DO NOT DISTURB MODE
- 16. FIND THE PHONE
- 17. SETTINGS

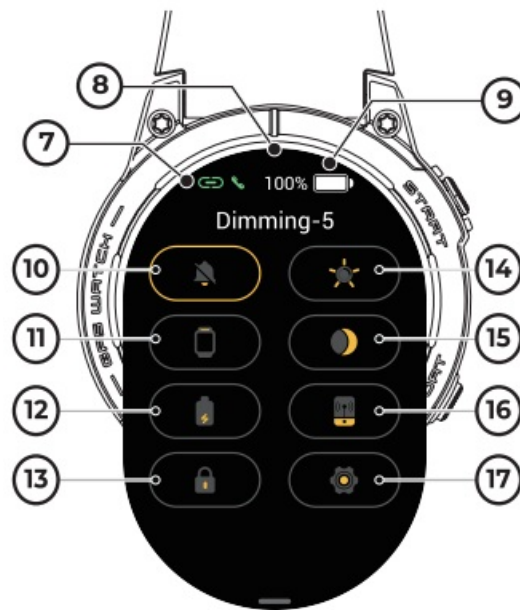


CHARGING

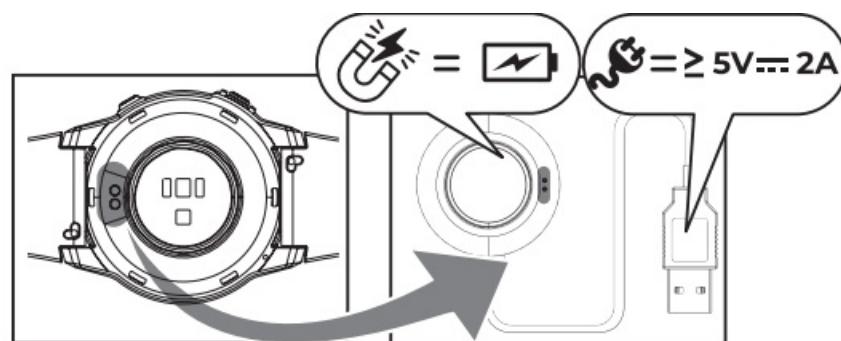

POWER OFF/ON

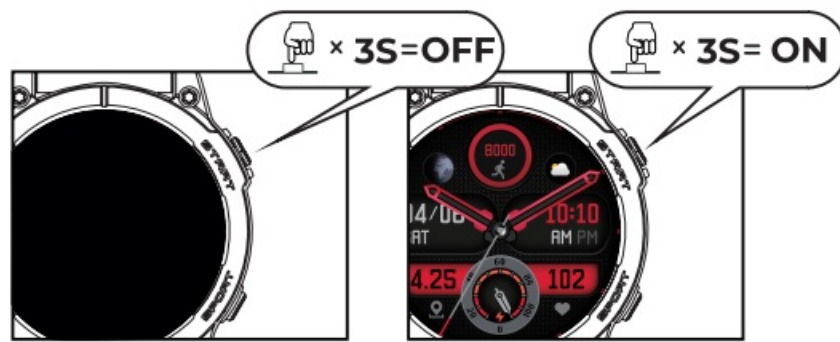

APP CONNECTION

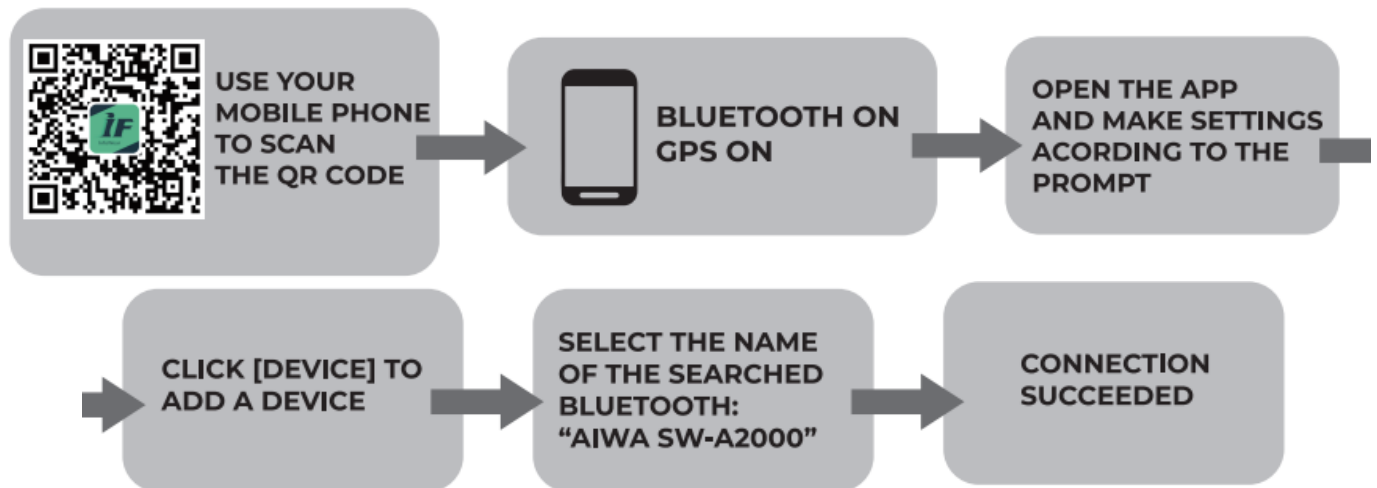

SCREEN DESCRIPTION

- **Main interface:** Display the current time, date, steps and other information of the watch; press the main interface for a long time to switch the main dial left and right, and click to confirm.



- **Today's data:** Displays the number of steps, calories, and effective standing times the watch is currently exercising.




- **Stopwatch:** Click on the icon to start the function, and click Start for timing, pause or reset. Slide right to leave.



- **Weather:** Display the local weather conditions. Connect the 25° synchronisation app for normal use, and open the phone GPS to ensure that the APP gets the positioning permission function and network connection.



- **Message:** The watch can receive cell phone calls, SMS, QQ, WeChat and other notification alerts, which can be set according to the message alert and turn on the corresponding push switch on the APP. This page can store up to 4 message records. This function needs to stay connected to the phone and make sure the APP gets the corresponding permission.

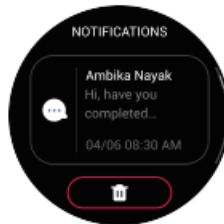


- **Heart rate:** Swipe to this page and stop to automatically start measuring the current heart rate, and vibrate to indicate the result. Continuous heart rate monitoring can be set and viewed in the APP.



- **Blood oxygen:** Slide to this page and keep a while and automatically measure the current blood oxygen data and vibrate to indicate the result.



- **Settings:** Click the icon to enter the function, and slide up and down to set the screen brightness, restore the factory, turn off the watch and view the watch information.

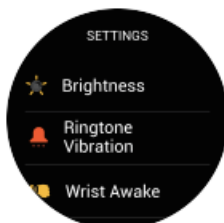


- **Call function:** Login APP to connect the watch, or open the phone settings-Bluetooth-search to connect Bluetooth "AIWA SW-A2000", you can use the watch to make or receive calls.




- **Sports:** Tap the sports icon to enter multisport mode. When the following outdoor sports modes are turned on, the watch can automatically turn on the GPS, and draw the movement track according to the movement situation. The movement track can be viewed after synchronizing the APP. (Outdoor running. Outdoor cycling. Outdoor walking. Trail run. Trekking) The watch side can save 20 offline sports data records.




- **Sleep:** The bracelet can record and display your sleeping time last night, and the time of deep sleep and light sleep. More detailed data can be viewed synchronously in the APP.

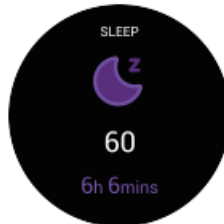

- **Music:** After connecting the APP, the watch can control the mobile phone player to play/pause/switch to the previous song and the next song. This function must be opened on the mobile phone player before it can be controlled on the watch. This function requires staying connected to your phone and turning on the notification push permission.

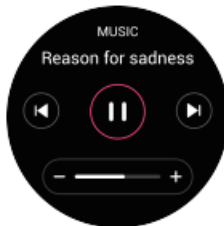


- **Timer:** Click the icon to enter the function, and countdown according to the time. Vibration reminder when the countdown ends.

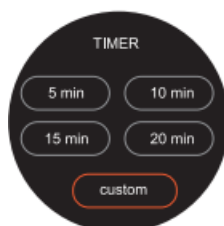

Features

SW-A2000

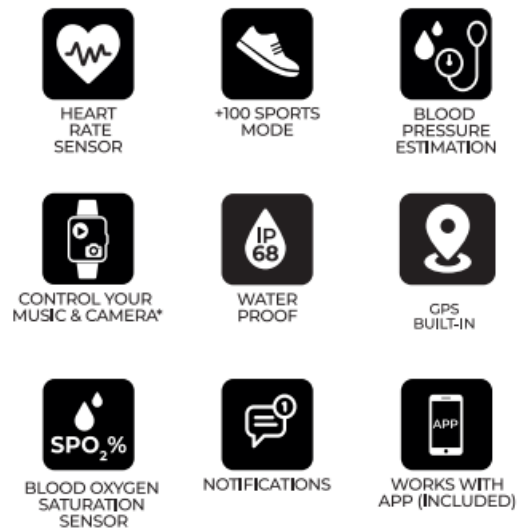

FAQS



Contact Information

+ aiwa



www.eu-aiwa.com

Follow us! aiwaEU


www.eu-aiwa.com.



AIWA CO., LTD.

Kita-Ku TOKYO 115-0045, JAPAN.

AIWA EUROPE S.L. All Rights Reserved. Printed in P.R.C.



[aiwa SW-A2000 Smartwatch With GPS Health Sensors](#) [pdf] User Guide
SW-A2000, SW-A2000 Smartwatch With GPS Health Sensors, Smartwatch With GPS Health S
ensors, GPS Health Sensors, Health Sensors, Sensors

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.