



Amazon Echo Look User Guide

[Home](#) » [Amazon](#) » Amazon Echo Look User Guide 

Contents


- [1 Amazon Echo Look](#)
- [2 What's in the box](#)
- [3 Setup](#)
- [4 Turning off the mic and camera](#)
- [5 Handle with Care](#)
- [6 Give us your feedback](#)
- [7 DOWNLOAD](#)
- [8 Related Posts](#)

Amazon Echo Look




QUICK START GUIDE

What's in the box

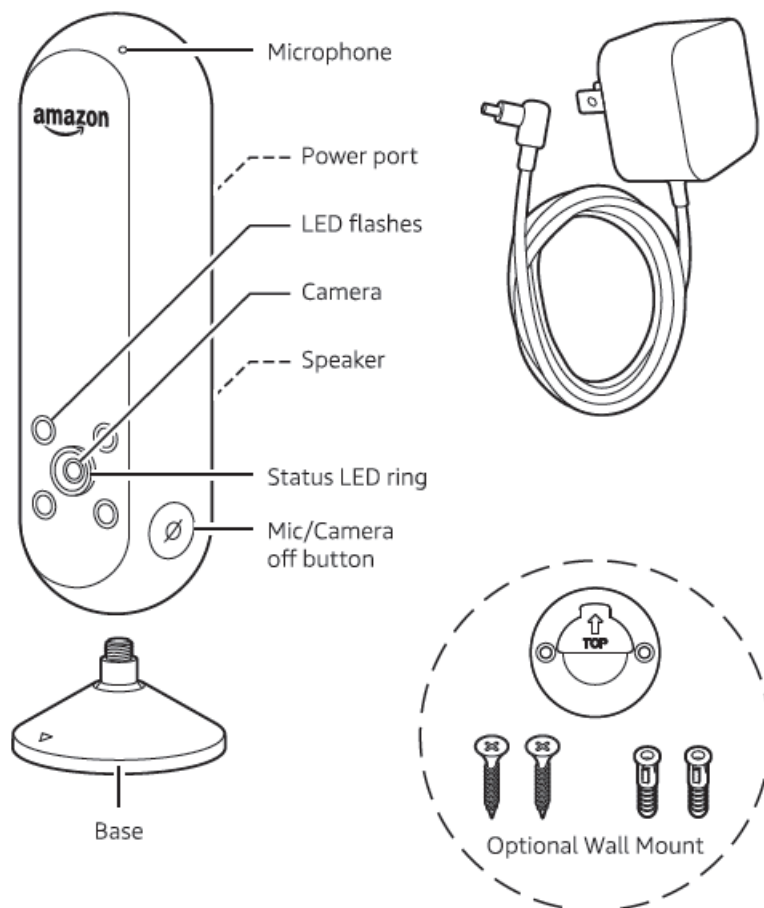

Setup

1. Download the Echo Look App

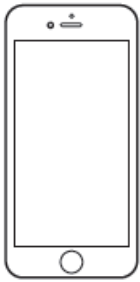

Refer to your Echo Look Getting Started email for instructions on how to download the app to your phone.

If you do not have the email, go to your App Store and download the app.

You will need:


- Your Wi-Fi Password
- An Amazon account. You can create one in the app.

2. Position your Echo Look

Remove both the wrap and screen protector from your device.

Insert the base into the bottom of the device and gently turn until you feel resistance. You should be able to tilt your device for positioning, but it should not be wobbly.

For the best head-to-toe shot, place your device at shoulder height, stand about 5 feet away, and ensure that your image fills the phone frame. You may need to tilt the device forward.

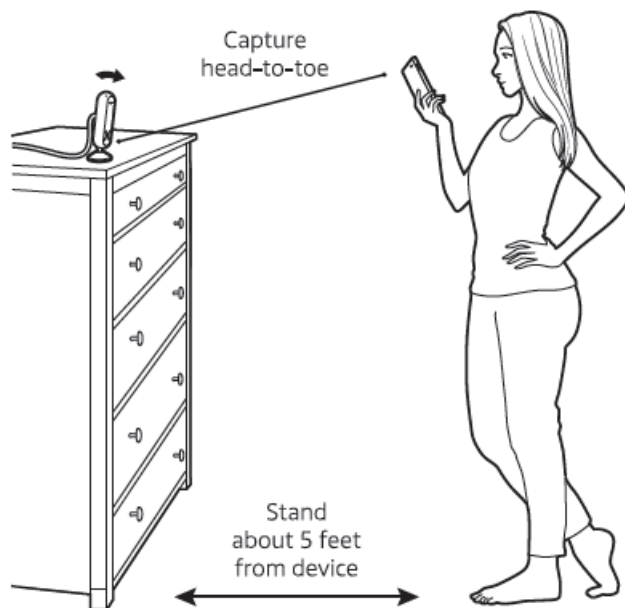

Note: If you would like to attach your device to a wall, please see the mounting instructions included with the mounting plate.

Need help? Visit <http://amazon.com/echolookhelp>

3. Plug in your Echo Look

In a few seconds, the light ring will illuminate blue and in about a minute Alexa will greet you. The light will then change to orange to begin setup in the app. Once the app is ready, use the camera button in the app to adjust the device so you can see yourself head-to-toe without being blocked.

Turning off the mic and camera

Your device has a button on the side to turn off the mic and camera (see diagram). Tap lightly to turn on and off. A red ring and red 0 indicate the mic and camera are off.

Handle with Care

Treat the front of your device as you would a camera lens. For the best photos, wipe smudges from the front with a soft cloth.

Give us your feedback

Your device will improve over time to give you access to new features and more personalized content. We want to hear about your experiences. Use the app to send us your feedback. You can contact support through <http://amazon.com/echolookhelp>.

DOWNLOAD

Amazon Echo Look User Guide -[[Download PDF](#)]
