



ANYKIT NTC30D 2 In 1 Inspection Camera User Manual

[Home](#) » [ANYKIT](#) » ANYKIT NTC30D 2 In 1 Inspection Camera User Manual 

Contents

- 1 ANYKIT NTC30D 2 In 1 Inspection Camera
- 2 User Manual
- 3 READ BEFORE USE
- 4 ABOUT ANKIT
- 5 PRODUCT SPECIFICATIONS
- 6 OPERA TING INSTRUCTION
- 7 APP INSTRUCTION
- 8 SAFETY INSTRUCTION
- 9 MAINTENANCE
- 10 TROUBLESHOOTING
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



ANYKIT NTC30D 2 In 1 Inspection Camera



User Manual

Model No.: NTC30L/NTC30D

READ BEFORE USE

Please confirm whether your Android phone supports OTG function and read the instructions before using the endoscope. It is recommended to watch tutorial videos and notices before using for the 1st time.

Video Tutorials

Scan the QR code to watch the NTC30L-NTC30D tutorial videos, which demonstrate how to use the NTC30L - NTC30D safely.



WARNING

- EXCEPT AS EXPRESSLY PROVIDED IN AFTER-SALES SERVICE POLICIES AVAILABLE AT (support@anykit.com), THE PRODUCT AND ALL MATERIALS AND CONTENT AVAILABLE THROUGH THE


PRODUCT ARE PROVIDED “AS IS” AND ON AN “AS AVAILABLE” BASIS WITHOUT WARRANTY OR CONDITION OF ANY KIND.

- THIS PRODUCT IS NOT INTENDED FOR CHILDREN.
- THIS DEVICE IS NOT INTENDED FOR MEDICAL USE OR PERSONAL INSPECTION!

ABOUT ANKIT



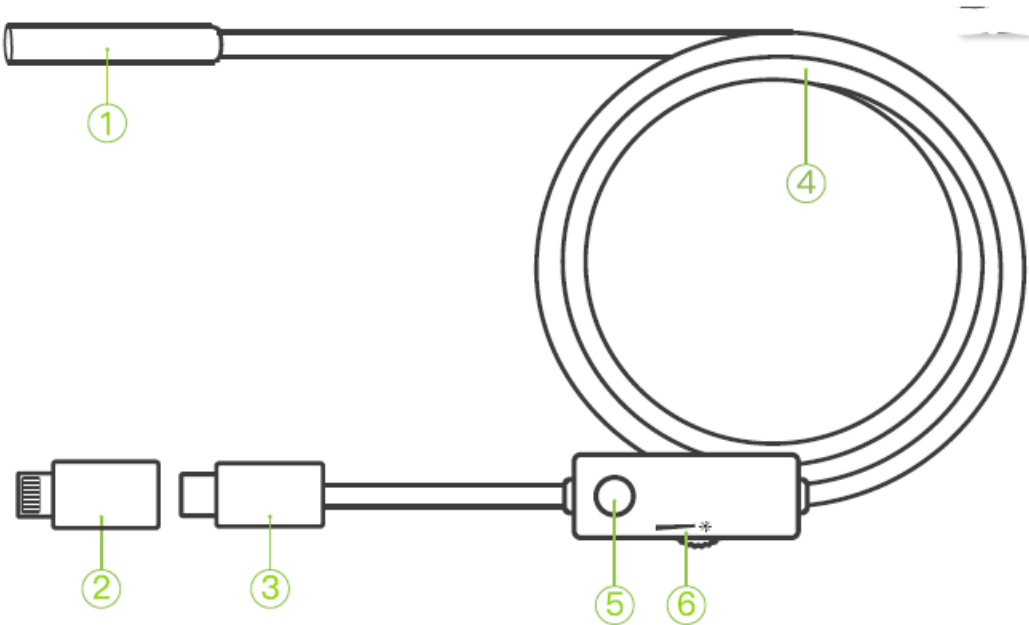


Anykit is a trendy and practical tool brand. We focus on simplicity and ease of use, providing people with convenience in their everyday lives. Our products include otoscopes, endoscopes, and a variety of household tools to enable DIY enthusiasts to embrace creativity and convenience.

1.



Camera

- 2. Snake Cable
- 3. Lightning connector
- 4. Camera View Switch
- 5. Type-C connector
- 6. LED adjustment

Type-C connector	Lightning connector	Magnet	Hook	Mirror
				

PRODUCT SPECIFICATIONS

		Single lens	Double lens
Camera Diameter		8.5mm	8.0mm
Resolution		Max to 1280*960	Max to 1 280*960
Camera Lights		8 Adjustable LED lights	8 +1Adjustable LED lights
View angle		79°	70°
Device Compatibility		Android (Type-C) iOS(Lightning)	Android (Type-C) iOS(Lightning)
Waterproof level		IP67	IP67
FocalDistance	A Camera	30mm-100mm	30mm- 100mm
	B Camera		20mm- 50mm

OPERATING INSTRUCTION

DOWNLOADING THE APP

Use the endoscope with the “Usee Plus” app. You can download it from Apple Store/Google Play or scan the QR codes below.



Connecting Guide

1. Plug the endoscope into your smart device (Type-C connector for Android Phone/Tablet, Lightning connector for iPhone/iPad)
2. You'll receive a notification and click "Allow" to use it. (P-1 for iOS) You'll receive a notification and click "Always" to use it. (P-2 for Android)

P-1

UseePlus

UseePlus would like to communicate with the Device Camera.

Ignore

Allow



P-2



Choose an app for the USB device



Usee Plus

Every inquiry

Always

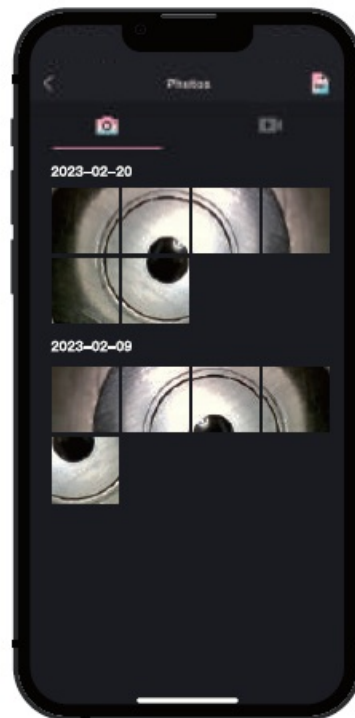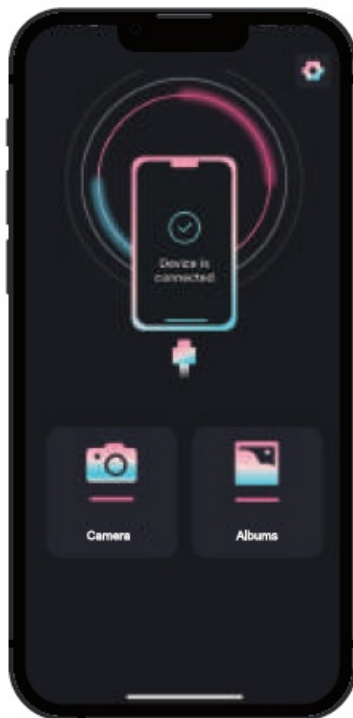

Camera: Start to use the camera

- Albums: Review the photos/ videos you take
- Setting: Enter into the app setting

“UseePlus” Would Like to Access Your Photos

Allow the App to access your photo album and view the pictures and videos taken by the App.

Select Photos..


Allow Access to All Photos

Don't Allow



APP INSTRUCTION

1.

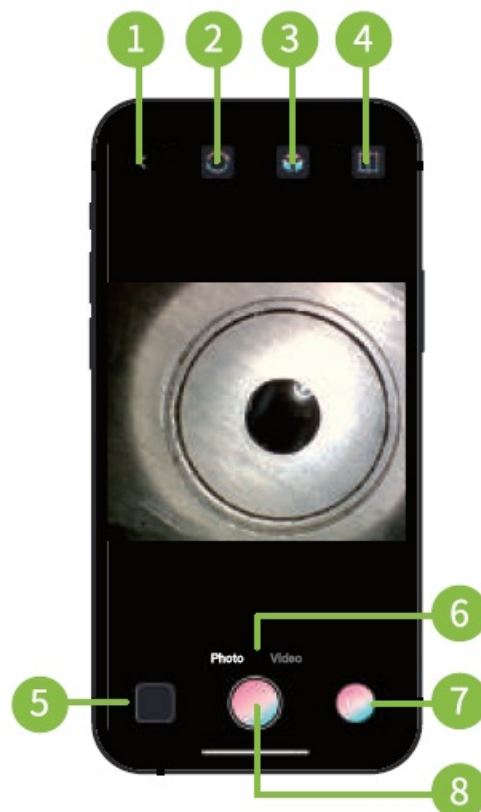

Back

2. Image Rotate 90°
3. Color/Black and White Image
4. Split Screen Mode
5. Albums
6. Photo/Video

7. Zoom 1 x/1.5x/2x
8. Take a photo/video

SAFETY INSTRUCTION

WARNING! Please read all safety warnings and all instructions before using this product. Failure to follow the warnings and Instructions may result in electric shock, fire or serious injury.

- Keep the tool dry, clean, and free from oil, water, gas or other corrosion-causing materials.
- Keep your work area clean and well-lit.
- This appliance is not intended for use by persons with limited physical, sensory or mental capabilities.
- This appliance is not intended for medical use or personal inspection.
- Keep bystanders, and children away while operating the tool.
- Do not overreach, keep proper footing and balance at all times.

MAINTENANCE

- Always keep the camera lens clean.
- Should any other components not mentioned need to be replaced, please contact our customer service agents.

TROUBLESHOOTING

No response to connect the phone	Camera is hot
1. Please confirm whether the phone has the OTG function on. (Android) 2. Please confirm whether the plug is securely in place. Try to plug and unplug it several times.	It is usual for the camera to heat up, especially when the LED light is at its highest brightness, but it does not affect normal use or service life.
Not display pictures	Image blur
Check whether the camera light is on, if it is off , or if the interface is not in good contact, please re-plug it.	The best imaging focal length of the product is: 3cm-10 cm, please calibrate the distance from the object you are looking at, or clean the front of the camera with a clean alcohol cloth.
Automatically open other APP	The product drawing is stuck
Reason: This APP has been set to open USB device by default before. Solution 1: Go to Settings application information-select this APP, find the default option click Clear default.	Sometimes the app can get stuck if the mobile device battery is low . Keep it above 20%.

After-sales Service

If you have any questions, feel free to contact us,
 The Anykit team is here to offer you the best product support.

www.anykit.com


181 support@anykit.com

. 877-888-7979(US)

(Mon-Fri 8:00 AM-5:00 PM PST)

©ANYKIT NTC30L/NTC30D C0907 V1 .0 3.06.07.000604

Documents / Resources

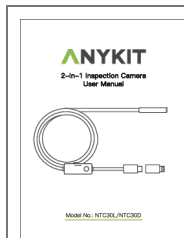

[ANYKIT NTC30D 2 In 1 Inspection Camera](#) [pdf] User Manual

NTC30D 2 In 1 Inspection Camera, NTC30D, 2 In 1 Inspection Camera, Inspection Camera, Camera

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.