

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samson](#) /

› [Samson C01 Large-Diaphragm Cardioid Condenser Microphone User Manual](#)

Samson C01

Samson C01 Large-Diaphragm Cardioid Condenser Microphone

User Manual

INTRODUCTION

Welcome to the user manual for your new Samson C01 Large-Diaphragm Cardioid Condenser Microphone. The C01 is designed to deliver exceptional audio quality for a variety of recording applications, from vocals and acoustic instruments to drum overheads. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your microphone to ensure optimal performance.



Figure 1: Samson C01 Large-Diaphragm Cardioid Condenser Microphone

WHAT'S IN THE BOX

Your Samson C01 package includes the following items:

- Samson C01 Large-Diaphragm Condenser Microphone

- Swivel Stand Mic Mount
- User Manual



Figure 2: Samson C01 Microphone and included accessories in its protective case

KEY FEATURES

The Samson C01 microphone boasts several features that contribute to its versatile and high-quality performance:

- **Cardioid Pickup Pattern:** Provides excellent off-axis rejection, focusing on the sound source directly in front of the microphone and minimizing background noise.

- **Large, Dual-Layer 19mm Diaphragm:** Captures detailed and accurate sound with a smooth, flat frequency response.
- **Heavy Gauge Mesh Grill:** Ensures durability and protects the internal components.
- **Gold-Plated XLR Connector:** Offers reliable and high-quality signal transfer.
- **LED Indicator:** Illuminates to show when 48V phantom power is active.
- **Smooth, Flat Frequency Response:** Delivers natural and uncolored audio reproduction.
- **Swivel Stand Mount Included:** Allows for easy positioning and attachment to standard microphone stands.

SETUP

Follow these steps to set up your Samson C01 microphone:

1. **Mounting:** Attach the included swivel stand mount to a standard microphone stand. Securely fasten the C01 microphone into the swivel mount.
2. **Connection:** Connect a standard XLR cable (not included) to the gold-plated XLR connector at the base of the C01 microphone.
3. **Audio Interface/Mixer:** Connect the other end of the XLR cable to an input on your audio interface, mixer, or preamplifier. Ensure your device provides 48V phantom power, which is required for the C01 to operate. The LED on the microphone will illuminate when phantom power is supplied.
4. **Gain Staging:** Before recording, adjust the input gain on your audio interface or mixer. Start with the gain low and gradually increase it while speaking or playing into the microphone until you achieve a healthy signal level without clipping (distortion).



Figure 3: Samson C01 Microphone properly mounted on a boom arm

OPERATING

The Samson C01 is a versatile microphone suitable for various recording scenarios:

- **Vocal Recording:** For vocals, position the microphone 6-12 inches from the singer's mouth. Use a pop filter (not included) to reduce plosive sounds (P's and B's) and protect the diaphragm. The cardioid pattern helps isolate the vocal performance.

- **Acoustic Instruments:** When recording acoustic guitars, violins, or other instruments, experiment with microphone placement to capture the desired tone. A common starting point is 6-12 inches from the soundhole or soundboard, angled slightly.
- **Drum Overheads:** The C01 can be used as an overhead microphone for drum kits to capture the overall sound of the cymbals and drums. Position two C01s above the kit, spaced evenly, to achieve a balanced stereo image.
- **Room Miking:** Due to its sensitive large diaphragm, the C01 can also be effective for capturing the natural ambiance of a room, adding depth to recordings.



Figure 4: Samson C01 integrated into a studio recording setup

MAINTENANCE

To ensure the longevity and optimal performance of your Samson C01 microphone, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the microphone body. Avoid using liquid cleaners or solvents, as they can damage the finish or internal components.
- **Storage:** When not in use, store the microphone in its original packaging or a protective case to shield it from dust, moisture, and physical damage.
- **Handling:** Handle the microphone with care. Avoid dropping it or subjecting it to strong impacts, which can affect its delicate internal diaphragm.
- **Environmental Conditions:** Keep the microphone away from extreme temperatures, high humidity, and direct sunlight.

TROUBLESHOOTING

If you encounter issues with your Samson C01 microphone, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Sound Output	No phantom power; Faulty XLR cable; Incorrect input selection on interface/mixer.	Ensure 48V phantom power is enabled. Test with a different XLR cable. Verify the correct input channel is selected and gain is adjusted.
Low/Weak Sound	Insufficient gain; Incorrect microphone placement; Phantom power issue.	Increase input gain on your interface/mixer. Move the microphone closer to the sound source. Check phantom power LED.
Distorted Sound	Input gain too high; Microphone too close to sound source.	Reduce input gain. Increase distance between microphone and sound source.
Excessive Background Noise	Uncontrolled room acoustics; Microphone picking up unwanted sounds.	Ensure recording environment is quiet. Adjust microphone position to utilize its cardioid pattern effectively. Consider acoustic treatment.

SPECIFICATIONS


Detailed technical specifications for the Samson C01 Large-Diaphragm Cardioid Condenser Microphone:

Feature	Specification
Model Name	C01
Polar Pattern	Unidirectional (Cardioid)
Diaphragm Size	Large, Dual-Layer 19mm
Connectivity Technology	Wired
Connector Type	XLR
Power Source	Corded Electric (48V Phantom Power Required)
Frequency Response	18 KHz (Upper Limit)
Signal-to-Noise Ratio	78 dB
Noise Level	136 dB (Max SPL)
Item Weight	2.5 Pounds
Product Dimensions (L x W x H)	12.5 x 10.3 x 6.8 inches
Color	Silver
Material	Metal (Body), Wood (Material Type listed in specs, likely for internal components or packaging description)

WARRANTY AND SUPPORT

Samson Technologies stands behind the quality of its products. For warranty information, technical support, or to explore other Samson products, please visit the official Samson website or their Amazon store:

Related Documents - C01

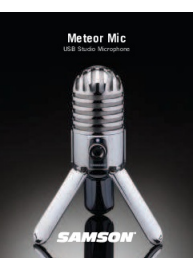	Samson C01 Studio Condenser Microphone: Owners Manual, Features, and Operation This document provides comprehensive information for the Samson C01 Studio Condenser Microphone. It covers an introduction to the product, detailed features, operating instructions including powering, polar patterns, microphone placement, signal level setup, and pop reduction techniques. It also includes instructions for mounting the microphone on a stand and using the optional SP01 shock mount.
	Samson Q7 Dynamic Microphone Owner's Manual - Features, Specs, and Usage Comprehensive guide to the Samson Q7 Neodymium Dynamic Microphone, covering features, technical specifications, microphone placement, connectivity, and usage guidelines for vocalists and recording artists.
	Samson Meteor Mic USB Studio Condenser Microphone - Features, Specs, and Guide Comprehensive guide to the Samson Meteor Mic USB studio condenser microphone, covering features, layout, connection, recording techniques, specifications, and safety information.
	Samson SE10x Earset Microphone Owner's Manual Comprehensive owner's manual for the Samson SE10x omnidirectional earset microphone, detailing its features, specifications, connector compatibility, optimal positioning, and care instructions.
	Samson Q6 Dynamic Microphone Owner's Manual Comprehensive owner's manual for the Samson Q6 Dynamic Microphone, detailing its features, setup, usage guidelines, microphone placement techniques, and technical specifications.



[Samson Go Mic Mobile 2 Wireless Microphone System: Owner's Manual & Guide](#)

Detailed owner's manual for the Samson Go Mic Mobile 2, a versatile wireless microphone system for mobile content creators, journalists, and educators. Covers setup, pairing, operation, specifications, and troubleshooting.

Documents - Samson – C01



[\[pdf\] User Manual Specifications](#)

C01 ownman4L 121902 New User See Samson SAC01 Manual Specs Large Diaphragm Condenser Microphone Specifications markertek Attachments |||

PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO Table Of Contents ENGLISH Introduction 1 **C01** Features 2 Operating the **C01** 3 Powering the **C01** 3 Polar Pattern 3 Microphone Placement 3 Setting up the Signal Level 4 P-Popping 4 Stand Mounting the **C01** 4 Using the Opt...

lang:en score:33 filesize: 572.93 K page_count: 24 document date: 2015-11-02



[Samson C01 Studio Condenser Microphone: Owners Manual, Features, and Operation](#)

This document provides comprehensive information for the Samson C01 Studio Condenser Microphone. It covers an introduction to the product, detailed features, operating instructions including powering, polar patterns, microphone placement, signal level setup, and pop reduction techniques. It also includes instructions for mounting the microphone on a stand and using the optional SP01 shock mount.

lang:en score:32 filesize: 453.21 K page_count: 6 document date: 2024-08-26



[\[pdf\]](#) User Manual Instructions Documentation

EB 8331 4 EN Type 3374 Electric Actuator Version with The instructions are binding for handling SAMSON devices TLOG S11 Event triggered data logging Data in progress e83314en samsongroup document 27 ott 2022 — actuator stem of the electric can be adjusted manually → Do not operate manual override while is operation or 2014 35 EU – 2011 65 Devices a UKCA marking fulfill requirements following Regulations SI 2016 No |||

EB 8331-4 EN Translation of original instructions Type 3374 Electric Actuator Version with positione ... ured using a Pt 1000 sensor at input 1 and input 2. The Code c85 unit must be set to C and Code **c01** source to Pt 1000 input . The measuring range has a fixed range 50 C to 150 C . The measure...

lang:en **score:30** filesize: 6 M page_count: 134 document date: 2021-03-31



[\[pdf\]](#) Specifications Accessories

STUDIO GT PRO Samson Technologies PRODUCT INFORMATION 2014 ©2014 Preliminary Literature All product descriptions and specs subject to change Active Studio Monitors with C01 Condenser Microphone CUTSHEET 1 samsontech site media support manuals

STUDIO GT PRO Active Studio Monitors with**C01** Condenser Microphone PRODUCT 2014 INFORMATION 2014 Samson. Preliminary Literature. All product descriptions and specs subject to change. With Samson s Studio GT Pro, you get everything you need to turn your computer in to a complete music production s...

lang:en **score:28** filesize: 218.95 K page_count: 1 document date: 2014-06-13




[\[pdf\]](#) Instructions Documentation

EB 8331 4 EN Type 3374 Electric Actuator Version with → If you have any questions about these instructions contact SAMSON s After sales Service aftersaleservice@samsongroup The mounting and operating e83314en samson de document 27 ott 2022 — operating |||

EB 8331-4 EN Translation of original instructions Type 3374 Electric Actuator Version with positione ... ured using a Pt 1000 sensor at input 1 and input 2. The Code c85 unit must be set to C and Code **c01** source to Pt 1000 input . The measuring range has a fixed range 50 C to 150 C . The measure...

lang:en **score:27** filesize: 7.63 M page_count: 144 document date: 2022-10-27

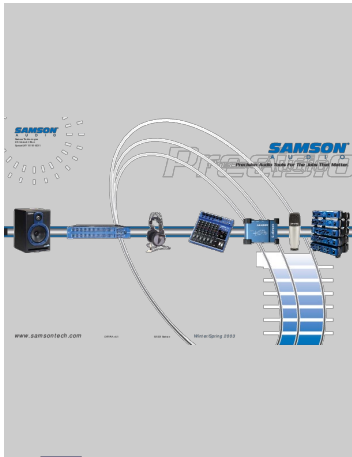

[\[pdf\]](#) User Manual Catalog

Provided by ManualsAndMore Download User Manual Samson Power Amplifiers Catalog manualsandmore |||

Samson Technologies 575 Underhill Blvd. Syosset, NY 11791-9031

www.samsontech.com CAT FLA v6.1 20 ... e studio: for the stage or the conference room: Samson has a microphone solution at a great price. **C01** condenser mic Now there is a high-quality studio condenser mic for everyone. The **C01** is accurate... lang:en score:26 filesize: 931.84 K page_count: 18 document date: 2019-07-23

[\[pdf\]](#) User Manual Owner's Manual Instructions Specifications

C01 ownman4L 121902 New User PROFESSIONAL MICROPHONES Samson Technologies FRANÇAIS

Introduction 6 Présentation des fonctions du 7 Utilisation 8 Mise sous tension Directivité Placement micro In these pages you ll find a detailed description of the features Studio Condenser Microphone as well step by instructions for its setup and use 3 Operating Powering The is condenser microphone therefore needs to be operated connecting phantom power supply Phantom standard on most quali de ce à condensateur studio pas pour son installation et utilisation ainsi que toutes les précisions sur ses caractéris tiques techniques Une carte garantie est également fournie avec l appareil N oubliez la remplir nous envoyer afin bénéficier assistan Congratulations your purchase large 19mm ultra thin diaphragm capsule which faithfully repro duces variety sound sources including CO1 Owners Manual manual owners 4lang home httpd data media c samsontech site legacy docs c3 zzounds ca9a798a2d49497cba70897e61dfc59c jun co uk 464122 01U bee mif pg gda pl ciasteczkowypotwor pro audio starlight online Manuals Audio 80 products relatedDocs edu observatory org ScienceBytes

PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO Table Of Contents ENGLISH Introduction 1 **C01** Features 2 Operating the **C01** 3 Powering the **C01** 3 Polar Pattern 3 Microphone Placement 3 Setting up the Signal Level 4 P-Popping 4 Stand Mounting the **C01** 4 Using the Opt...

lang:en score:26 filesize: 602.11 K page_count: 24 document date: 2003-10-08



[\[pdf\]](#) Specifications

SAMSON C01 ENG strumentimusalici net 80 manuali

PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO Table Of Contents ENGLISH Introduction 1 **C01** Features 2 Operating the **C01** 3 Powering the **C01** 3 Polar Pattern 3 Microphone Placement 3 Setting up the Signal Level 4 P-Popping 4 Stand Mounting the **C01** 4 Using the Opt...

lang:en score:26 filesize: 790.48 K page_count: 0 document date: 0000-00-00





[\[pdf\]](#) Datasheet Accessories

SAMSON SP01 Shock Mount per C01 C03 CL7 CL8 e C01U Scheda Prodotto MusicalStore2005 samson sp01 shock mount c01 c03 cl7 cl8 c01u l4 musicalstore2005 datasheet products id 27311

Creato il : giovedì 11 giugno, 2015 Microfoni per voce e strumenti Accessori per Microfoni SAMSON SP01 Shock Mount per **C01**, C03, CL7, CL8 e **C01U** SAMSON SP01 Shock Mount per **C01**, C03, CL7, CL8 e **C01U** Modello : 27311 SAMSON SP01 Shock Mount per **C01**, C03, CL7, CL8 e **C01U** usicalStore2005.co Produttore...
lang:it score:25 filesize: 217.8 K page_count: 1 document date: 2015-06-11



[\[pdf\]](#) Specifications Guide

8KIT ownman samsontech site media support manuals |||

PERCUSSION MICROPHONES 8KIT EIGHT PIECE PERCUSSION MICROPHONE KIT Table Of Contents Introducti ... liance of your cymbals and the overall ambient sound of your drum set, we ve included a pair of our **C01** studio condensers. Special attention in the construction of the neodymium dynamic and fixed char...
lang:en score:24 filesize: 1.66 M page_count: 0 document date: 0000-00-00



[\[pdf\]](#) User Manual Instructions

Automation System TROVIS 5400 Heating and District Controller · 5431 Mounting Operating Instructions e54310en automation systems control engineering instrumentation SAMSON AG samson de programmes horaires English translation Linguee en |||

Automation System TROVIS 5400 Heating and District Heating Controller TROVIS 5431 Electronics from ... This is only possible if CO-SYS F10-0, i. e. request for an externally required signal off, and, if **C01** F07-1, i. e. outdoor temperature on. EB 5431 EN 37 Functional descriptions 5.2.4 Pump manage...
lang:en score:24 filesize: 1.26 M page_count: 102 document date: 2017-08-22




[\[pdf\]](#) Instructions

Type 3374 Electric Actuator Version with positioner revision 2 Mounting and Operating Instructions e83314en actuator control valve final element engineering instrumentation SAMSON AG Spain On starting up the for first time after loading default set d26* E06 Motor or potentiometer not turning Send to 0x spain samsongroup document |||

Type 3374 Electric Actuator Version with positioner, revision 2 Mounting and Operating Instructions ... pending on the input signal used must separate the upper and lower range values. Code Description **c01** Unit c02 Lower range value c03 Upper range value WE mA 2.0 V or 4.0 mA 10.0 V or 20.0 mA Adjus...

lang:en **score:22** filesize: 2.29 M page_count: 84 document date: 2017-08-22

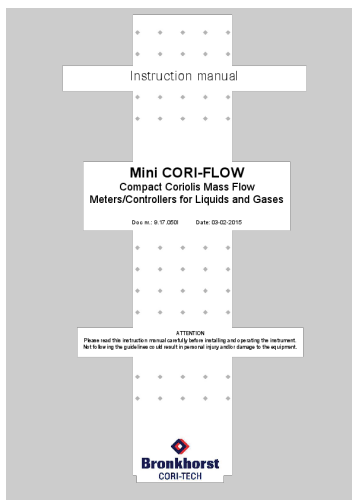

[\[pdf\]](#) User Manual Instructions Declaration of Conformity

13 Bronkhorst High Tech B V BHT medewerker Mini CORI FLOW Insatech This manual covers the general part of digital mini mass flow instruments for gases and liquids It treats instructions needed 917050 cori 1 insatech |||

Instruction manual Mini CORI-FLOW Compact Coriolis Mass Flow Meters/Controllers for Liquids and Gas ... or. Possible combinations: Liquid Gas M12 C2I F-033CI C0I, C1I F-033CI M13 C2I C5I F-033CI **C01**, C1I C5I F-033CI M14 M15 C2I F-033CI C2I C5I F-033CI F-004AI C0I, C1I F-033CI C5I F-033CI F-0...

lang:en **score:22** filesize: 5.02 M page_count: 36 document date: 2015-02-04



[\[pdf\]](#) Instructions

TROVIS 5500 Automation System 5573 Heating and District Controller firmware version 1 9x Mounting Operating Instructions e55730en automation systems control engineering instrumentation SAMSON AG samsongroup document |||

Automation System TROVIS 5500 Heating and District Heating Controller TROVIS 5573 Electronics from ... ource can be demanded using the 0-10 V output. The function block for a request for external demand **C01** - F18 - 1 is automatically set. The function block parameters allow the transmission range to b...

lang:en **score:20** filesize: 1.08 M page_count: 138 document date: 2017-08-22



[\[pdf\]](#) Instructions

TROVIS 5500 Automation System 5573 Heating and District Controller firmware version 2 0x Mounting Operating Instructions e55730en automation systems control engineering instrumentation SAMSON AG samsongroup document |||

Automation System TROVIS 5500 Heating and District Heating Controller TROVIS 5573 Electronics from ... ource can be demanded using the 0-10 V output. The function block for a request for external demand **C01** - F18 - 1 is automatically set. The function block parameters allow the transmission range to b...

lang:en **score:20** filesize: 1.05 M page_count: 138 document date: 2017-08-22



[\[pdf\]](#) Instructions

TROVIS 5500 Automation System 5579 Heating and District Controller Firmware version 2 1x Mounting Operating Instructions e55790en automation systems control engineering instrumentation SAMSON AG samsongroup document |||

TROVIS 5500 Automation System TROVIS 5579 Heating and District Heating Controller Electronics from ... en the analog signal select AnA is selected, the function block for a request for external demand **C01** - F18 - 1 is automatically set. The function block parameters allow the transmission range to b...

lang:en **score:20** filesize: 1.12 M page_count: 206 document date: 2017-08-22



[\[pdf\]](#) Specifications

USB Studio Condenser Microphone Samson Technologies PRODUCT NFORMATION 2014 ©201 amson reliminar iterature l roduc escription n pec ubjec hange FEATURES Large 19mm diaphragm studio condenser microphone Plug in and start recording No extra gear needed! Cardioid pickup pattern 16 bit 44 1 48kHz resolution Smooth flat frequency response Heavy gauge mesh grill Includes desktop mic stand clip cable C01U CUTSHEET samsontech site media support manuals 80

C01U USB Studio Condenser Microphone PRODUCT 2014 INFORMATION 2014 Samson. Preliminary Literature. All product descriptions and specs subject to change. Samson presents the USB studio condenser microphone that started it all: The **C01U**. This classic USB microphone bridges the gap between mid-level...

lang:en **score:19** filesize: 109.75 K page_count: 1 document date: 2014-07-31




[\[pdf\]](#) Specifications

C01 ownman4L 121902 New User P R O F E S I O N A L M I C H 146583 c01 qloud ar SITES IMG casa libertella 03 2020 |||

PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO Table Of Contents ENGLISH Introduction 1 **C01** Features 2 Operating the **C01** 3 Powering the **C01** 3 Polar Pattern 3 Microphone Placement 3 Setting up the Signal Level 4 P-Popping 4 Stand Mounting the **C01** 4 Using the Opt...

lang:en score:19 filesize: 205.26 K page_count: 24 document date: 2022-12-09

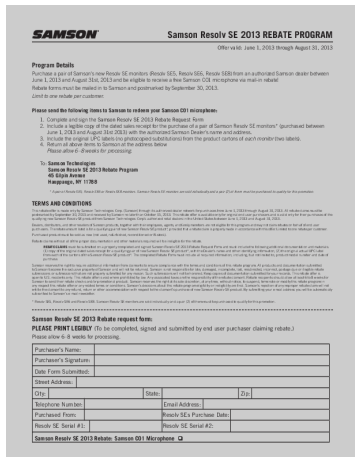

[\[pdf\]](#) Label

ResolvSE C01 rebate Summer 2013 samsontech site media support

Samson Resolv SE 2013 REBATE PROGRAM Offer valid: June 1, 2013 through August 31, 2013 Program Deta ... d Samson dealer between June 1, 2013 and August 31st, 2013 and be eligible to receive a free Samson **C01** microphone via mail-in rebate Rebate forms must be mailed in to Samson and postmarked by Septem...

lang:en score:19 filesize: 47.71 K page_count: 1 document date: 2013-05-29



[\[pdf\]](#) Specifications

C01 ownman4L 121902 New User 550064 602 kBSAMSON CONDENSER MICdlxmusic se storage CD79470F94C40A4FC42093665E87106BBCFCF3B8D27E42860872C6AE33194336 d0913b51a3e1403aa0eafded9a36e6db media 621991743f2940a5b582b6dd7b70556e kB550064 MICSAMSON 550064emnordic dk no |||

PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO Table Of Contents ENGLISH Introduction 1 **C01** Features 2 Operating the **C01** 3 Powering the **C01** 3 Polar Pattern 3 Microphone Placement 3 Setting up the Signal Level 4 P-Popping 4 Stand Mounting the **C01** 4 Using the Opt...

lang:en score:18 filesize: 602.11 K page_count: 24 document date: 2003-10-08

[illegible]

[\[pdf\]](#)

Samson Pricelist January 20 2023.xls Jeremy Berger pl samson january yorkville pricelist |||

Samson Technologies - www.samsontech.com SWGMMSHHQ8 SWGMMSLAV
SWSATXHM60 SWSATXDE10 SW9A9SQE SW9A9S ... WXPDP2MPR SWXPD2HQ6
SWXPD2BDE5 SWXPD2BLM8 SWXRDM1HQ6 SWXRDM1BDE5 SWXRDM1BLM7
SWS212HH-E SWS412HH-E **SAC01**UPRO SAGM1UPRO SAGOMIC SAMTR
SAMETEORITE SAQ2U SASAT SAUB1 SALMU1 SADEU1 SAQ4 SAQ6 SAQ6CL3P
SAQ7 ...

lang:de score:18 filesize: 107.26 K page_count: 3 document date: 2023-01-16

[illegible]

[\[pdf\]](#)

Samson Pricelist May 10 2022.xls Jeremy Berger pl samson may yorkville pricelist |||

Samson Technologies - www.samsontech.com SWGMMSHHQ8 SWGMMSLAV
SWSATXHM60 SWSATXDE10 SW9A9SQE SW9A9S ... dheld VHF Wireless System
Stage 412 - Frequency-Agile, Quad-Channel Handheld VHF Wireless System
SAC01UPRO SAC01UPROPK SAGM1UPRO SAGOMIC SAMTR SAMETEORITE
SAQ2U SASAT SAUB1 SALMU1 SADEU1 SAQ4 SAQ6 SA...

lang:de score:18 filesize: 106.91 K page_count: 3 document date: 2022-04-28

[illegible]

[\[pdf\]](#)

Samson Pricelist January 20 2023.xls Jeremy Berger pl samson january yorkville images pricelist |||

Samson Technologies - www.samsontech.com SWGMMSHHQ8 SWGMMSLAV
SWSATXHM60 SWSATXDE10 SW9A9SQE SW9A9S ... WXPDP2MPR SWXPD2HQ6
SWXPD2BDE5 SWXPD2BLM8 SWXRDM1HQ6 SWXRDM1BDE5 SWXRDM1BLM7
SWS212HH-E SWS412HH-E **SAC01**UPRO SAGM1UPRO SAGOMIC SAMTR
SAMETEORITE SAQ2U SASAT SAUB1 SALMU1 SADEU1 SAQ4 SAQ6 SAQ6CL3P
SAQ7 ...

lang:de score:18 filesize: 107.25 K page count: 3 document date: 2024-04-23



[\[pdf\]](#) User Manual Instructions Specifications

AXCMSM BK Manual ai felix Specification Sheet AxxessAbles Universal Microphone Spider Shock Mount with 4 Adapters Recording Mic Shockmount compatible Rode NT1 A NT2 Procaster AT2020 AT2020USB MXL990 770 R77 U87 Musical Instruments B1eFiDbYscS m media amazon images I |||

FALL 2020 MSM-BK MICROPHONE SHOCK MOUNT WITH ADAPTERS LIST OF PARTS AxxessAbles Microphone S ... tible with MXL models 990 / 770 / R77 / TEMPO / V67G / Revelation / 2006 , and some Samson models **C01** / C03 /**C01U** / C03U / CL7 / CL8 . 25mm Compatible with Neumann model U87. Remove threaded micro...

lang:en **score:17** filesize: 2.24 M page_count: 2 document date: 2020-09-15




[\[pdf\]](#) Specifications

USB Studio Condenser Microphone samsontech PRODUCT NFORMATION 2013 ©201 amson reliminar iterature I rodud escription n pec ubjec hange FEATURES Large 19mm diaphragm studio condenser microphone Plug in and start recording No extra gear needed! Cardioid pickup pattern 16 bit 44.1 kHz resolution Smooth flat frequency response Heavy gauge mesh grill Includes desktop mic stand clip cable C01UCutsheet site media support manuals

C01U USB Studio Condenser Microphone PRODUCT 2013 INFORMATION 2013 Samson. Preliminary Literature. All product descriptions and specs subject to change. Samson presents the USB studio condenser microphone that started it all: The **C01U**. This classic USB microphone bridges the gap between mid-level...

lang:en **score:17** filesize: 109.86 K page_count: 1 document date: 2013-01-16

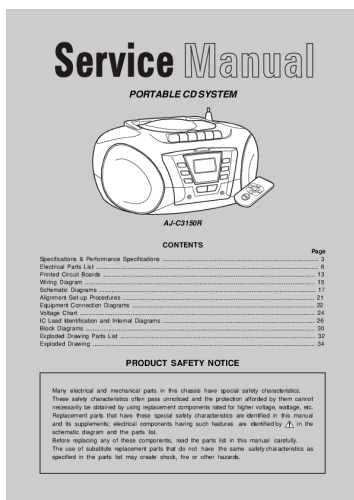

[\[pdf\]](#) User Manual Parts List Specifications Diagram

D 183x 1832 TSB IC AKAI Draft PAT LAU Akai AJC 3150 R Service Manual vintageshifi repertoire telecharge sterremuur nl manuals ARCHIEF deel 1

PORTABLE CD SYSTEM AJ-C3150R CONTENTS Page Specifications Performance Specifications 2 051-673150-003 1 051-673150-009 1 051-673250-009 1 051-675160-006 1 051-675160-009 1 136-040178-**C01** 1 123-B53031-100 1 124-016020-000 1 126-220100-006 1 134-A14331-002 1 055-006040-108 0.0053...

lang:en **score:16** filesize: 460.07 K page_count: 27 document date: 2003-01-03



[TMP Pro Audio Catalog 2011](#)

Explore the comprehensive 2011 Pro Audio Catalog from TMP Pro Distribution, featuring a wide array of microphones, speakers, amplifiers, mixers, and other audio equipment from leading brands.


lang:en score:16 filesize: 15.43 M page_count: 126 document date: 2011-01-19



[Professional Audio Equipment Catalog: Microphones, Cables, Interfaces, and More](#)

A comprehensive catalog showcasing a wide range of professional audio gear, including microphones, cables, audio interfaces, studio monitors, accessories, and software from leading brands.

lang:en score:16 filesize: 28.83 M page_count: 91 document date: 2014-10-26

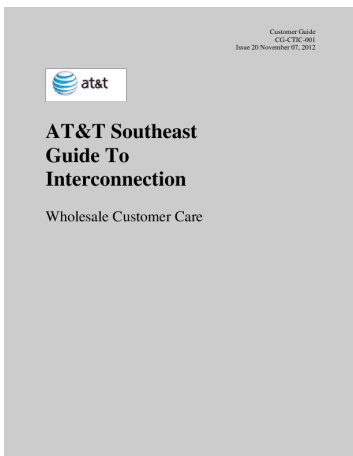


[\[pdf\] User Manual Guide](#)

rt6940 AT T Southeast Guide To Interconnection Prime Access number in a translation or manual screening table to determine the office make certain two way transmission tests on basis This SE primeaccess att pa documents unrestr Resource ordering 22foc Purpose document is reference resource for Customers ACs use when dealing with fast packet service intervals Popinski Customer CG CTIC 001 Issue 20 November 07 2012 Wholesale Care |||

Customer Guide CG-CTIC-001 Issue 20 November 07, 2012 AT T Southeast Guide To Interconnection Wholes ... Attn: Team Leader, all states NC, SC, FL Melissa Campbell 904.326.1573 904.326.1573 FK02 /NC01/ CT02 ROTATES 800.961.6272 913.791.2218 Attn: Team Leader, all states NC, SC, FL Ther...

lang:en score:16 filesize: 2.8 M page_count: 208 document date: 2019-01-28

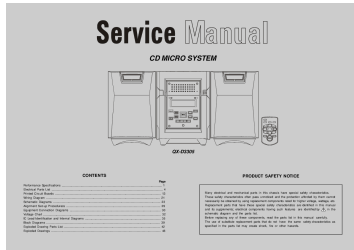

[\[pdf\]](#) User Manual Parts List Specifications Diagram

D 6610 5w PROLINE DRAFT cover pat lau Akai QXD 3305 Service Manual vintageshifi 80 repertoire

telecharge sterremuur nl manuals AKAI ARCHIEF deel 3

CD MICRO SYSTEM QX-D3305 CONTENTS Page Performance Specifications

..... Mfr s Part No. Qty. 050-080060-200 1 050-080210-200 1 050-110040-200 1 136-040138-C00 1 136-040368-**C01** 1 136-04V30D-200 1 136-050931-200 1 136-06769C-B00 1 132-020388-882 1 135-005268-020 1 135-00611...

lang:en **score:15** filesize: 8.25 M page_count: 26 document date: 2004-03-30



[\[pdf\]](#) Instructions Documentation

Notice de montage et mise en service EB 8331 4 FR samson ag – Rétroéclairage c11 LAMP L activation I

entrée binaire entraîne allumage permanence du rétroéclairage Quitter le réglage manuel la course

e83314fr samsongroup document |||


Servomoteur lectrique Type 3374 Excution avec positionneur, rvision 3 Notice de

montage et de mise e ... clignote. Tourner Rglage voulu Pousser Application du

rglage Exemple ci-contre : La source code **c01** est rgle sur mA. Quitter le niveau

Pousser Fermeture du niveau Exemple ci-contre : Le niveau d ...

lang:fr **score:14** filesize: 2.81 M page_count: 92 document date: 2019-06-17

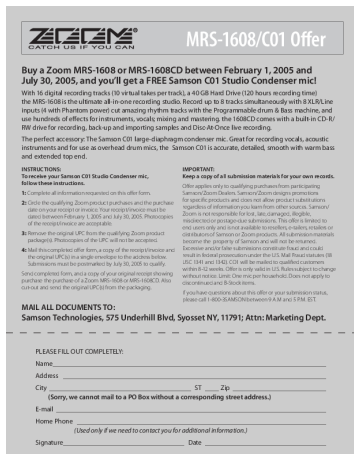

[\[pdf\]](#) Instructions Accessories

Zoom Rebate2 05 7 indd Rebate 2 samsontech 80 |||


MRS-1608/**C01** Offer Buy a Zoom MRS-1608 or MRS-1608CD between February 1,

2005 and July 30, 2005, and you ll get a FREE Samson **C01** Studio Condenser mic

With 16 digital recording tracks 10 virtual takes per track , a 40 GB Hard Drive 120

hours recording time the MRS-1608 is the ultimate all-in-on...

lang:en **score:14** filesize: 47.78 K page_count: 1 document date: 2005-03-31

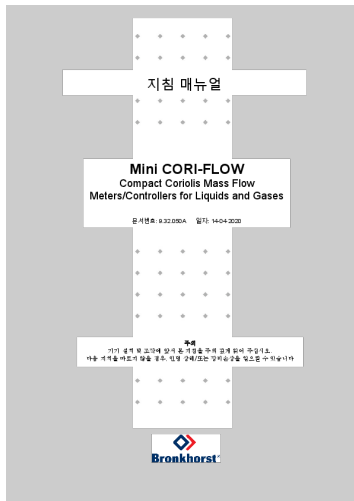

[\[pdf\]](#) User Manual

115 Bronkhorst High Tech B V BHT medewerker 9 32 050 mini CORI FLOW manual Korean Mass Flow Meters Controllers 932050 bronkhorst getmedia c92d1991 dff2 4299 b823 054352b69a96 ||| ||| Mini CORI-FLOW Compact Coriolis Mass Flow Meters/Controllers for Liquids and Gases : 9.32.050A : 14-04-2020 . , / BRONKHORST CORI-FLOW . . CORI-FLOW . - 9.17.052 - CORI-FLOW .
Mini CORI-FLOW Compact Coriolis Mass Flow Meters/Controllers for Liquids and Gases : 9.32.050A : 1 ... : Liquid Gas M12 C2I F-033CI C0I, C1I F-033CI C2I M13 C5I F-033CI **C0I**, C1I C5I F-033CI M14 C2I F-033CI C2I M15 C5I F-033CI F-004AI C0I, C1I F-033CI C5I F-033CI...

lang:de score:13 filesize: 4.51 M page_count: 43 document date: 2020-04-14




[\[pdf\]](#) Instructions Specifications Warranty

PROFESSIONAL MICROPHONES 622200 static bhphoto lit files |||
PROFESSIONAL MICROPHONES **C01** Studio Condenser Microphone AUDIO
ENGLISH Introduction Congratulations on your purchase of the Samson **C01** studio condenser. The **C01** features a large, 19mm ultra thin diaphragm capsule which faithfully reproduces a variety of sound sources including vocals, acoustic i...
lang:en score:13 filesize: 459.45 K page_count: 6 document date: 2020-08-19



[\[pdf\]](#) Datasheet Accessories Diagram

doc strumentimusicali net datasheet products id 10857
Microfoni Microfoni da Studio per Voce SAMSON **C01** giovedì 16 settembre, 2021
Cod.Art. : 10857 li.n MICROFONO IPERCARDIOIDE A DIAFRAMMA LARGO a II **C01** I ideale per la registrazione della voce, di strumenti ic acustici e per microfonare batterie acustiche. Il Samson **C01** un microfono a condensator...
lang:it score:13 filesize: 18.46 K page_count: 1 document date: 2021-09-16



CE




STSLAB RADIO TESTREPORT Report No: STS1606017F01 Issued for Samson Electronics Inc. 3400 E. SI ... t power parameters of FHSS Radiated Spurious EmissionTest E-1 EUT Conducted Emission Test E-1 EUT **C01** AC Plug Page 12 of 62 Report No.: STS1606017F01 2.5 DESCRIPTION OF SUPPORT UNITS The EUT has...

PRO AUDIO Microphones and Accessories Catalog

Comprehensive catalog of PRO AUDIO microphones, including large diaphragm, small diaphragm, USB, and handheld models, alongside essential accessories, preamps, compressors, audio interfaces, and music production software from leading brands.

lang:en score:12 filesize: 14.18 M page count: 88 document date: 2011-10-24

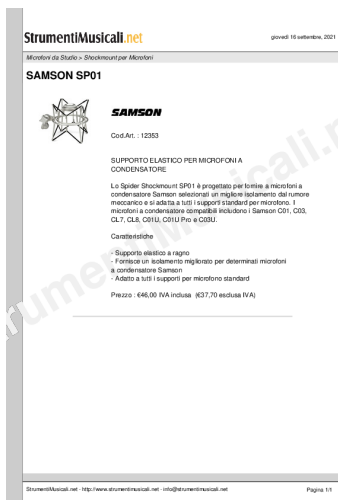

[pdf] Datasheet

doc strumentimusicali net datasheet products id 12353

Microfoni da Studio Shockmount per Microfoni SAMSON SP01 giovedì 16 settembre, 2021 Cod.Art. : 12 ... tutti i supporti standard per microfono. I microfoni a condensatore compatibili includono i Samson **C01**, C03, s CL7, CL8, **C01U**, **C01U Pro** e C03U. u Caratteristiche tiM - Supporto elastico a ragno - For...

lang:it score:12 filesize: 21.7 K page_count: 1 document date: 2021-09-16



[pdf] User Manual Parts List Specifications Diagram

D 6610 5w PROLINE DRAFT cover pat lau CD MICRO SYSTEMAkai QXD 3305 Service Manualmanuals sterremuur nl AKAI ARCHIEF Akai deel3 Manual |||

CD MICRO SYSTEM QX-D3305 CONTENTS Page Performance Specifications

..... Mfr s Part No. Qty. 050-080060-200 1 050-080210-200 1 050-110040-200 1 136-040138-C00 1 136-040368-**C01** 1 136-04V30D-200 1 136-050931-200 1 136-06769C-B00 1 132-020388-882 1 135-005268-020 1 135-00611...

lang:en score:12 filesize: 8.25 M page_count: 26 document date: 2004-03-30



Defender Marine Outfitter Inflatable Boats & Accessories Catalog

Explore the comprehensive Defender Marine Outfitter catalog featuring a wide selection of inflatable boats from leading brands like Zodiac, Achilles, AB Inflatables, and Mercury. Discover essential marine accessories, parts, and maintenance products with detailed specifications and pricing for boating enthusiasts.

lang:nl score:12 filesize: 24.28 M page_count: 320 document date: 2014-04-02



[\[pdf\]](#)

EB 8331 4 Elektrischer Antrieb Typ 3374 Ausführung mit gen der Richtlinien 2014 30 EU und 35 Der dem EAC Kennzeichen versehene elektrische erfüllt die Anforde e83314de samsongroup document |||

EB 8331-4 Originalanleitung Elektrischer Antrieb Typ 3374 Ausfhrung mit Stellungsregler Firmwarevers ... lich. Erweiterte Temperaturmessung: In der Applikation „PID-Regler knnen bei c85 Einheit = C und **c01** Quelle = Pt-1000- Eingang zustzlich an Eingang 1 und Eingang 2 Temperaturen ber einen Pt-1000- Sen...

lang:de **score:12** filesize: 11.41 M page_count: 144 document date: 2022-10-13



[\[pdf\]](#)

Pre show planner MWA24 135 PRESHOWPLANNER V11 medicwestafrica content dam Informa medic west africa english 2024 |||

17-19 April 2024 Landmark Centre, Lagos, Nigeria Pre-show planner The gateway to access the West AfrF10 H HAIMEN SHENGBANG LABORATORY EQUIPMENT CO.,LTD 2.B40 Hangzhou Frenovo Biotech Co., Ltd. 3.**C01** Hangzhou Kangji Medical Instrument Co., Ltd. 1.G29 Hangzhou Singclean Medical Products Co.,Lt...

lang:en **score:12** filesize: 2.96 M page_count: 31 document date: 0000-00-00



[\[pdf\]](#)

MWA24 135 PRESHOWPLANNER V10 medicwestafrica content dam Informa medic west africa english 2024 |||

17-19 April 2024 Landmark Centre, Lagos, Nigeria Pre-show planner The gateway to access the West AfrF10 H HAIMEN SHENGBANG LABORATORY EQUIPMENT CO.,LTD 2.B40 Hangzhou Frenovo Biotech Co., Ltd. 3.**C01** Hangzhou Kangji Medical Instrument Co., Ltd. 1.G29 Hangzhou Singclean Medical Products Co.,Lt...

lang:en **score:12** filesize: 2.96 M page_count: 31 document date: 0000-00-00



[pdf] User Manual

Soportes AT2021 Se usa para captura general de instrumentos voces gabinetes amplificadores y más manipulación manual las funciones DAW los 14 Audio Profesional static bhphotovideo FrameWork

Product Resources smponthly summer2014

Cables de estudio y transmisin Comprometidos para preservar la ms pura seal con cobre de alto grado, ... tro antipop y garanta de 10 aos. #RONT2ASSP

.....399.00 **C01** Es econmico, pero con una robusta carcasa y rejilla metlica. Diafragma grande de 19mm ofrece un...

lang:es **score:12** filesize: 22.24 M page_count: 90 document date: 2014-05-29



[pdf]

Automationssystem TROVIS 5400 Heizungs und Fernheizungsregler - 5431 Einbau Bedienungsanleitung

e54310de Automation Automationssysteme Automatisierung Regeltechnik SAMSON AG samson

agFehlermeldungen 85 C01 F08 ist nur einstellbar wenn CO SYS F10 F11 ausgeschaltet

sindsamsongroup document |||

Automationssystem TROVIS 5400 Heizungs- und Fernheizungsregler TROVIS 5431

Elektronik von SAMSON E ... externe Bedarfs- EB 5431 37 Funktionsbeschreibungen

Zeitfunktionen anforderung aus, und, wenn **C01** F07-1, d. h. Auentemperatur ein.

5.2.4 Pumpenmanagement CO1 F09 Mit den optionalen Binrausgn...

lang:de **score:12** filesize: 1.38 M page_count: 102 document date: 2017-08-22



PRO AUDIO Large Diaphragm Microphones - BandH.com

Explore a wide range of large diaphragm microphones from top brands like AKG, Audio-Technica, Behringer, Rode, Shure, and more. Find the perfect microphone for vocals, instruments, and studio recording.

lang:en **score:12** filesize: 11.88 M page_count: 88 document date: 2013-04-30

