

Soehnle 63536

Soehnle LINEA Niro Personal Scale Model 63536 User Manual

1. PRODUCT OVERVIEW

The Soehnle LINEA Niro Personal Scale Model 63536 is a digital design scale crafted from deep black refined safety glass and brushed stainless steel, offering a stylish and functional addition to any bathroom. It features a large, clear red LED display and an automatic on/off function for user convenience.



Image 1: Top view of the Soehnle LINEA Niro Personal Scale, showcasing its black glass surface and brushed stainless steel accents with a red LED display.

Key Features:

- **Automatic On/Off Function:** The large, clear LED display (38 mm) appears immediately upon stepping onto the scale. The device switches off automatically when not in use, conserving battery life.
- **Excellent Stability:** Provided by the large safety glass standing surface, ensuring secure and comfortable use.

- **High Capacity & Precision:** Supports a maximum weight of 150 kg with a precise graduation of 100 g for accurate measurements.
- **Durable Materials:** Constructed with refined safety glass and brushed stainless steel for longevity and a premium aesthetic.

2. SETUP

2.1 Unpacking

Carefully remove the scale from its packaging. Inspect the scale for any signs of damage. Retain the packaging for future storage or transport.

2.2 Battery Installation

The Soehnle LINEA Niro Personal Scale requires 4 AA batteries, which are included. Locate the battery compartment on the underside of the scale. Open the compartment cover, insert the batteries according to the polarity indicators (+/-), and then securely close the cover.

2.3 Initial Use and Placement

For accurate measurements, place the scale on a hard, flat, and stable surface. Avoid placing it on carpets or uneven flooring, as this can affect accuracy. Ensure the unit setting on the underside of the scale is set to 'kg' (kilograms) if that is your preferred unit of measurement.



Image 2: The Soehnle LINEA Niro Personal Scale positioned on a tiled bathroom floor, demonstrating its sleek design in a typical home environment.

3. OPERATING INSTRUCTIONS

3.1 Taking a Measurement

1. Gently tap the center of the scale with your foot to activate it. The display will show '0.0' or '0.00'.
2. Once '0.0' or '0.00' is displayed, step onto the scale barefoot, standing still and centered.
3. Your weight will be displayed on the large red LED screen. The reading will flash a few times before

stabilizing.

4. Step off the scale. The measurement will remain on the display for a few seconds before the scale automatically switches off.

3.2 Automatic On/Off

The scale is designed for convenience with an automatic on/off function. It turns on instantly when you step on it and automatically switches off after a short period of inactivity, helping to conserve battery power.

4. MAINTENANCE AND CARE

4.1 Cleaning

To clean the scale, wipe the surface with a slightly damp cloth and a mild detergent if necessary. Do not use abrasive cleaners, harsh chemicals, or immerse the scale in water. Ensure the scale is completely dry before storage or next use.

4.2 Storage

Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity. Do not place heavy objects on the scale when not in use.

5. TROUBLESHOOTING

Common Issues and Solutions:

- **Display not showing / Scale not turning on:**
 - Check if the batteries are correctly installed and not depleted. Replace batteries if necessary.
 - Ensure the scale is placed on a flat, stable surface.
- **Inaccurate readings / Inconsistent measurements:**
 - Make sure the scale is on a hard, level surface. Carpets or uneven floors can cause inaccuracies.
 - Ensure you are standing still and centered on the scale.
 - Step off and then back on the scale to re-calibrate if necessary.
- **Error message on display:**
 - If an 'Err' message appears, it may indicate an overload (weight exceeds 150 kg) or a measurement error. Step off the scale and try again.

6. TECHNICAL SPECIFICATIONS

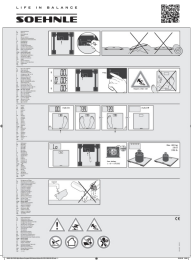

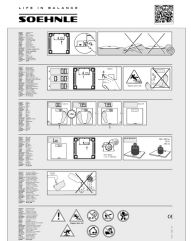
Feature	Specification
Brand	Soehnle
Model Number	63536
Weight Limit	150 Kilograms

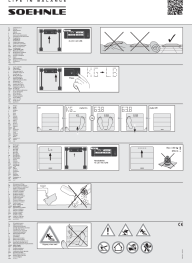

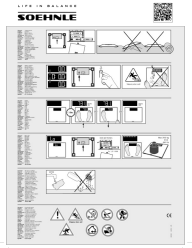
Accuracy	100g
Display Type	LED
Material	Glass
Form Factor	Flat
Special Features	Automatic shut-off, Portable, Lightweight
Power Source	4 AA batteries (included)
Product Dimensions	36.83 x 36.83 x 6.35 cm
Item Weight	2 Kilograms
Manufacturer	Leifheit
First Available Date	January 15, 2020

7. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support for your Soehnle LINEA Niro Personal Scale Model 63536, please refer to the warranty card included with your purchase or visit the official Soehnle website. Contact details for customer service are typically provided in these resources.

Related Documents - 63536

	<p>Soehnle Style Sense Compact 300 Scale - User Manual and Safety Information</p> <p>Comprehensive guide for the Soehnle Style Sense Compact 300 scale, covering setup, operation, maintenance, and safety instructions in multiple languages.</p>
	<p>SOEHNLE Body Fat Scale: User Manual and Operating Instructions</p> <p>A comprehensive guide to the SOEHNLE Body Fat Scale, detailing its features, operation, data input, measurement procedures, interpretation of results, factors affecting measurements, maintenance, troubleshooting messages, technical specifications, and warranty information. Learn how to accurately measure your body weight and body fat percentage at home.</p>
	<p>Soehnle Style Sense Safe 100 Digital Bathroom Scale User Manual</p> <p>User guide for the Soehnle Style Sense Safe 100 digital bathroom scale, detailing operation, unit conversion, safety precautions, warranty information, and disposal guidelines.</p>

	<p>Soehnle Style Sense Bamboo Magic Digital Scale - User Guide and Warranty</p> <p>User guide for the Soehnle Style Sense Bamboo Magic digital personal scale (Model 63880), covering setup, operation, maintenance, safety, warranty, and disposal information.</p>
	<p>Soehnle Tempo Analog Personal Scale - User Manual and Warranty Information</p> <p>This document provides user information and warranty details for the Soehnle Tempo Analog Personal Scale. It includes safety instructions and multi-language warranty terms.</p>
	<p>Soehnle Style Sense Comfort 600 Digital Bathroom Scale - User Manual</p> <p>Comprehensive user manual for the Soehnle Style Sense Comfort 600 digital bathroom scale. Provides instructions on operation, unit conversion, cleaning, maintenance, safety precautions, warranty information, and proper disposal of batteries and electronic waste.</p>