

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Clarity](#) /
- › [Clarity XLC3.4+ DECT 6.0 Amplified Cordless Phone User Manual](#)

Clarity 59234

Clarity XLC3.4+ DECT 6.0 Amplified Cordless Phone User Manual

Model: XLC3.4+ (59234)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Clarity XLC3.4+ DECT 6.0 Amplified Cordless Phone. Designed for enhanced clarity and ease of use, this phone features extra-loud amplification, large buttons, talking Caller ID, and dual power battery backup. Please read this manual thoroughly to ensure proper use and to maximize the benefits of your new phone.



Figure 1: Clarity XLC3.4+ Handset and Base Unit

The Clarity XLC3.4+ is an amplified cordless phone system designed to provide clear communication, especially for individuals with hearing or vision impairments. It includes a cordless handset and a base unit, both equipped with features to enhance usability.

1. Package Contents

Before you begin, ensure all items are present:

- Clarity XLC3.4+ Cordless Handset
- Clarity XLC3.4+ Base Unit
- AC Power Adapter for Base Unit
- Telephone Line Cord
- 2 AAA Rechargeable Batteries (for Handset)
- Belt Clip (optional attachment for handset)
- User Manual (this document)

2. Battery Installation

The handset requires two AAA rechargeable batteries (included).

1. Locate the battery compartment cover on the back of the handset.
2. Slide the cover downwards to remove it.
3. Insert the two AAA batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.
5. Place the handset on the base unit to charge for at least 16 hours before first use. The "IN USE/CHARGE" light on the base will illuminate.

3. Connecting the Base Unit

Connect the base unit to your telephone line and a power outlet.

1. Plug one end of the telephone line cord into the "LINE" jack on the back of the base unit.
2. Plug the other end of the telephone line cord into your telephone wall jack.
3. Plug the small end of the AC power adapter into the "POWER" jack on the back of the base unit.
4. Plug the large end of the AC power adapter into a standard electrical wall outlet.
5. Ensure the base unit is placed on a flat, stable surface, away from other electronic devices that may cause interference.

OPERATING INSTRUCTIONS

Handset Controls and Features

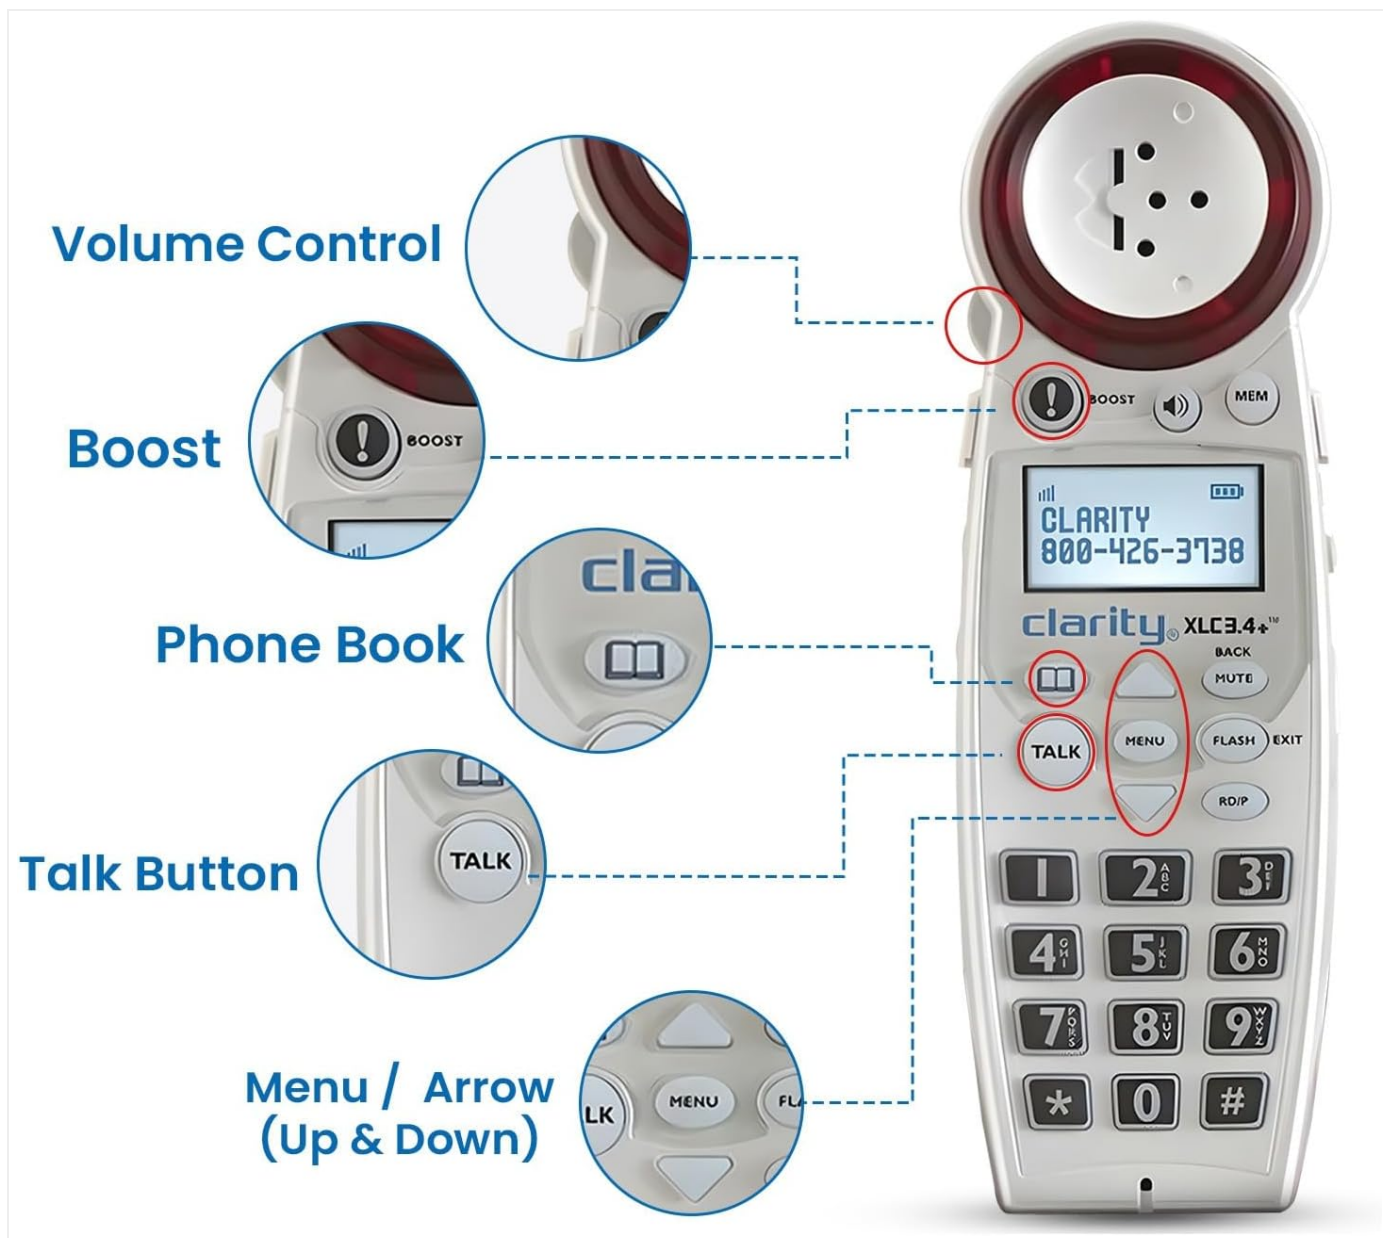


Figure 2: Handset Key Features (Front View)

This image highlights key controls on the handset: the Volume Control wheel on the side, the Boost button for extra amplification, the Phone Book button to access contacts, the Talk button to answer or make calls, and the Menu/Arrow buttons for navigation.



Figure 3: Handset Key Features (Additional Controls)

This image details other important handset buttons: the Speaker button to activate speakerphone, the MEM button for memory functions, the Mute button to silence your microphone, the Flash button for call waiting or transferring, and the Redial/Pause button for redialing the last number or inserting a pause.

Base Unit Controls and Features

Navigate Phone Base With Ease



Figure 4: Base Unit Key Features

The base unit features a Visual Ringer that flashes during incoming calls, Volume Up/Down buttons for adjusting the ringer loudness, a Silent button to mute the ringer, a Power Button and In Use/Charge Light indicating power status and charging, and a Find button to locate a misplaced handset.

1. Making and Receiving Calls

• To Make a Call:

- Press the **TALK** button.
- Dial the phone number using the keypad.
- To end the call, press the **TALK** button again or place the handset back on the base unit.

• To Receive a Call:

- When the phone rings, press the **TALK** button.
- To end the call, press the **TALK** button again or place the handset back on the base unit.

2. Adjusting Volume and Amplification

- **Handset Earpiece Volume:** During a call, use the **Volume Control Wheel** on the side of the handset to adjust the listening volume.

- **Boost Feature:** For maximum amplification (up to 50dB), press the **BOOST** button on the handset during a call. The boost indicator light will illuminate. Press again to deactivate.
- **Ringer Volume:** On the base unit, use the **VOLUME UP/DOWN** buttons to adjust the ringer loudness (up to 95dB).

3. Talking Caller ID and Keypad

- **Talking Caller ID:** When an incoming call is received, the phone will announce the caller's name or number (if available and subscribed to Caller ID service).
- **Talking Keypad:** As you dial numbers, the phone will audibly announce each digit pressed, aiding in accurate dialing.

4. Phone Book and Memory Functions

- Press the **PHONE BOOK** button to access your stored contacts.
- Use the **MENU/ARROW** buttons to navigate through the phone book entries.
- Press **TALK** to dial a selected entry.
- The **MEM** button can be used for quick dialing of pre-programmed numbers. Refer to the full manual for programming instructions.

5. Other Call Features

- **Speakerphone:** During a call, press the **SPEAKER** button to activate the speakerphone. Press again to return to handset mode.
- **Mute:** During a call, press the **MUTE** button to temporarily silence your microphone. The other party will not hear you. Press again to unmute.
- **Flash:** Use the **FLASH** button for call waiting or transferring calls, depending on your telephone service.
- **Redial/Pause:** Press the **REDIAL/PAUSE** button to redial the last number called. This button can also insert a pause when programming numbers.

6. Power Outage Protection

The Clarity XLC3.4+ base unit includes backup battery capability to ensure limited functionality during a power outage. When power is lost, the handset can still make and receive calls for a limited time using the base unit's backup power.

MAINTENANCE

1. Cleaning Your Phone

To clean your phone, wipe it with a soft, slightly damp cloth. Do not use harsh chemicals, cleaning solvents, or abrasive cleaners. Avoid getting moisture into any openings.

2. Battery Care and Replacement

The handset uses rechargeable AAA batteries. Over time, battery performance may decrease. If the handset's talk time or standby time significantly reduces, it may be time to replace the batteries. Use only approved rechargeable AAA batteries. Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

If you experience issues with your Clarity XLC3.4+ phone, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is disconnected or faulty.	Ensure the telephone line cord is securely plugged into the base unit and the wall jack. Test with another phone if possible.

Problem	Possible Cause	Solution
Handset not charging or powering on.	Handset not properly seated in cradle; batteries not installed correctly or depleted.	Ensure the handset is correctly placed on the base unit. Verify battery installation and polarity. Allow 16 hours for initial charge. Replace old batteries if necessary.
Cannot hear caller or caller cannot hear me.	Volume too low; Mute function activated; poor connection.	Adjust handset volume using the side wheel. Press the MUTE button to deactivate. Check base unit connections.
Ringer not working or too quiet.	Ringer volume set too low or silent mode activated.	On the base unit, press the VOLUME UP button. Ensure the SILENT button on the base is not activated.
Accidental volume changes on handset.	Volume control wheel is easily adjusted during handling.	Be mindful of the side volume wheel when holding the handset. Adjust as needed during calls.

SPECIFICATIONS

Feature	Detail
Model Number	59234 (XLC3.4+)
Product Dimensions (L x W x H)	10.6 x 3.7 x 10 inches
Item Weight	0.01 ounces
Batteries	2 AAA rechargeable batteries (included)
Telephone Type	Cordless DECT 6.0
Material	Plastic
Power Source	Battery Powered (Handset), AC Adapter (Base)
Dialer Type	Single Keypad
Amplification	Up to 50dB (handset earpiece)
Ringer Loudness	Up to 95dB (base unit)
Hearing Aid Compatible	Yes

Amplified Phone Dimensions



Figure 5: Product Dimensions Overview

This image provides a visual representation of the Clarity XLC3.4+ phone's dimensions, including the handset height, base width, and display size, aiding in understanding its physical footprint.

WARRANTY AND SUPPORT

Warranty Information

Clarity products typically come with a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Clarity website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.







Customer Support


For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Clarity Customer Support.

- **Clarity Support Website:** www.clarityproducts.com/support (Example URL, actual URL may vary)
- **Clarity Support Phone:** 1-800-426-3738 (As seen on product image display)

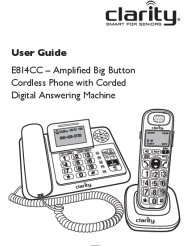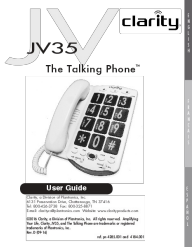When contacting support, please have your product model number (XLC3.4+ or 59234) and purchase date available.

Related Documents - 59234

	<p>Clarity E814CC Amplified Big Button Cordless Phone User Guide</p> <p>User guide for the Clarity E814CC amplified big button cordless phone with corded digital answering machine. Learn about setup, features, and safety instructions.</p>
	<p>Clarity JV35 Talking Phone User Guide</p> <p>Comprehensive user guide for the Clarity JV35 Talking Phone, detailing installation, features, and operation for enhanced communication.</p>
	<p>Clarity SempreMini Bluetooth Headset User Guide</p> <p>Comprehensive user guide for the Clarity SempreMini Bluetooth headset, covering setup, pairing, usage, troubleshooting, and safety instructions. Learn how to connect, manage calls, and optimize your audio experience.</p>
	<p>AlertMaster AL10 Visual Alert System User Guide</p> <p>User guide for the Clarity AlertMaster AL10 Visual Alert System, detailing features, installation, operation, troubleshooting, and accessories for enhanced home notification and safety.</p>
	<p>BRITA Water Dispenser Solutions for Organizations Efficiency & Sustainability</p> <p>Explore BRITA's range of high-capacity, stylish, and sustainable water dispenser solutions for businesses. Discover features like advanced filtration, energy efficiency, and smart hygiene technology for optimal hydration and reduced environmental impact.</p>
	<p>HPE Aruba Networking Management Software (AirWave) 8.3.0.4 User Guide</p> <p>This user guide provides comprehensive instructions for HPE Aruba Networking Management Software (AirWave) version 8.3.0.4. It covers topics such as device discovery, configuration, monitoring, and reporting, along with specific features like VisualIRF and RAPIDS. The guide is intended for network administrators managing wired and wireless networks.</p>

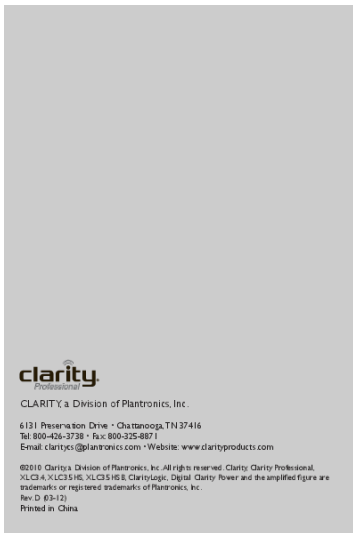

[\[pdf\]](#) Instructions Troubleshooting Guide Reference Guide Specifications Documentation Guide Warranty

Clarity XLC3 4 DECT 6 0 Extra Loud Big Button Speakerphone with Talking Caller ID Base phone 59234


Product Documentation CLARITY B098TVV59S B00TG066NK B004H4EBHI B01N2TYZS9

B01N6GVSYU E1ZlmYmtD2S m media amazon images I |||

CLARITY, a Division of Plantronics, Inc. 6131 Preservation Drive Chattanooga,TN 37416 Tel: 800-426-3738 Fax: 800-325-8871 E-mail: claritycs@plantronics.com

Website: www.clarityproducts.com 2010 Clarity, a Division of Plantronics, Inc.All rights reserved. Clarity, Clarity Professional, XLC3.4, XLC...

lang:en score:15 filesize: 21.44 M page_count: 133 document date: 2015-03-20

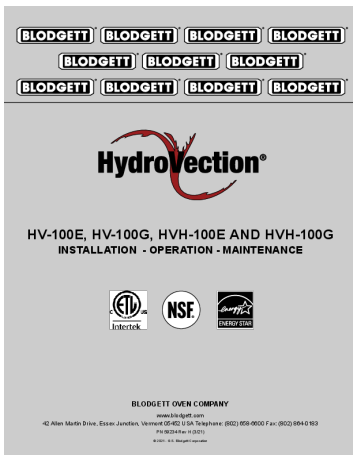

[\[pdf\]](#) User Manual Instructions


Blodgett HV 100 HydrovectionOven Manual 1 update date 1700504553 middleby cdn usermanuals |||

HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin

Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev H 3/21 2021 - G.S. Blodgett Corporation Your Service Agency

S...

lang:en score:15 filesize: 3.74 M page_count: 37 document date: 2022-04-29

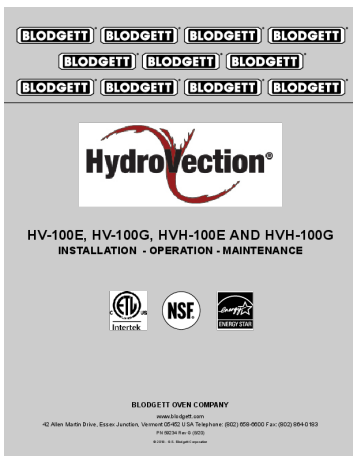

[\[pdf\]](#) User Manual Instructions

English manual Blodgett Ovens The information contained in this is important for the prop er installation use and mainte nance of oven Adherence to these procedures instruc HV100 AB man english cdn2

hubspot net hubfs 4285921 manuals Press MANUAL proceed cook screen Set desired humidity temp fan speed 3 Select Core Probe Cooking from flyout menu 4 t 1526669662357 218317a acitydiscount s std peachtrader

HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin

Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev G 8/20 2018 - G.S. Blodgett Corporation Your Service Agency

S...

lang:en score:15 filesize: 3.68 M page_count: 37 document date: 2020-08-05


Wells Industrial Supplies Ltd.

#102 - 20120 64th Ave.

Langley B.C. V2Y1M8

Tel: 604-534-5456 Fax: 604-534-9992

email: info@wellsindustrial.ca

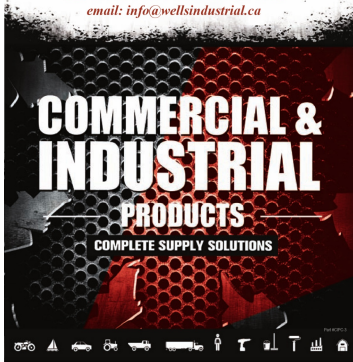


[\[pdf\]](#) User Manual Instructions Accessories Borchure

Wells Industrial Supplies Ltd The Home Depot Pro Contact Tips sample Electrodes shoulder strap operators manual set up dVd 537 2021 2451096 gray 20 mil x 25 4 mm 10 96 m 381096 Highly visible instructions are provided on each unit in English French 800235 Brochure 10142 SX 0457747 content interlinebrands product document

Wells Industrial Supplies Ltd. #102 - 20120 64th Ave. Langley B.C. V2Y1M8 Tel: 604-534-5456 Fax: 604 ... s threads for easy assembly and disassembly Up to 204C 400F PART No. DESC. 59214 6 ml carded **59234** 50 ml carded 59225 250 ml tube THE RIGHT STUFF GASKET MAKER Seals instantly, forming a r...

lang:en **score:14** filesize: 22.43 M page_count: 220 document date: 2013-07-30

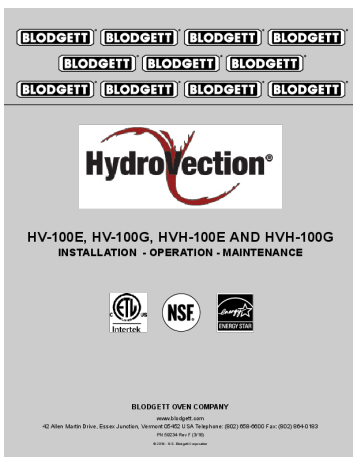

[\[pdf\]](#) User Manual Owner's Manual Instructions

Owners Manual Blodgett HV100GDBL HydroVection Oven Double Stacked Gas Lp HV100 OWNR centralrestaurant pub media |||

HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev F 3/18 2018 - G.S. Blodgett Corporation Your Service Agency S...


lang:en **score:14** filesize: 3.67 M page_count: 37 document date: 2018-08-06

[pdf] User Manual Instructions

ManualBlodgett HVH 100E SGL Single Full Size Electric Hydrovection Oven Vortex Restaurant EquipmentBlodgett Manualvortexrestaurantequipment ca 2017 10 Blodgett Manual 100G DBL Double Natural Gas HydroVection™ Liquid Propane Convection 60 000 BTUBlodgett Manual015 HVH100GSGLLP manualvortexrestaurantequipment Manualres katom products 015 manual HV 30kW 208v 3phBlodgett manual015 HV100EDBL208603 manualres ||| ||| HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN 59234 Rev H 3/21 202 ||| HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN 59234 Rev H 3/21 202 ||| HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN 59234 Rev H 3/21 202

HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev H 3/21 2021 - G.S. Blodgett Corporation Your Service Agency S...


lang:en score:14 filesize: 3.74 M page_count: 37 document date: 2022-04-29

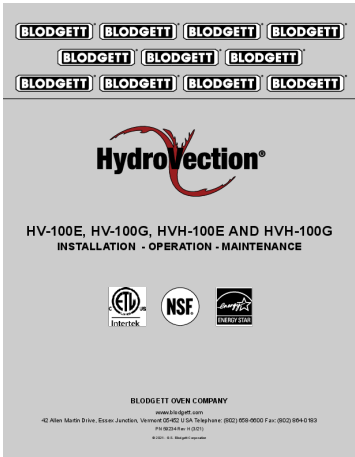

[pdf] User Manual Instructions

HV 100E 100G HVH AND Blodgett INSTALLATION OPERATION MAINTENANCE BLODGETT OVEN COMPANY blodgett 42 Allen Martin Drive Essex Junction Vermont 05452 USA Telephone 802 658 6600 Fax 864 0183 Service Sanitation Manual of the Food and Drug Admin istration FDA Appliance is to be All appliances must installed in accordance with Local HV100 AB man english custom manuals ||| HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev H 3/21 2021 - G.S. Blodgett Corporation Your Service Agency S...


lang:en score:13 filesize: 3.74 M page_count: 37 document date: 2021-03-22

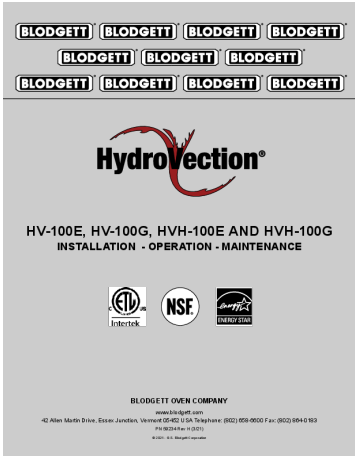


[pdf] User Manual Instructions

Installation Operation Manual Blodgett Gas Oven Parts Town Mexico BL HV 100E 100G HVH iom v 1672779574270 static pt modelManual ||| HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev H 3/21 2021 - G.S. Blodgett Corporation Your Service Agency S...

lang:en score:13 filesize: 3.73 M page_count: 37 document date: 0000-00-00

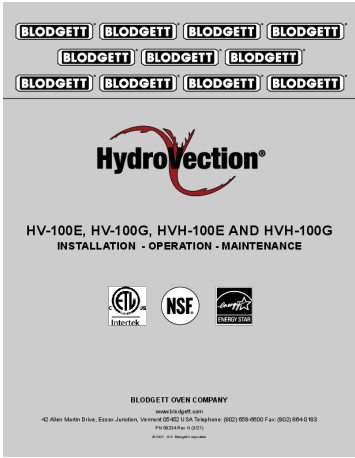

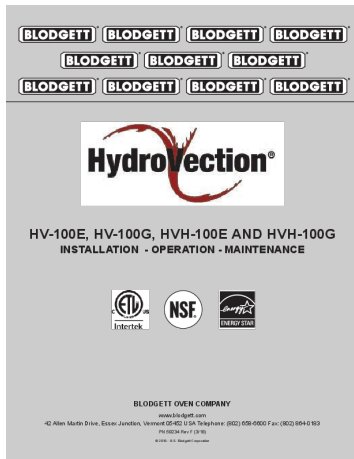


[\[pdf\]](#) User Manual Instructions

Installation Operation Alieving User Manual Restaurant Equipment Supplies Blogett HV Full Size Single Deck 240V Electric Hydrovection Oven equipers mw link id 162251 |||

HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev F 3/18 2018 - G.S. Blodgett Corporation Your Service Agency S...


lang:en **score:13** filesize: 2.14 M page_count: 37 document date: 2019-02-22

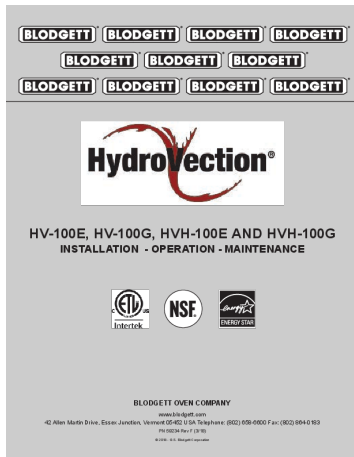

[\[pdf\]](#) User Manual Instructions

Installation Operation Alieving HV 100E 100G HVH AND Equipers manual is important for the prop er installation use and mainte nance of this oven Adherence to these procedu res instruc tions will result in satisfactory baking results long trou ble free service Please read carefully retain it future reference ERRORS Descriptive typo graphic or pictorial errors are cd0300df equipers images User Manual Service Sanitation Food Drug Admin istration FDA Appliance be installed with back ow prevention HV-100E, HV-100G, HVH-100E AND HVH-100G INSTALLATION - OPERATION - MAINTENANCE BLODGETT OVEN COMPANY www.blodgett.com 42 Allen Martin Drive, Essex Junction, Vermont 05452 USA Telephone: 802 658-6600 Fax: 802 864-0183 PN **59234** Rev F 3/18 2018 - G.S. Blodgett Corporation Your Service Agency S...


lang:en **score:13** filesize: 2.14 M page_count: 37 document date: 2019-02-22

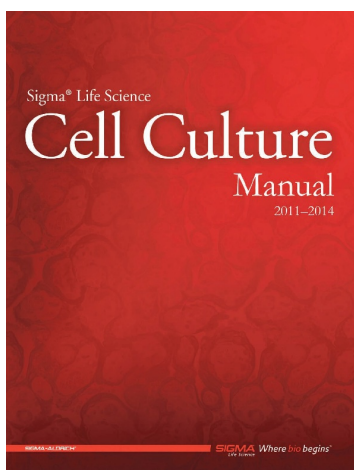

[\[pdf\]](#) User Manual

Cell Culture Manual Sigma Life Science Aldrich Co LLC cell culture manual dia m ru upload iblock cd9 ||| bionurture Biointegrity. Sigma Life Science has been a trusted supplier of reliable, high-quality ... and mammalian cell culture. ship: ambient store at: room temp F8509-100G 100 g D- -Galactose **59234** C6H12O6 FW 180.16 powder, anhydrous, BioReagent, suitable for cell culture, suitable for ins...

lang:en **score:12** filesize: 29.85 M page_count: 383 document date: 2015-12-11

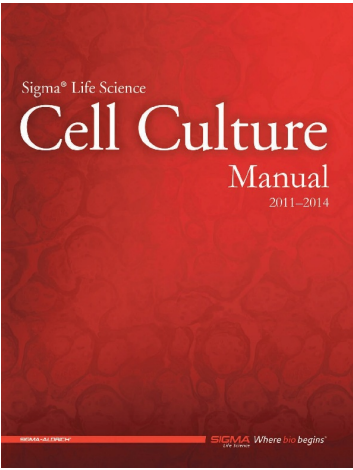


[\[pdf\]](#) User Manual

Cell Culture Manual Sigma Life Science Aldrich Co LLC cell culture manual sigmaaldrich DE en deepweb assets marketing global documents 191 884 |||

bionurture Biointegrity. Sigma Life Science has been a trusted supplier of reliable, high-quality ... and mammalian cell culture. ship: ambient store at: room temp F8509-100G 100 g D- -Galactose **59234** C6H12O6 FW 180.16 powder, anhydrous, BioReagent, suitable for cell culture, suitable for ins...

lang:en **score:12** filesize: 31.37 M page_count: 384 document date: 2013-02-25

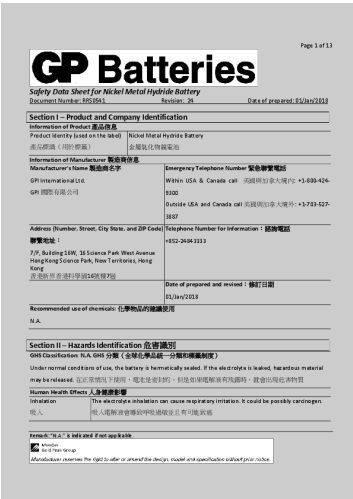

[\[pdf\]](#) Datasheet Safety Datasheet Catalog Label

DECT 6 0 Extra Loud Big Button Speakerphone with Talking Caller ID SDS Clarity 59234 001 017229154612 0017229154612 1004137178 fff5109e 71d9 43f4 993a 840b14719124 images thdstatic catalog Images ff |||

Page 1 of 13 Safety Data Sheet for Nickel Metal Hydride Battery Document Number: RRS0541 Revision: 24 Date of prepared: 01/Jan/2018 Section I Product and Company Identification Information of Product Product Identity used on the label Nickel Metal Hydride Battery Information of Manufac...

lang:en **score:10** filesize: 433.81 K page_count: 13 document date: 2021-04-22

