

Bobrick B00ODRW52W

Bobrick Stainless Steel 2-Roll Tissue Dispenser Instruction Manual

Model: B00ODRW52W

INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Bobrick Stainless Steel 2-Roll Tissue Dispenser. Designed for high-traffic environments, this dispenser features durable stainless steel construction and a secure, anti-theft design. Please read these instructions thoroughly before use.



Figure 1: Bobrick Stainless Steel 2-Roll Tissue Dispenser. This image shows the dispenser in its installed state, featuring a satin stainless steel finish and a key lock at the top. A roll of toilet tissue is visible in the lower dispensing slot.

SETUP AND INSTALLATION

The Bobrick 2-Roll Tissue Dispenser is designed for surface mounting. Professional installation is

recommended to ensure secure attachment and proper function.

Required Tools (Not Included):

- Drill
- Appropriate drill bits for mounting surface
- Screwdriver
- Measuring tape
- Level
- Mounting hardware (screws, anchors suitable for wall material)

Installation Steps:

1. **Select Location:** Choose a suitable wall location, ensuring adequate clearance for operation and maintenance.
2. **Mark Mounting Points:** Hold the dispenser against the wall at the desired height and use a pencil to mark the mounting screw locations.
3. **Drill Pilot Holes:** Drill pilot holes at the marked locations, appropriate for your chosen mounting hardware.
4. **Secure Dispenser:** Align the dispenser with the pilot holes and secure it to the wall using appropriate screws and anchors. Ensure the dispenser is level and firmly attached.
5. **Test Security:** Gently pull on the dispenser to confirm it is securely mounted and does not wobble.

OPERATING INSTRUCTIONS

This dispenser is designed for easy loading and automatic roll advancement.

Loading Tissue Rolls:

1. **Unlock Dispenser:** Use the provided key to unlock the top cover of the dispenser.
2. **Open Cover:** Open the top cover to access the interior.
3. **Insert Rolls:** Place two standard toilet tissue rolls, up to 5-1/4 inches in diameter, onto the spindles. Ensure the paper feeds correctly from the bottom roll.
4. **Close and Lock:** Close the top cover and lock it securely with the key. This activates the theft-resistant spindles.

Automatic Roll Advancement:

The dispenser features an automatic roll advancement mechanism. When the bottom roll is depleted, the second roll will automatically drop into the dispensing position, ensuring continuous availability of tissue.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dispenser.

Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth and a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, abrasive pads, or steel wool, as these can damage the satin stainless steel finish.
- Dry thoroughly with a clean, soft cloth to prevent water spots.

Inspection:

- Periodically check the mounting screws for tightness. Tighten if necessary.
- Inspect the internal mechanism for any obstructions or wear.
- Ensure the lock mechanism operates smoothly.

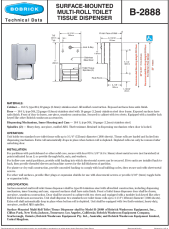
TROUBLESHOOTING



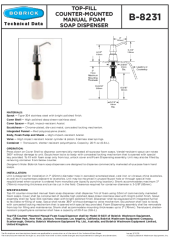
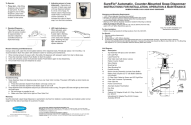
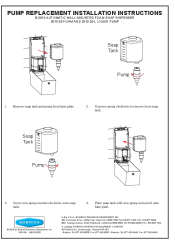
Problem	Possible Cause	Solution
Second roll does not drop automatically.	Obstruction in the mechanism or incorrect roll placement.	Unlock and open the dispenser. Check for any debris or misaligned rolls. Ensure rolls are placed correctly on the spindles.
Dispenser feels loose on the wall.	Mounting screws are loose.	Tighten all mounting screws. If the problem persists, inspect mounting hardware and wall anchors for damage and replace if necessary.
Key does not turn or lock.	Lock mechanism is jammed or damaged.	Ensure the cover is fully closed before attempting to lock. Apply a small amount of graphite lubricant to the keyhole if stiff. If still problematic, contact customer support.

SPECIFICATIONS

Brand: Bobrick
Model: B00ODRW52W
Material: Stainless Steel
Finish Type: Satin
Style: Classic
Capacity: Two (2) standard toilet tissue rolls, up to 5-1/4 inches (133mm) diameter each.
Dimensions (Approximate): 6.5 inches (H) x 6.5 inches (W) x 11.5 inches (D)
Features: Anti-theft spindles, lockable cover, automatic roll drop.
Batteries Required: No

Related Documents - B00ODRW52W

	<p>Bobrick B-2888 Surface-Mounted Multi-Roll Toilet Tissue Dispenser Technical Data</p> <p>Technical specifications and installation guide for the Bobrick B-2888 Surface-Mounted Multi-Roll Toilet Tissue Dispenser, featuring 18-8 stainless steel construction, a tumbler lock, and capacity for two standard-core toilet tissue rolls.</p>
---	--

 <p>Intelligent The trusted independent experts for hand dryers and washrooms since 2012.</p>	<p>Bobrick B-6999/B-69997 Surface-Mounted Double-Roll Toilet Tissue Dispenser Technical Data Sheet</p> <p>Get detailed technical specifications, materials, installation instructions, and dimensions for the Bobrick B-6999 and B-69997 surface-mounted double-roll toilet tissue dispensers with hoods.</p>
 <p>Intelligent The trusted independent experts for hand dryers and washrooms since 2012.</p>	<p>Bobrick B-43699 ConturaSeries Surface-Mounted Paper Towel Dispenser and Waste Receptacle Technical Data</p> <p>Detailed technical specifications and installation guide for the Bobrick B-43699 ConturaSeries surface-mounted paper towel dispenser and waste receptacle. Features durable stainless steel construction, TowelMate for single-sheet dispensing, and LinerMate for trash liner management, suitable for commercial washrooms.</p>
 <p>Technical Data TOP-FILL COUNTER-MOUNTED MANUAL FOAM SOAP DISPENSER B-8231</p>	<p>Bobrick B-8231 Top-Fill Counter-Mounted Manual Foam Soap Dispenser Technical Data</p> <p>Detailed technical specifications, materials, operation, and installation guide for the Bobrick B-8231 manual foam soap dispenser. Ideal for commercial washrooms, this top-fill unit offers durability and ease of use.</p>
	<p>SureFlo Automatic Counter-Mounted Soap Dispenser: Installation, Operation & Maintenance Guide</p> <p>Comprehensive guide for the Bobrick SureFlo B-824 automatic, counter-mounted liquid soap dispenser, covering installation, operation, routine maintenance, and troubleshooting.</p>
 <p>PUMP REPLACEMENT INSTALLATION INSTRUCTIONS B-2013-25 and B-2013-25-L</p>	<p>Bobrick B-2013 Automatic Soap Dispenser Pump Replacement Instructions</p> <p>Step-by-step instructions for replacing the pump on a Bobrick B-2013 automatic wall-mounted foam or liquid soap dispenser, covering models 2013-25 and 2013-25-L.</p>