

C-Pen Exam Reader 2

C-Pen Exam Reader 2 Instruction Manual

Model: Exam Reader 2

Brand: C-Pen

1. INTRODUCTION AND OVERVIEW

The C-Pen Exam Reader 2 is a portable, pocket-sized text-to-speech device designed to assist individuals with reading difficulties, such as dyslexia. It enables users to scan printed text and have it read aloud instantly, fostering independence in academic and daily environments.

This device supports multiple languages including English, Spanish, French, Italian, and German, providing a human-like digital voice. Its design is optimized for use in various settings, including examinations, where it serves as a valuable aid for understanding written content.





Image: The C-Pen Exam Reader 2, a compact and portable text-to-speech scanning pen.

Exam Reader 2

Upgrade your learning journey with the C-Pen Exam Reader 2! Our next-generation exam support tool is packed with intuitive features to help you overcome reading barriers and reach your academic goals.

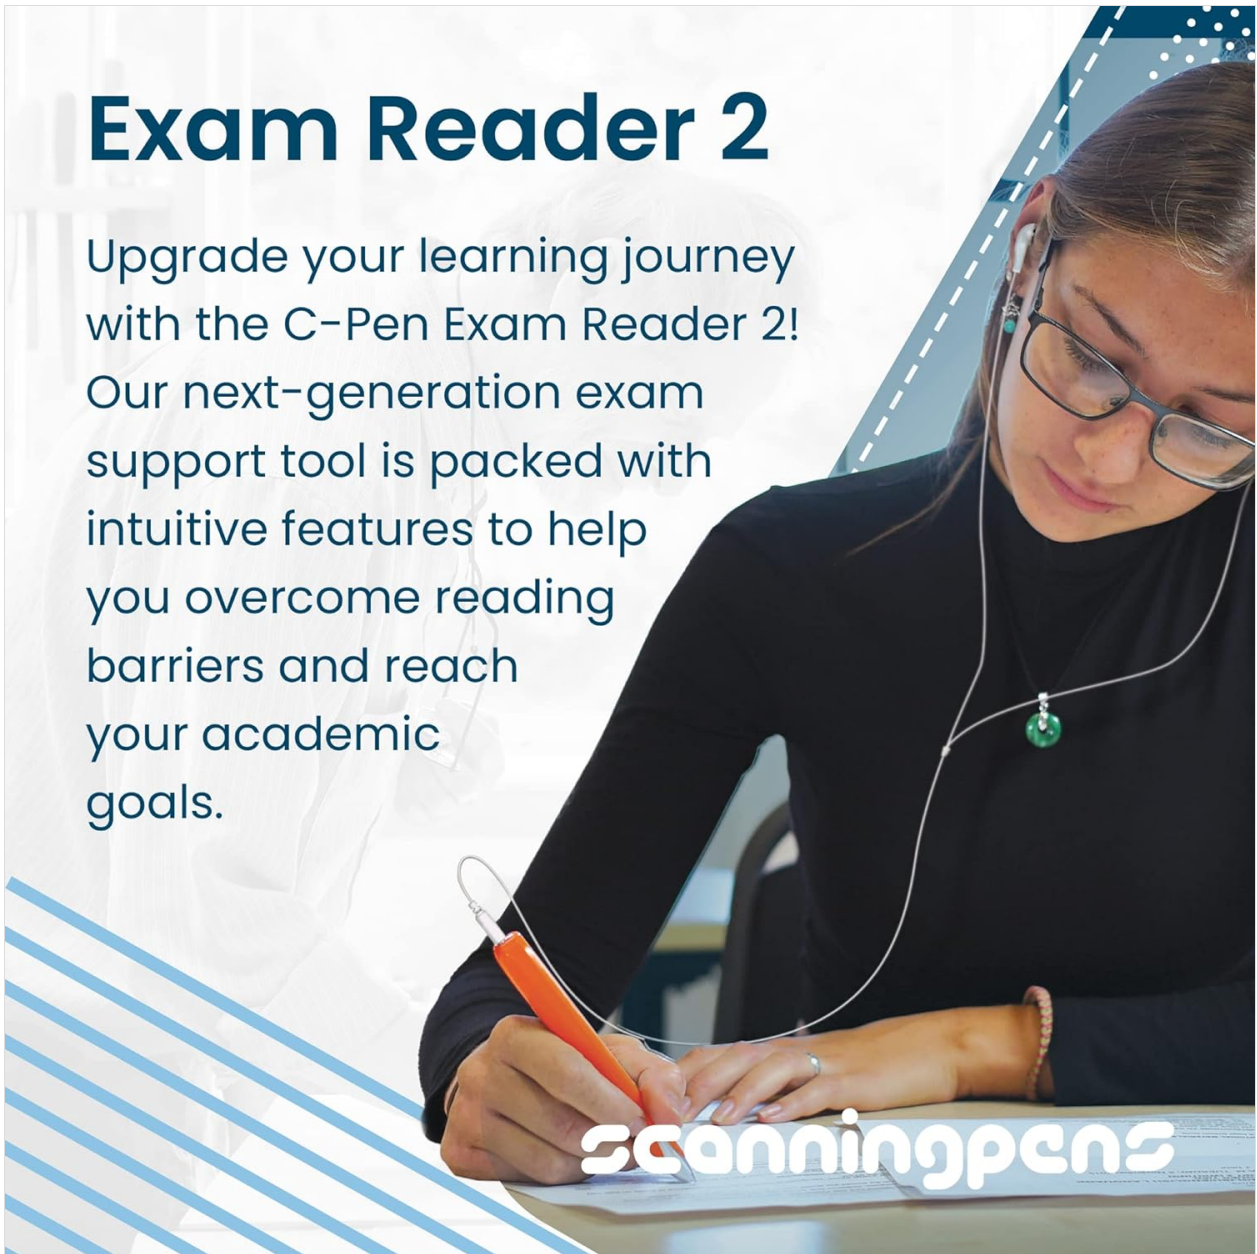


Image: A student using the C-Pen Exam Reader 2 during an exam, demonstrating its application in a learning environment.

scanningpens



AI supported technology



Multiple languages and dialects



Quick and reliable reading



Audio-aided interface



No wi-fi needed

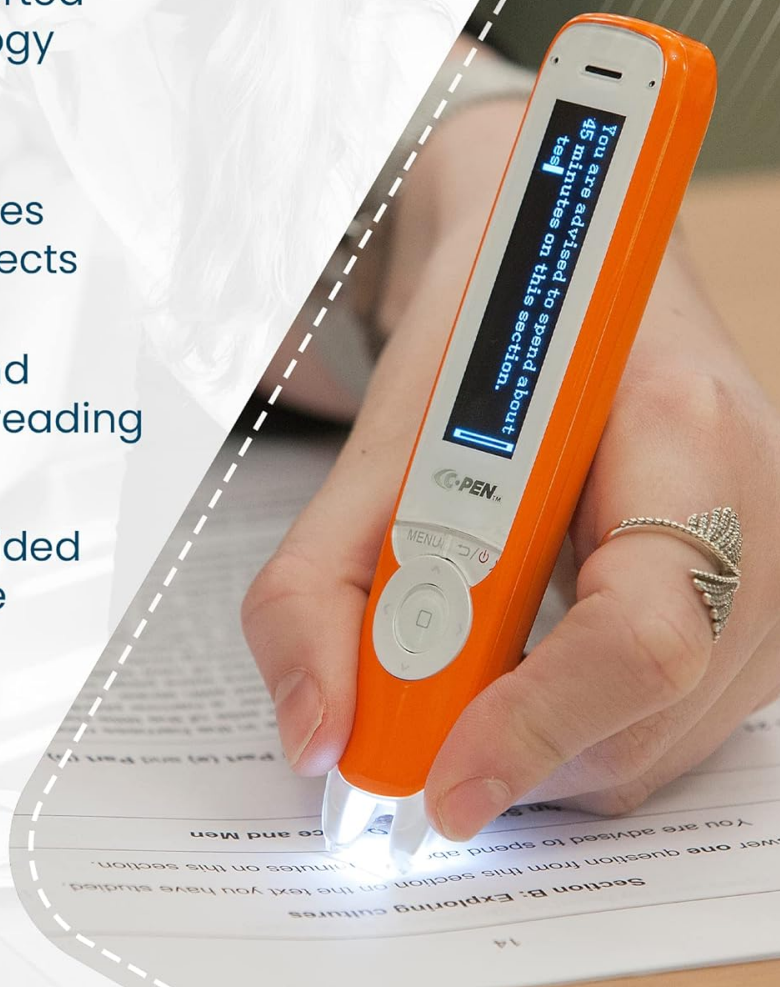



Image: Key features of the C-Pen Exam Reader 2, including AI-supported technology, multi-language support, quick reading, audio interface, and offline functionality.

2. SETUP

2.1 Package Contents

Before beginning, ensure all items are present in the package:

- C-Pen Exam Reader 2 device
- QuickStart Guide
- USB Charging cable
- Carry case
- Earbuds

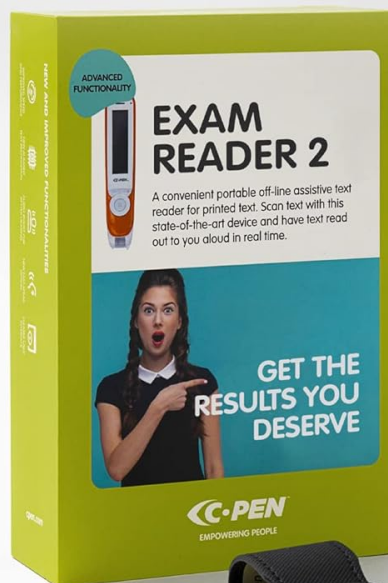

INCLUDES

- 1 x QuickStart Guide
- 1 x C-Pen Exam Reader 2
- 1 x USB Charging cord
- 1 x Carry case
- 1 x Earphones

Image: Contents of the C-Pen Exam Reader 2 package, showing the device, charging cable, carry case, and earbuds.

2.2 Initial Charging

The device charges via USB. Connect the provided USB cable to the micro-USB port on the C-Pen and plug the other end into a compatible USB power source (e.g., computer USB port, USB wall adapter). A full charge is recommended before first use.

2.3 Powering On/Off

To power on the device, press and hold the power button located on the control panel until the screen illuminates. To power off, press and hold the power button again until the device shuts down.

3. OPERATING INSTRUCTIONS

3.1 Scanning Text

To scan text, select "Text Reader" from the main menu. Position the nib of the C-Pen Exam Reader 2 at the beginning of the word or line you wish to scan. Gently press down and slide the pen steadily across the text. The device will illuminate the text as it scans. Ensure a smooth, consistent motion for optimal accuracy.

scanningpens

Optimised for test conditions



Image: The C-Pen Exam Reader 2 in action, scanning a line of text on a printed document. The pen's tip illuminates the text being read.

3.2 Audio Output

The scanned text will be read aloud through the device's built-in speaker. For private listening, connect the included earbuds or any standard 3.5mm headphones to the headphone jack on the side of the device.

3.3 Language and Accent Selection

The C-Pen Exam Reader 2 supports scanning and reading in English, Spanish, French, Italian, and German. You can select your preferred scanning language and even choose between British English and American English accents in the device's settings menu.

scanningpens

Supports 10+ languages



Image: A visual representation highlighting the C-Pen Exam Reader 2's capability to support over 10 languages for scanning and reading.

3.4 Demonstration Video

For a visual guide on operating the C-Pen Exam Reader 2, please watch the official product video below:

Your browser does not support the video tag.

Video: This video demonstrates the C-Pen Exam Reader's core functionalities, including scanning text, selecting languages, and using headphones for audio output. It highlights how the device reads text aloud, supporting both right-handed and left-handed users, and offers different accents.

4. MAINTENANCE

4.1 Cleaning

To maintain optimal performance, gently wipe the device, especially the scanning nib, with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or solvents.

4.2 Storage

When not in use, store the C-Pen Exam Reader 2 in its provided carry case to protect it from dust, scratches, and accidental damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1 Scanning Inaccuracies

If the device misreads words or struggles with recognition:

- Ensure a steady and consistent scanning motion.
- Verify that the text is clear and not too small. The device may have difficulty with very small fonts, cursive, or text with extraneous characters like underlines or symbols.
- Practice scanning to improve technique.
- Check the scanning language settings to ensure it matches the text being scanned.

5.2 No Audio Output

If there is no sound from the speaker or headphones:

- Check the volume level on the device.
- Ensure headphones are fully plugged in if using them.
- Test with different headphones to rule out a faulty pair.

5.3 Device Not Turning On

If the device does not power on:

- Ensure the device is sufficiently charged. Connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to power on again.
- Try a different USB cable or power adapter.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.31 x 1.3 x 0.75 inches
Item Weight	8.5 ounces
Batteries	1 Lithium Polymer battery required
Scanner Type	Text
Media Type	USB
Minimum System Requirements	Windows 7
Model Name	Exam Reader 2
Connectivity Technology	USB
Manufacturer	C-Pen
Date First Available	January 12, 2016

7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official documentation included with your C-Pen Exam Reader 2 or visit the official C-Pen website. You can also visit the [C-Pen Store on Amazon](#) for additional resources and contact information.