

## Kimberly-Clark CONTROLOMATIC Dispenser Metal

# Kimberly-Clark Ripple CONTROLOMATIC Metal Hand Towel Dispenser User Manual

Model: CONTROLOMATIC Dispenser Metal (6963)

## 1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Kimberly-Clark Ripple CONTROLOMATIC Metal Hand Towel Dispenser. Please read these instructions thoroughly before installation and use to ensure optimal performance and longevity of the product. Keep this manual for future reference.

## 2. SAFETY INFORMATION

- Ensure the dispenser is securely mounted to a stable wall surface to prevent accidental falls.
- Use appropriate fasteners for your wall type (e.g., drywall anchors, wood screws, masonry anchors).
- Keep hands clear of moving parts during towel dispensing.
- Do not overload the dispenser with excessive paper towels, as this may impede operation.
- This product is intended for dispensing paper hand towels only. Do not use it for other materials.
- Regularly inspect the dispenser for any signs of damage or wear. Discontinue use if damaged.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Kimberly-Clark Ripple CONTROLOMATIC Metal Hand Towel Dispenser
- Mounting hardware (screws, anchors)
- Key for dispenser access
- Installation template (if included)

## 4. SETUP AND INSTALLATION

Follow these steps for proper installation and initial setup:

1. **Choose Location:** Select a suitable wall location, ensuring adequate clearance for towel dispensing and refilling. Consider

ADA compliance if applicable.

- 2. **Mark Mounting Points:** Use the provided template (if available) or measure and mark the drilling points on the wall.
- 3. **Drill Holes:** Drill pilot holes at the marked locations. Insert wall anchors if required for your wall type.
- 4. **Mount Dispenser:** Align the dispenser with the drilled holes and secure it to the wall using the provided screws. Ensure it is level and firmly attached.
- 5. **Open Dispenser:** Use the key to open the dispenser cover.
- 6. **Load Paper Towels:** Place a new roll of compatible paper hand towels onto the internal spindle. Ensure the towel end is fed through the dispensing mechanism as per the internal diagram or instructions.
- 7. **Close Dispenser:** Close the dispenser cover and lock it with the key.



This image shows the Kimberly-Clark Ripple CONTROLOMATIC Metal Hand Towel Dispenser. It is a wall-mounted unit, gray in color, designed to dispense paper towels. A roll of paper towels is visible, with a portion of the towel extending from the bottom opening, ready for use.

## 5. OPERATING INSTRUCTIONS

The Kimberly-Clark Ripple CONTROLOMATIC Dispenser is designed for simple and efficient operation:

- **Dispensing:** Gently pull the exposed end of the paper towel downwards. The dispenser will automatically present the next towel for use.
- **Controlled Dispensing:** The CONTROLOMATIC mechanism is designed to dispense a single towel at a time, reducing waste.

## 6. MAINTENANCE

Regular maintenance ensures hygienic operation and extends the life of your dispenser:

- **Cleaning:** Wipe the exterior of the dispenser regularly with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Refilling:** When the towel supply is low, use the key to open the dispenser and replace the roll as described in the 'Setup and Installation' section.
- **Inspection:** Periodically check the internal mechanisms for any paper jams or debris. Clear any obstructions carefully.

## 7. TROUBLESHOOTING

If you encounter issues with your dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Towel not dispensing	Empty roll; Paper jam; Incorrect loading	Replace roll; Clear jam; Reload towel correctly

Problem	Possible Cause	Solution
Dispenser cover not closing/locking	Obstruction; Misalignment	Check for debris; Ensure proper alignment before closing
Dispenser feels loose on wall	Loose mounting screws	Tighten mounting screws; Re-secure if necessary

## 8. SPECIFICATIONS

- **Brand:** Kimberly-Clark
- **Model:** CONTROLOMATIC Dispenser Metal (6963)
- **Manufacturer:** Ripple
- **ASIN:** B01ASE0EDU
- **Spare parts availability:** Information unavailable on spare parts
- **Date first available on Amazon.com.be:** May 24, 2022

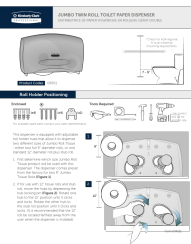

## 9. WARRANTY AND SUPPORT





For warranty information or technical support, please refer to the product packaging or contact Kimberly-Clark customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Kimberly-Clark. All rights reserved.

[gen\_bottom\_of\_page]

### Related Documents - CONTROLOMATIC Dispenser Metal

	<p><a href="#">Kimberly-Clark Jumbo Twin Roll Toilet Paper Dispenser Installation and Loading Guide</a></p> <p>Provides comprehensive instructions for installing and loading the Kimberly-Clark Jumbo Twin Roll Toilet Paper Dispenser (Product Code 09551). Covers roll holder positioning, mounting dimensions, optional push-button lock conversion, and loading procedures, with considerations for ADA compliance.</p>
	<p><a href="#">Kimberly-Clark EHRTMODULE V1 Integration Manual</a></p> <p>Integration manual for the Kimberly-Clark EHRTMODULE V1 Bluetooth transceiver module, detailing its use in professional industrial radio applications and portable host devices, including compliance and RF exposure information.</p>

	<p><a href="#">WypAll WetTask Customizable Wet Wiping System: Instructions for Use and Safety</a></p> <p>Comprehensive instructions for setting up, using, and safely handling the WypAll WetTask Customizable Wet Wiping System by Kimberly-Clark. Includes warnings and warranty information.</p>
	<p><a href="#">Kimberly-Clark UKG Pro: My Time &amp; Pay - First-Time Login Guide</a></p> <p>Step-by-step instructions for Kimberly-Clark employees to access the UKG Pro time reporting and pay system for the first time, from both K-C computers and personal devices.</p>
	<p><a href="#">My Time &amp; Pay: A New Hire's Guide to Kimberly-Clark's UKG Pro Portal</a></p> <p>A comprehensive guide for new Kimberly-Clark hires on accessing and using the UKG Pro time reporting and pay system. Learn how to log in from K-C computers and personal devices, set up your account, and manage security authentication.</p>
	<p><a href="#">Medical-Economic Analysis: HUGGIES DryNites Boys' Pull-Up Pants</a></p> <p>This document presents a medical-economic analysis of HUGGIES DryNites boys' pull-up pants (B8028A) for incontinence. It details the product's purpose, indications, epidemiological context in Slovakia, clinical benefits, cost comparisons with alternatives like TENA Pants Plus XS, and projected budget impact on public health insurance. The analysis supports the categorization of the product.</p>