

## UPBRIGHT UpBright 12V AC/DC Adapter

# UpBright 12V AC/DC Adapter User Manual

Compatible with HoMedics BKP-200A, BKP-200, BKP-300, BKP-300-2EU 10 Motor Back Massagers

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your UpBright 12V AC/DC Adapter. This power supply is designed to provide reliable power to compatible devices, specifically HoMedics 10 Motor Back Massagers including models BKP-200A, BKP-200, BKP-300, and BKP-300-2EU. It features a global input voltage range and built-in protection mechanisms to ensure device safety.



Figure 1: UpBright 12V AC/DC Adapter. This image shows the complete adapter unit with its attached power cord and barrel connector.

## 2. SAFETY PRECAUTIONS

---

- **Do not** expose the adapter to water, moisture, or high humidity.
- **Do not** disassemble or modify the adapter. This may cause electric shock or fire.
- **Do not** use the adapter if the cord or plug is damaged.
- Ensure the adapter is used within its specified voltage and current ratings.
- Keep out of reach of children.
- Unplug the adapter from the wall outlet when not in use for extended periods.

## 3. SETUP INSTRUCTIONS

---

1. **Verify Compatibility:** Ensure your device requires a 12V DC input and has a compatible barrel connector. This adapter is specifically designed for HoMedics BKP-200A, BKP-200, BKP-300, and BKP-300-2EU massagers.
2. **Connect to Device:** Insert the barrel connector end of the adapter cable firmly into the power input port of your HoMedics massager.


## UpBright AC Adapter Power Supply Compatible with:



Figure 2: Barrel Connector. This image highlights the barrel connector, which plugs into the compatible device.

3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard wall power outlet (100-240VAC, 50/60Hz).
4. **International Use (if applicable):** If using in a region with different outlet types, ensure you use the appropriate outlet adapter.

Come With A Suitable Outlet Adapter (Only One) to Fit  
Your Country/Area For International Order

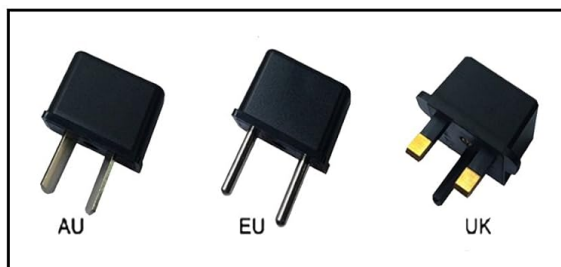

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE  
+ UPBRIGHT® LIMITED WARRANTY



Figure 3: International Outlet Adapters. This image displays various international outlet adapters (AU, EU, UK types) that may be included for global compatibility.

## 4. OPERATING INSTRUCTIONS

Once the UpBright 12V AC/DC Adapter is correctly connected to your device and a power outlet, the adapter will supply power to your device. Simply operate your HoMedics massager according to its own instruction manual. The adapter functions as a continuous power source.

- Ensure the device is turned off before connecting or disconnecting the adapter.
- The adapter is designed for continuous use but should be unplugged when not needed to conserve energy and prolong its lifespan.

## 5. MAINTENANCE AND CARE

---

- **Cleaning:** Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the power cord excessively. Do not place heavy objects on the cord.
- **Inspection:** Periodically inspect the adapter and cable for any signs of damage. If damage is found, discontinue use immediately.

## 6. TROUBLESHOOTING

---

- **Device Not Powering On:**
  - Check that the adapter is securely plugged into both the device and the wall outlet.
  - Verify the wall outlet is functional by testing it with another appliance.
  - Ensure the device itself is turned on and functioning correctly.
  - Confirm the adapter's specifications (12V DC, 1.2A-2A) match your device's requirements.
- **Adapter Feels Warm:** It is normal for the adapter to feel slightly warm during operation. If it becomes excessively hot, unplug it immediately and contact support.
- **Intermittent Power:** Check for loose connections at both the device and the wall outlet. Inspect the cable for any visible damage.

## 7. SPECIFICATIONS

---

Feature	Specification
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	12VDC
Output Current	1.2A - 2A (1200mA - 2000mA)
Wattage	24W Max
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Connector Type	Barrel Connector
Product Dimensions	Approximately 3 x 3 x 1 inches
Item Weight	Approximately 4 ounces

## 8. WARRANTY AND SUPPORT

---

UpBright products are designed for reliability and performance. This adapter comes with a **30-day refund policy** and a **24-month exchange warranty** from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your UpBright 12V AC/DC Adapter, please

contact UpBright customer service through the retailer where the product was purchased or visit the official UpBright store:

[Visit the UPBRIGHT Store on Amazon](#)