

## Speakman CPT-1000-TP

# Speakman CPT-1000-TP Shower Trim User Manual

Model: CPT-1000-TP | Brand: Speakman

## INTRODUCTION

---

This manual provides detailed instructions for the installation, operation, and maintenance of your Speakman CPT-1000-TP Shower Trim. This trim is designed to work seamlessly with the Speakman thermostatic/pressure balance valve CPT-1000-TP (CPV-5000 series), offering a blend of aesthetic appeal and functional reliability for your bathroom.

The elegant, circular design and polished chrome finish complement various bathroom decors, while the underlying technology ensures a consistent and safe showering experience by protecting against sudden changes in water pressure and allowing for precise temperature control.



Figure 1: Speakman CPT-1000-TP Shower Trim, Polished Chrome. This image shows the circular wall plate with a central handle for operation. Red and blue indicators are visible for hot and cold water, respectively.

## SETUP AND INSTALLATION

---

The Speakman CPT-1000-TP Shower Trim is designed for wall-mount installation and requires the Speakman thermostatic/pressure balance valve (CPT-1000-TP or CPV-5000 series) for proper function. Professional installation is recommended to ensure compliance with local plumbing codes and optimal performance.

### Before Installation:

- Ensure the water supply to the shower area is turned off.
- Verify that you have the correct Speakman thermostatic/pressure balance valve installed behind the wall. This trim kit **does not include the valve**.
- Unpack all components and inspect for any damage. The kit includes the metal valve handle, round ABS wall plate, configurable hot and cold indicators, and all necessary mounting hardware.

### Installation Steps:

1. Carefully align the round ABS wall plate with the valve body and secure it to the wall using the provided mounting hardware. Ensure a snug fit to prevent water ingress.
2. Attach the metal valve handle to the valve stem. Ensure it is properly seated and secured according to the valve's specific instructions.
3. Install the configurable hot and cold indicators onto the wall plate as desired. These indicators typically use red for hot and blue for cold.
4. Once all components are securely installed, slowly turn the water supply back on and check for any leaks.
5. Test the operation of the trim to ensure proper water flow and temperature control.

For detailed valve installation instructions, please refer to the manual provided with your Speakman thermostatic/pressure balance valve.

## OPERATING INSTRUCTIONS

---

The Speakman CPT-1000-TP Shower Trim, when paired with its compatible valve, provides intuitive control over water temperature and flow.

### Temperature Control:

- To adjust the water temperature, rotate the central handle.
- The configurable hot and cold indicators on the wall plate will guide you: typically, rotating towards the red indicator increases hot water, and towards the blue indicator increases cold water.
- The thermostatic feature of the valve maintains your desired temperature, even with fluctuations in household water pressure.

### Flow Control:

- The handle also controls the water flow. Push or pull the handle (depending on valve configuration) or rotate it to increase or decrease the water volume.
- The pressure balance feature protects against sudden temperature changes if water pressure drops elsewhere in the house.

## MAINTENANCE

---

Proper care and maintenance will ensure the longevity and appearance of your Speakman CPT-1000-TP Shower Trim.

### Cleaning the Finish:

- For the polished chrome finish, use only a soft, damp cloth and mild soap.
- **Do not use** abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish and void the warranty.
- Rinse thoroughly with clean water after cleaning and dry with a soft cloth to prevent water spots.

### General Care:

- Regularly check for any signs of leaks around the trim plate. Address any leaks promptly to prevent water damage.
- Ensure the handle operates smoothly. If it becomes stiff, consult a qualified plumber.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your shower trim. For complex problems, it is recommended to contact a qualified plumber or Speakman customer support.

Problem	Possible Cause	Solution
Water temperature is inconsistent or too hot/cold.	Issue with the thermostatic/pressure balance valve, or incorrect installation of the trim.	Ensure the valve is correctly calibrated. Check the valve's manual for temperature limit stop adjustments. If issues persist, consult a plumber.
Low water flow from the showerhead.	Clogged showerhead, or issue with the valve's flow cartridge.	Clean or replace the showerhead. If the problem persists, the valve's internal components may need inspection by a professional.
Leaks around the trim plate.	Improper sealing during installation, or loose mounting hardware.	Ensure the trim plate is securely mounted and properly sealed against the wall. Re-tighten mounting screws if necessary.

## SPECIFICATIONS

Feature	Detail
Model Number	CPT-1000-TP
Brand	Speakman
Color	Chrome
Material	Plastic (Wall Plate), Metal (Handle)
Finish Type	Chrome
Number of Handles	1
Mounting Type	Wall Mount
Included Components	Thermostatic/Pressure Balance Valve Trim (Handle, Wall Plate, Indicators, Mounting Hardware)
Item Weight	16 ounces (0.45 kg)
Product Dimensions	4.5 x 2 x 4.5 inches (11.43 x 5.08 x 11.43 cm)
UPC	671252104961

## WARRANTY

The Speakman CPT-1000-TP Shower Trim is backed by a **Limited Lifetime Warranty**. This warranty covers

defects in materials and workmanship under normal use and service. For specific terms, conditions, and limitations of the warranty, please refer to the official Speakman warranty documentation or visit the Speakman website.

## SUPPORT

If you require further assistance, have questions regarding installation, operation, or maintenance, or need to report a warranty claim, please contact Speakman customer support.

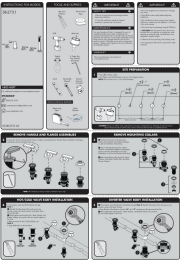
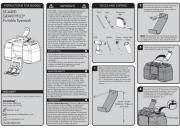
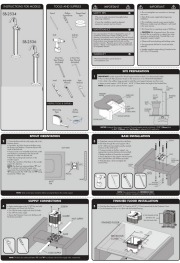
For the most up-to-date contact information and resources, please visit the official Speakman website:



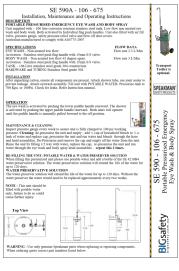
[www.speakman.com](http://www.speakman.com)

When contacting support, please have your product model number (CPT-1000-TP) and purchase information readily available.

© 2023 Speakman. All rights reserved.

### Related Documents - CPT-1000-TP

	<p><a href="#">Speakman SB-2731 Faucet Installation Guide and Specifications</a></p> <p>Comprehensive installation guide for the Speakman SB-2731 faucet, including tools, step-by-step instructions, site preparation, water supply connections, and repair parts.</p>
	<p><a href="#">Speakman SE-4400 GravityFlo Portable Eyewash Installation and Maintenance Guide</a></p> <p>Comprehensive guide for the Speakman SE-4400 GravityFlo Portable Eyewash, covering installation, maintenance, safety tips, warranty, and repair parts. Compliant with ANSI Z358.1.</p>
	<p><a href="#">Speakman SB-2534/SB-2536 Roman Tub Faucet Installation Guide</a></p> <p>Comprehensive installation guide for Speakman SB-2534 and SB-2536 Roman tub faucets, covering tools, site preparation, base installation, spout, hand shower, and confirmation steps. Includes maintenance and warranty information.</p>

	<p><a href="#">Speakman SE-TW-EW Tepid Water System: Installation, Operation, and Maintenance Instructions</a></p> <p>Detailed instructions for installing, operating, and maintaining the Speakman SE-TW-EW Tepid Water System, an emergency non-aerated eye/face wash unit. Includes parts list, flow data, and safety compliance information.</p>
	<p><a href="#">Speakman Undermount Sink Installation Guide: B-1100, B-1101, B-1200</a></p> <p>Comprehensive installation instructions for Speakman's B-1100 Oval Undermount Sink (Round Bottom), B-1101 Oval Undermount Sink (Flat Bottom), and B-1200 Rectangular Undermount Sink. Includes tools, safety, maintenance, and detailed diagrams.</p>
	<p><a href="#">Speakman SE 590A - 106 - 675 Portable Pressurised Emergency Eye Wash and Body Spray: Installation, Maintenance, and Operating Instructions</a></p> <p>Comprehensive guide for the Speakman SE 590A - 106 - 675 portable, pressurized emergency eye wash and body spray unit. Covers installation, operation, maintenance, cleaning, refilling, and spare parts.</p>