

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sanotechnik](#) /
- › [Sanotechnik CL121 Hydromassage Shower Cabin Instruction Manual](#)

Sanotechnik CL121

Sanotechnik CL121 Hydromassage Shower Cabin Instruction Manual

Model: CL121 | Dimensions: 80x120x215cm

[Introduction](#) [Safety Information](#) [Product Components](#) [Setup & Installation](#) [Operating Instructions](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Sanotechnik CL121 Hydromassage Shower Cabin. This all-in-one shower system, measuring 80x120x215cm, is designed to offer a complete wellness experience with its integrated features.

The CL121 model includes a robust shower tray, premium ESG tempered glass, a massage panel with 6 jets, an overhead shower, an adjustable hand shower, a touch control panel with radio, fan, LED lighting, a folding seat, and practical shelves. Its Quick-Line rapid assembly system allows for tool-free installation of certain components, ensuring a modern design combined with functional technology.



Figure 1.1: Exterior view of the Sanotechnik CL121 Hydromassage Shower Cabin.

2. SAFETY INFORMATION

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in injury, product damage, or voiding of the warranty.

- **Professional Installation:** All plumbing and electrical connections must be performed by qualified and certified professionals in accordance with local building codes and regulations.
- **Electrical Safety:** Ensure the shower cabin is properly grounded. Do not operate electrical components with wet hands. Disconnect power before any maintenance or cleaning.
- **Water Pressure:** Ensure water pressure is within the recommended limits for the shower system. Excessive pressure can damage components.
- **Glass Safety:** The shower cabin features ESG safety glass. While robust, avoid striking the glass with hard objects. In case of breakage, the glass is designed to shatter into small, relatively harmless pieces.
- **Weight Limit:** The folding seat has a maximum weight capacity. Do not exceed this limit.
- **Cleaning:** Use only mild, non-abrasive cleaners. Harsh chemicals can damage surfaces and seals.
- **Children and Pets:** Do not leave children or pets unattended in or near the shower cabin.

3. PRODUCT COMPONENTS

The Sanotechnik CL121 Hydromassage Shower Cabin is a comprehensive unit. Key components include:

- **Shower Tray:** Robust base for the cabin.
- **ESG Safety Glass Panels:** 5 mm tempered safety glass for doors and side panels, 4 mm black ESG glass base.
- **Quick-Line Assembly System:** Features specialized rollers for tool-free door installation.
- **Massage Panel:** Integrated panel with 6 adjustable hydro-massage jets.

- **Overhead Shower:** Fixed rain shower head.
- **Hand Shower:** Adjustable hand shower with flexible hose.
- **Touch Control Panel:** For operating radio, fan, and LED lighting.
- **Folding Seat:** Integrated for comfort and convenience.
- **Shelves:** Practical storage for shower essentials.
- **Ventilation Fan:** Integrated for air circulation.
- **LED Lighting:** Integrated for enhanced ambiance.


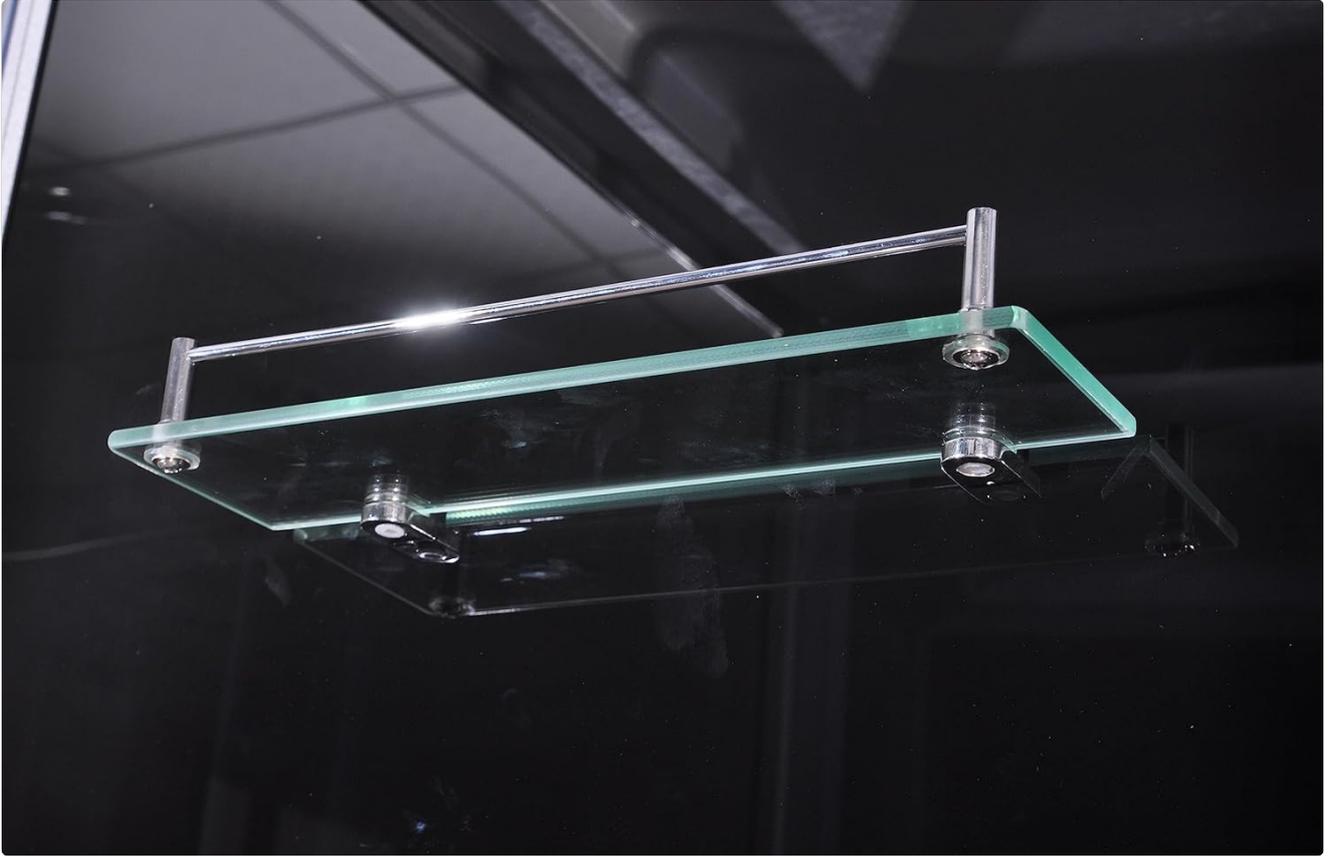


Figure 3.1: The robust shower tray, forming the base of the cabin.



Figure 3.2: An integrated glass shelf for storing toiletries.

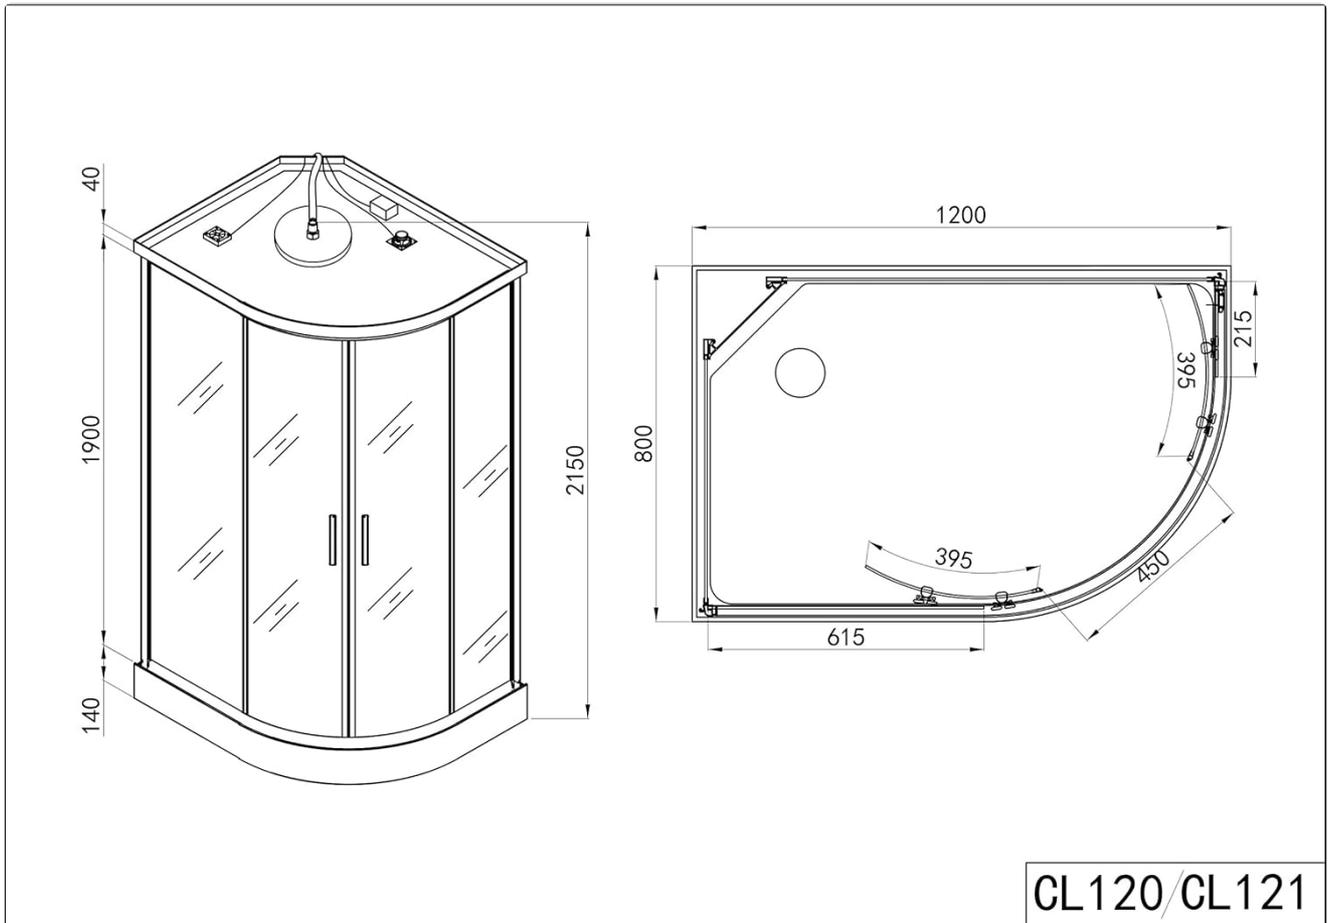

CL120/CL121

Figure 3.3: The convenient folding seat for added comfort.

4. SETUP & INSTALLATION

The Sanotechnik CL121 shower cabin requires assembly. While the Quick-Line system simplifies door installation, professional assistance is highly recommended for plumbing and electrical connections to ensure safety and proper functionality.

4.1 Pre-Installation Checks

- Verify all components are present and undamaged according to the packing list.
- Ensure the installation area is level, clean, and has adequate drainage and ventilation.
- Confirm water supply lines (hot and cold) and electrical outlets are correctly positioned and meet local codes.

4.2 Assembly Process

Refer to the detailed assembly guide provided with your product for step-by-step instructions. The general process involves:

1. Positioning and leveling the shower tray.
2. Assembling the frame and securing the fixed glass panels.
3. Installing the Quick-Line sliding doors. This system allows for tool-free installation of the double folding sliding doors, which operate quietly and save space.
4. Connecting the plumbing for the overhead shower, hand shower, and massage jets.
5. Connecting the electrical components for the touch panel, radio, fan, and LED lighting.
6. Sealing all joints and connections to prevent leaks.



Figure 4.1: Detail of the Quick-Line roller mechanism, facilitating easy door installation.



Figure 4.2: Side view of the Quick-Line roller, designed for smooth and quiet door operation.



Figure 4.3: Technical drawing illustrating the dimensions and layout of the CL121 shower cabin.

5. OPERATING INSTRUCTIONS

Your Sanotechnik CL121 shower cabin offers a range of features for a personalized showering experience.

5.1 Water Flow Control

- **Main Mixer:** Use the main mixer handle to control water temperature and flow to the desired outlet.
- **Function Diverter:** Rotate the diverter knob to switch between the overhead shower, hand shower, and massage

jets.

5.2 Hydromassage Jets

The cabin is equipped with 6 hydro-massage jets. To activate them, select the massage jet function using the diverter. The intensity and direction of some jets may be adjustable by rotating or tilting them.

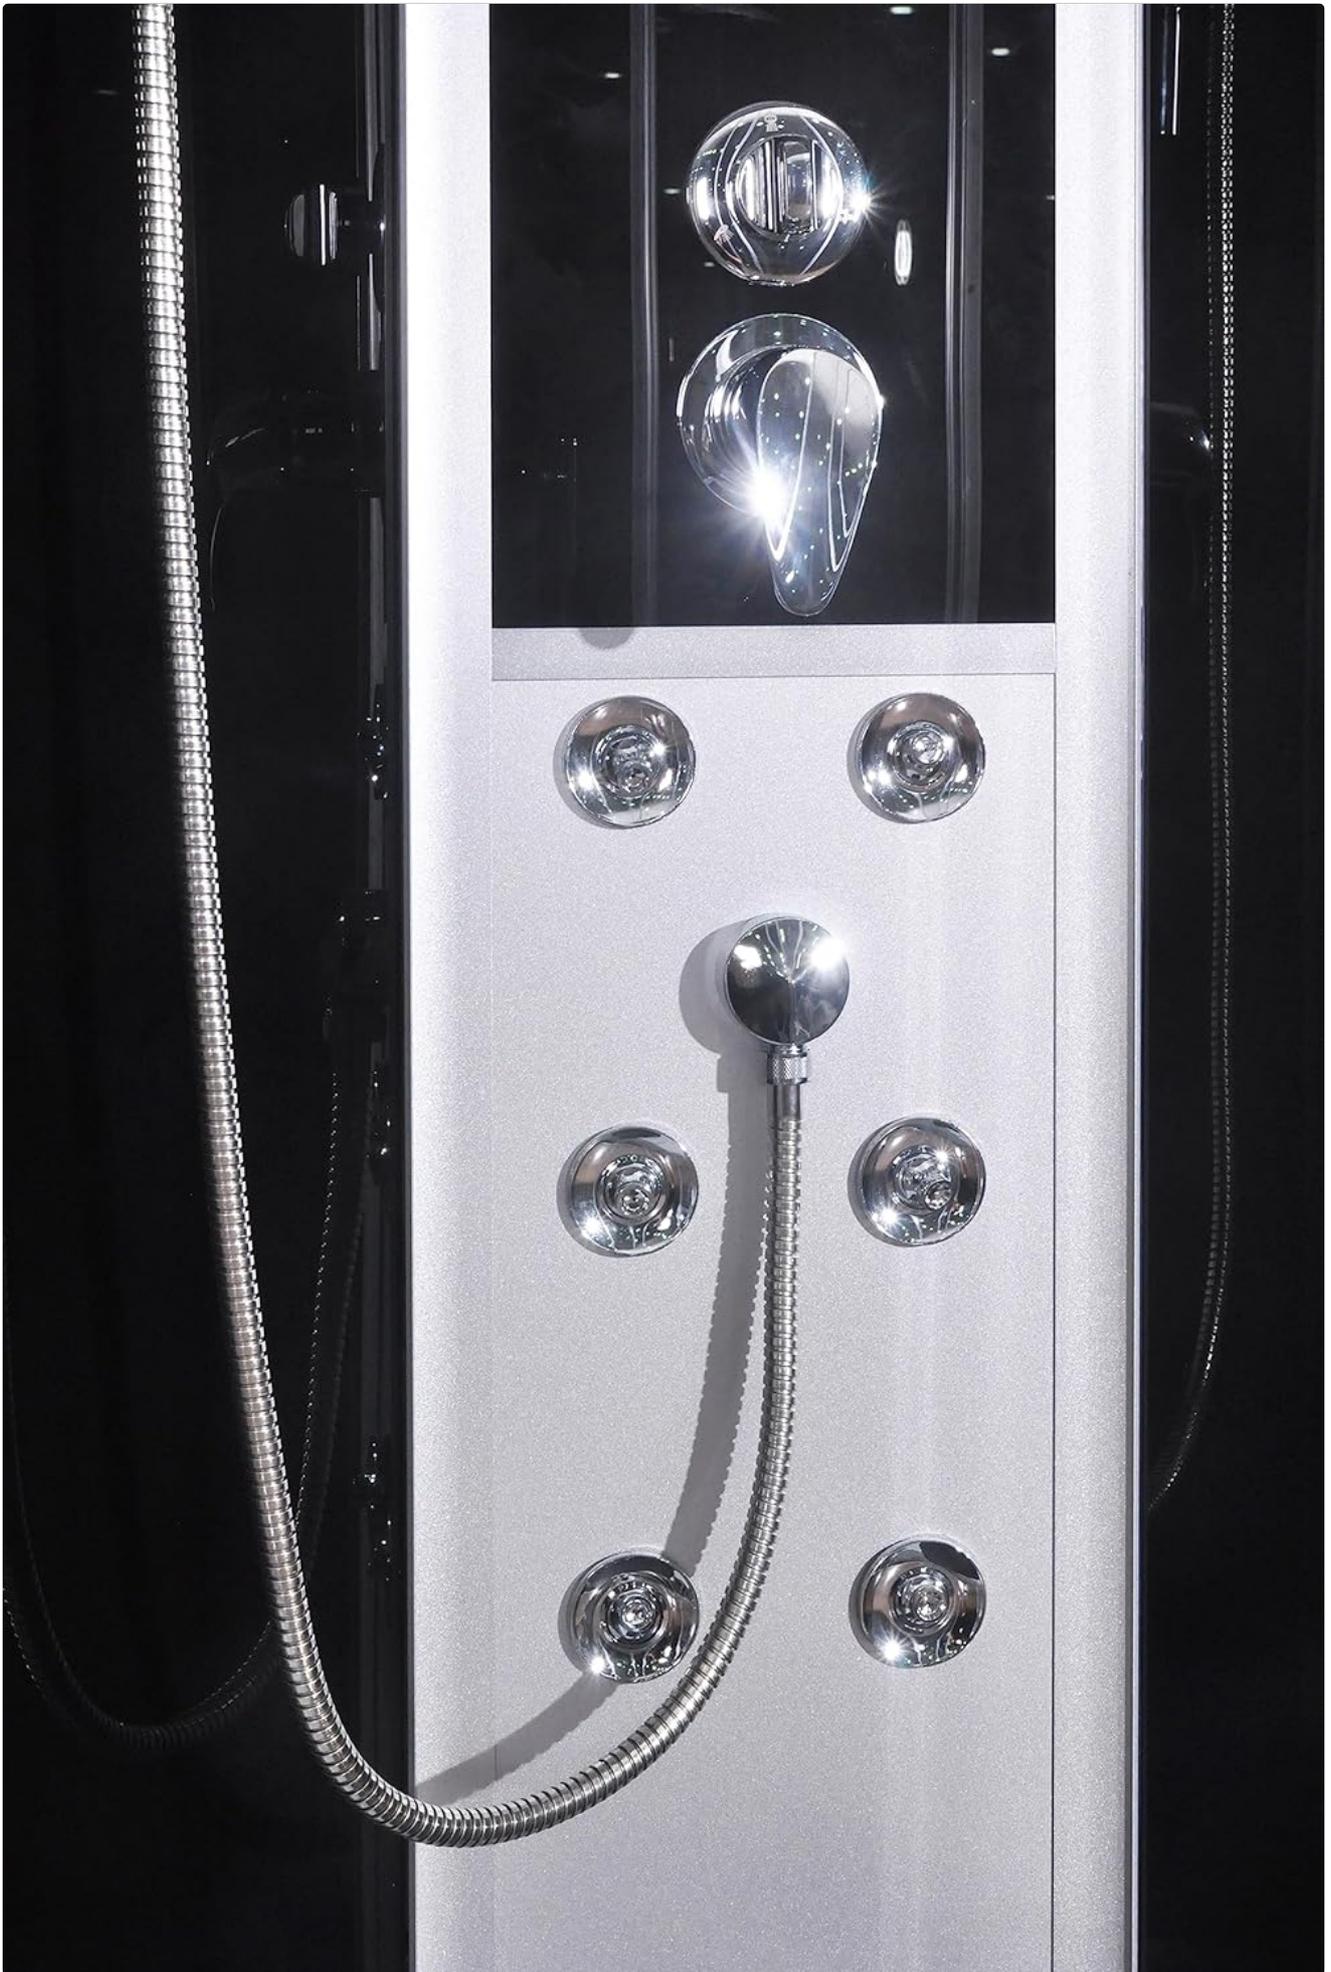


Figure 5.1: The central control panel with water mixer, function diverter, and hydro-massage jets.

5.3 Touch Control Panel (Radio, Fan, LED Lighting)

The integrated touch panel allows control over the cabin's multimedia and comfort features:

- **Power Button:** Press to turn the system on/off.
- **Radio:** Select the radio function and use the controls to tune stations and adjust volume.
- **Fan:** Activate the ventilation fan to reduce steam and humidity inside the cabin.
- **LED Lighting:** Turn on the integrated LED lights for ambient illumination.



Figure 5.2: View of the overhead shower and integrated LED lighting on the cabin ceiling.

5.4 Folding Seat

The folding seat can be lowered for comfortable seating during your shower. Ensure it is securely locked in place before use. Fold it up when not in use to maximize space.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your shower cabin.

6.1 Cleaning the Glass Panels

- After each use, rinse the glass panels with clean water to remove soap residue.
- For deeper cleaning, use a soft cloth and a mild, non-abrasive glass cleaner. Avoid cleaners containing harsh chemicals, ammonia, or abrasive particles, as these can damage the glass and seals.
- Wipe dry with a clean, soft cloth to prevent water spots.

6.2 Cleaning the Shower Tray and Frame

- Clean the shower tray and aluminum frame with a soft cloth and a mild, non-abrasive bathroom cleaner.
- Rinse thoroughly and dry to prevent water stains and mildew.

6.3 Cleaning Massage Jets and Shower Heads

- *Periodically clean the nozzles of the massage jets and shower heads to remove limescale buildup. Many nozzles are designed with flexible silicone for easy cleaning by rubbing them.*
- *For stubborn deposits, use a descaling solution specifically designed for bathroom fixtures, following the product instructions carefully.*

6.4 Door Rollers and Seals

- Keep the door rollers clean and free of debris to ensure smooth operation.
- Inspect door seals regularly for wear and tear. Replace damaged seals to prevent leaks.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Sanotechnik CL121 shower cabin. For problems not listed here, or if solutions do not resolve the issue, please contact customer support.

| Problem | Possible Cause | Solution |
|-------------------------------------|--|--|
| Water Leakage | Loose plumbing connections, damaged seals, improper sealing during installation. | Check all plumbing connections for tightness. Inspect door and panel seals for damage and replace if necessary. Ensure all joints were properly sealed with silicone during installation. If issues persist, consult a professional plumber. |
| No Water Flow / Low Pressure | Water supply turned off, clogged shower head/jets, low household water pressure. | Ensure main water supply is on. Clean shower heads and massage jets to remove limescale. Check household water pressure. |

| Problem | Possible Cause | Solution |
|--|---|--|
| Electrical Features Not Working (Radio, Fan, LED) | No power supply, loose electrical connection, faulty component. | Check if the main power supply to the cabin is on. Inspect electrical connections (only by a qualified electrician). If a component is faulty, contact customer support. |
| Doors Not Sliding Smoothly | Dirty rollers, misaligned doors, damaged rollers. | Clean the Quick-Line rollers and tracks thoroughly. Check if the doors are properly aligned. If rollers are damaged, they may need replacement. |

8. SPECIFICATIONS

Detailed technical specifications for the Sanotechnik CL121 Hydromassage Shower Cabin:

- **Model Number:** CL121
- **Brand:** Sanotechnik
- **Product Dimensions (Depth x Width x Height):** 80 x 120 x 215 cm (2.15H meters)
- **Shape:** Rectangular
- **Material:** Glass, Aluminum
- **Glass Thickness:** 5 mm (doors and side panels), 4 mm (black ESG glass base)
- **Color:** Black (base and accents)
- **Item Weight:** 78 Kilograms
- **Installation Method:** Freestanding
- **Assembly Required:** Yes
- **Number of Doors:** 1 (double folding sliding doors)
- **Number of Panels:** 2
- **Handle Type:** Push handle
- **Finish:** Polished
- **Included Components:** Plumbing system, shower tray, ESG glass, massage panel, radio, fan, LED lighting, folding seat, accessories.

9. WARRANTY & SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact your retailer or the manufacturer, Sanotechnik. Keep your proof of purchase for any warranty claims.

If you purchased this product from Home 36 GmbH, you may contact their specialized customer service for assistance. Please note that return policies typically allow returns within 14 days of delivery.