Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Tork /
- > Tork Paper Hand Towel Roll Lever Dispenser H21, Model 83TR Instruction Manual

Tork 83TR

Tork Paper Hand Towel Roll Lever Dispenser H21, Model 83TR Instruction Manual

Model: 83TR

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your Tork H21 Paper Hand Towel Roll Lever Dispenser, Model 83TR. This high-capacity dispenser is designed for efficient and hygienic hand drying in various restroom settings.



A front-side view of the Tork 83TR paper hand towel dispenser, showcasing its smoke-colored plastic casing and lever mechanism.

SAFETY INFORMATION

Read all instructions before installation and use. Keep this manual for future reference.

- Ensure the dispenser is securely mounted to a stable wall surface.
- Use only Tork H21 compatible paper towel rolls.
- Keep hands clear of moving parts during operation and refilling.

PACKAGE CONTENTS

Your package should contain:

- 1 Tork Paper Hand Towel Roll Lever Dispenser (Model 83TR)
- Mounting hardware (screws, wall anchors)
- Dispenser key

INSTALLATION


Mounting Instructions

- 1. Select a suitable wall location, ensuring adequate clearance for dispenser operation and towel dispensing.
- 2. Hold the dispenser against the wall at the desired height and mark the drilling points.
- 3. Drill holes at the marked points. Insert wall anchors if mounting into drywall or other non-stud surfaces.
- 4. Align the dispenser with the drilled holes and secure it to the wall using the provided screws. Ensure it is firmly attached.

LOADING PAPER TOWEL ROLLS

Compatible Towel Rolls

This dispenser is designed for Tork H21 system paper towel rolls. It can accommodate rolls up to 1,000 feet in length and 8 inches in diameter.

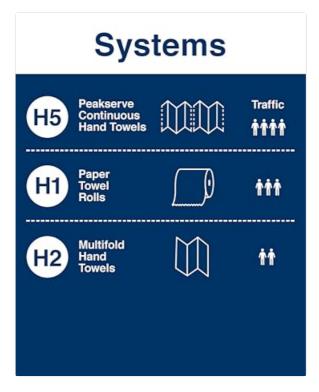

An illustration detailing the types of paper towel rolls compatible with the Tork H21 system, including Advanced 1-ply white and Universal 1-ply in white, natural white, or natural brown.

Refilling Procedure

- 1. Unlock the dispenser cover using the provided key and open it.
- 2. Remove any remaining towel roll core or small towel remnants from the dispenser.
- 3. Place a new Tork H21 paper towel roll onto the internal spindle, ensuring it rotates freely.
- 4. Feed the leading edge of the towel through the dispensing mechanism until it is visible at the bottom opening.
- 5. Close the dispenser cover and lock it securely.

OPERATION

To dispense a paper towel, firmly push down on the lever bar located at the bottom of the dispenser. A single towel sheet will be presented for use.



A woman is shown washing her hands at a sink, with the Tork 83TR dispenser mounted on the wall to her left, illustrating its typical use in a restroom environment.

MAINTENANCE AND CLEANING

Regular cleaning helps maintain hygiene and extends the life of your dispenser. The rigid vinyl plastic construction is designed to resist scratches and is easy to clean.

- Wipe the exterior surfaces with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or solvents, as these can damage the plastic finish.
- Periodically check the internal mechanism for any paper jams or debris and clear as necessary.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Towels not dispensing	Paper jam or empty roll	Open dispenser, clear any jam, or replace with a new roll. Re-feed towel through mechanism.

Issue	Possible Cause	Solution
Towels tearing during dispensing	Incorrect towel loading or incompatible roll type	Ensure the towel is loaded correctly and that it is a Tork H21 compatible roll.
Dispenser cover not closing	Obstruction or misaligned roll	Check for any obstructions preventing closure. Ensure the paper towel roll is seated properly on the spindle.

SPECIFICATIONS

Product Details

• **Product Dimensions:** 8.58"L x 12.5"W x 3"D (approximate)

• Item Model Number: 83TR

Material: PlasticColor: Smoke

Mounting Type: Wall Mount
Item Weight: 2.9 Pounds
Compatible System: Tork H21


. ,

• Manufacturer: Essity

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Tork Paper Hand Towel Roll Lever Dispenser, please contact Tork customer service directly. Refer to your purchase documentation or the official Tork website for specific warranty terms and contact details.

Related Documents - 83TR

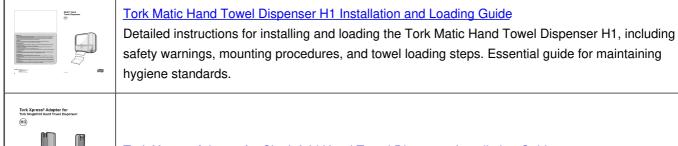

Tork Xpress Adapter for Singlefold Hand Towel Dispenser Installation Guide

Instructions for installing the Tork Xpress Adapter for the Tork Singlefold Hand Towel Dispenser. Includes assembly steps and cleaning instructions.



TORK

Tork M-Box Pro Centerfeed Towel Dispenser M2 Installation and Loading Guide

Comprehensive guide for installing and loading the Tork M-Box Pro Centerfeed Towel Dispenser (M2). Includes safety warnings, operational instructions, and adjustment details.



Tork Matic Hand Towel Roll Dispenser with Intuition Sensor - Model 460001 Manual

Comprehensive manual for the Tork Matic Hand Towel Roll Dispenser with Intuition Sensor (Model 460001). Covers safety, installation, operation, maintenance, WEEE compliance, and technical specifications.



Tork Electronic Hand Towel Roll Dispenser: Installation, Operation, and Safety Guide

This document provides comprehensive instructions for the Tork Electronic Hand Towel Roll Dispenser (models 771828, 771820, 771728, 771720). It covers essential safety warnings, operational environment and storage guidelines, battery installation and maintenance, cleaning procedures, installation steps, operating modes (Valet and On-Demand), sheet length adjustment, and product specifications. Manufactured by Essity.



Tork Elevation H1 Matic Hand Towel Roll Dispenser Service and Parts Manual

Comprehensive service and parts manual for the Tork Elevation H1 Matic Hand Towel Roll Dispenser (models 5510202, 5510282), including detailed instructions for parts replacement, installation, loading, maintenance, and troubleshooting.