

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aquarius](#) /

› [Aquarius Slimroll Rolled Hand Towel Dispenser 7955 User Manual](#)

## Aquarius 7955

# Aquarius Slimroll Rolled Hand Towel Dispenser

Model: 7955

Brand: Aquarius

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Aquarius Slimroll Rolled Hand Towel Dispenser, Model 7955. Please read this manual carefully before using the product to ensure proper function and longevity. This dispenser is designed for efficient and hygienic hand drying in various environments.

## 2. PRODUCT OVERVIEW

---

The Aquarius Slimroll Rolled Hand Towel Dispenser is a white, wall-mounted unit designed to dispense rolled paper towels. Its sleek and smooth rounded design minimizes dirt traps, facilitating easy cleaning and improved washroom hygiene. The dispenser promotes reduced cross-contamination by allowing users to access towels without touching the unit itself. Its compact form factor is ideal for spaces with limited wall area, and it features a 'stub roll' function to ensure a continuous supply of towels, making it suitable for high-traffic areas.



Figure 2.1: Front view of the Aquarius Slimroll Rolled Hand Towel Dispenser, showing the white casing and the viewing window for the paper roll.

### 3. WHAT'S IN THE BOX

---

- 1 x Aquarius Slimroll Rolled Hand Towel Dispenser (Model 7955)
- Mounting hardware (screws and rawl-plugs)

### 4. SETUP AND INSTALLATION

---

The Aquarius Slimroll dispenser is designed for wall mounting. Ensure you select a suitable location with adequate wall support and space for operation and maintenance.

#### 4.1 Tools Required

- Drill
- Drill bits appropriate for wall material
- Spirit level
- Pencil
- Screwdriver

## 4.2 Installation Steps

1. **Choose Location:** Select a wall location that is convenient for users and allows for easy access to the dispenser for refilling and cleaning. Consider the compact design for areas with limited space.
2. **Mark Drilling Points:** Hold the dispenser against the wall at the desired height. Use a spirit level to ensure it is straight. Mark the positions for the mounting holes with a pencil.
3. **Drill Holes:** Drill holes at the marked points using the appropriate drill bit for your wall material. Insert the provided rawl-plugs into the drilled holes.
4. **Mount Dispenser:** Align the dispenser with the drilled holes. Insert the screws through the dispenser's mounting points and tighten them into the rawl-plugs until the dispenser is firmly secured to the wall. Ensure it is stable and does not wobble.

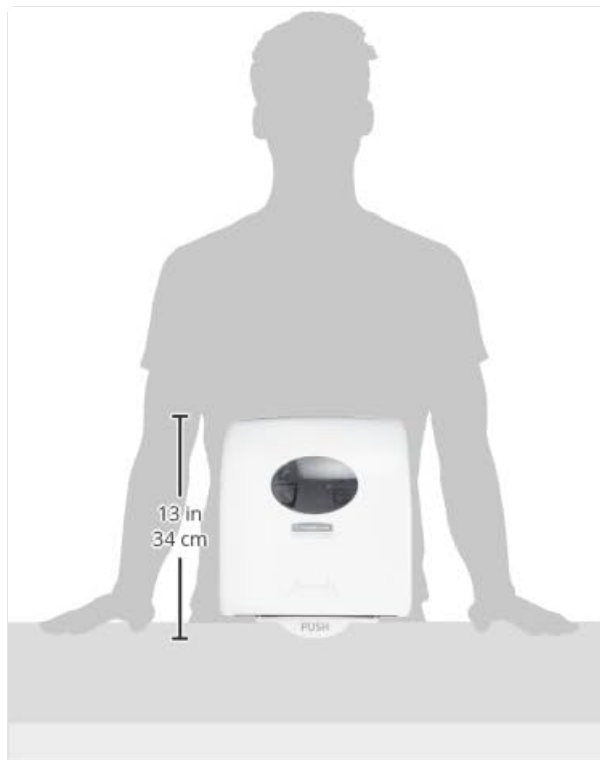


Figure 4.1: Dispenser dimensions for installation planning. The unit measures approximately 32.4 cm (height) x 29.8 cm (width) x 18.9 cm (depth).

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Loading Paper Towels

1. **Open Dispenser:** Locate the release mechanism (often a button or keyhole) to open the front cover of the dispenser.
2. **Insert Roll:** Place a new roll of Slimroll paper towels into the dispenser. Ensure the paper feeds from the bottom of the roll.
3. **Feed Paper:** Pull the leading edge of the paper down and feed it through the dispensing mechanism. Some models may require pressing a "push" bar to engage the paper feed.
4. **Close Dispenser:** Close the front cover securely until it latches. The viewing window on the front allows you to monitor the paper level.

*Note:* The dispenser features a 'stub roll' mechanism, which allows a new roll to be started before the current one is completely finished, ensuring a continuous supply of towels and preventing run-outs in high-traffic areas.

## 5.2 Dispensing Paper Towels

- To dispense a towel, simply pull down on the exposed paper. The dispenser is designed to release a single sheet or a controlled length of paper.
- Tear off the desired length of paper against the serrated edge or by pulling firmly.
- The hygienic design allows for dispensing without touching the dispenser itself, reducing cross-contamination.

## 6. MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and hygienic operation of your dispenser.

### 6.1 Cleaning

- **Exterior Cleaning:** The sleek and smooth rounded design of the dispenser is easy to clean. Use a soft cloth dampened with mild soap and water to wipe down the exterior surfaces. Avoid abrasive cleaners or solvents that could damage the plastic.
- **Interior Cleaning:** Periodically open the dispenser and wipe down the interior surfaces to remove any dust or paper residue. Ensure the paper path is clear.
- **Frequency:** Clean the dispenser as often as necessary, depending on usage and environment, to maintain hygiene standards.

### 6.2 Roll Replacement

Replace the paper roll when the viewing window indicates it is low or when the 'stub roll' feature has engaged the new roll. Refer to Section 5.1 for detailed loading instructions.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Aquarius Slimroll dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Paper does not dispense or is difficult to pull.	Paper roll incorrectly loaded. Paper jam within the mechanism. Roll is empty or nearly empty. Dispensing mechanism is obstructed or damaged.	Open the dispenser and re-load the paper roll, ensuring it is correctly seated and fed through the mechanism (refer to Section 5.1). Check for any crumpled paper or foreign objects obstructing the paper path and remove them. Replace the paper roll with a new one. Inspect the internal dispensing wheel/mechanism for damage. If damaged, contact customer support.
Dispenser cover does not close securely.	Obstruction preventing full closure. Latch mechanism is damaged.	Check for any paper or debris preventing the cover from closing. Inspect the latch for damage. If broken, the dispenser may need replacement.
Dispenser is loose on the wall.	Mounting screws are loose. Wall anchors are failing.	Carefully re-tighten the mounting screws. Do not overtighten. If wall anchors are failing, consider using larger anchors or relocating the dispenser to a more secure wall section.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Aquarius
Model Number	7955
Manufacturer	Kimberly-Clark Professional
Product Dimensions (L x W x H)	32.4 x 29.8 x 18.9 cm
Item Weight	2.3 kg
Colour	White
Material Type	Plastic
Mounting Type	Wall Mount
Number of Items	1

## 9. WARRANTY AND SUPPORT

Specific warranty details and direct customer support contact information for the Aquarius Slimroll Rolled Hand Towel Dispenser (Model 7955) are not provided in the available product data. For warranty claims or technical assistance, please refer to the documentation included with your purchase or contact the retailer from whom the product was acquired. You may also visit the official Kimberly-Clark Professional website for general product support information.

© 2024 Aquarius. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.