

Bostitch VLF100

Bostitch Office VLF100 LED Swing Arm Desk Lamp with Clamp Mount Instruction Manual

Model: VLF100 | Brand: Bostitch

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Bostitch Office VLF100 LED Swing Arm Desk Lamp with Clamp Mount. Please read all instructions carefully before assembly and operation. Keep this manual for future reference.

Key Features:

- **Versatile Placement:** Features an attached clamp for desktop mounting, offering flexibility in positioning.
- **Extended Reach:** An extensive 36-inch reach allows the lamp to clear monitors and large surface areas.
- **Replaceable LED Bulb:** Includes a replaceable LED bulb for long-lasting, energy-efficient illumination.
- **Durable Construction:** Constructed with an all-metal design for enhanced durability and longevity.
- **Adjustable Design:** A fully adjustable swing arm enables precise positioning for focused, directional lighting.
- **Flicker-Free Light:** Provides a flicker-free light zone, minimizing shadows, halos, and glare for improved visual comfort.

SAFETY INFORMATION

Before using the lamp, please observe the following safety precautions:

- Ensure the lamp is securely clamped to a stable surface before use.
- Do not exceed the maximum wattage specified for the bulb (7 watts LED, E26 base).
- Avoid direct eye exposure to the LED light for prolonged periods.
- Keep the lamp away from water and moisture. This product is for indoor use only and is not water resistant.
- Do not attempt to modify or disassemble the lamp beyond bulb replacement.
- Unplug the lamp from the power outlet before cleaning or replacing the bulb.

PACKAGE CONTENTS

- 1 x Bostitch Office VLF100 LED Swing Arm Desk Lamp
- 1 x Clamp Mount
- 1 x Replaceable LED Bulb (E26, 7W)

SETUP AND INSTALLATION

Follow these steps to set up your desk lamp:

1. **Attach the Clamp Mount:** Securely fasten the clamp mount to the edge of your desk or workbench. Ensure the surface thickness is compatible with the clamp's opening (up to 2.25 inches). Tighten the screw until the clamp is firm and stable.
2. **Insert the Lamp Arm:** Slide the base of the lamp arm into the opening on the clamp mount.
3. **Install the LED Bulb:** Carefully screw the included LED bulb into the lamp's E26 socket. Ensure it is tightened securely but do not overtighten.
4. **Connect to Power:** Plug the lamp's power cord into a standard AC electrical outlet.



Image: The clamp mount provides versatile and secure attachment to various desk surfaces.



All-Metal

All-metal construction
for durability



Replaceable Bulb

Includes replaceable
LED light bulb



Image: The lamp head features durable all-metal construction and a replaceable LED bulb.



Image: The lamp includes a standard E26 replaceable LED light bulb.

OPERATING INSTRUCTIONS

Your Bostitch Office VLF100 LED Swing Arm Desk Lamp is designed for ease of use and flexible lighting.

1. **Turning On/Off:** Locate the push-button switch on the lamp head. Press the button to turn the light on or off.
2. **Adjusting the Arm:** The lamp features a multi-jointed swing arm. Gently grasp the arm and move it to your desired position. The springs and joints are designed to hold the lamp in place once positioned.
3. **Adjusting the Lamp Head:** The lamp head can be angled up or down to direct light precisely where needed.



Swing Arm

Fully adjustable swing arm
easily positions for focused,
directional lighting



Image: The fully adjustable swing arm allows for precise positioning of the light.



Image: The lamp's extensive 36-inch reach provides ample lighting coverage for various tasks.

Video: This video demonstrates the adjustability and functionality of the Bostitch Swing Arm Desk Lamp.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your lamp.

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe down the lamp. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Bulb Replacement:** When the LED bulb needs replacement, ensure the lamp is unplugged and the bulb has cooled down. Unscrew the old bulb and replace it with a new E26 base LED bulb, not exceeding 7 watts.
- **Joint Tightening:** Periodically check the joints and screws for tightness. If any part feels loose, gently tighten it with an appropriate tool to maintain stability and adjustability.

TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose bulb, faulty bulb.	Check power connection, ensure bulb is screwed in tightly, replace bulb if necessary.
Light flickers.	Loose bulb, incompatible bulb, power fluctuation.	Tighten bulb, ensure correct bulb type (LED E26), check power source.

Problem	Possible Cause	Solution
Arm does not hold position.	Loose joints.	Tighten the screws at the arm joints.
Lamp feels unstable.	Clamp not securely fastened.	Re-tighten the clamp mount to the desk surface.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Specification
Model Number	VLF100
Product Dimensions	15.75"D x 16"W x 3"H
Reach	36 inches
Light Source Type	LED
Bulb Base	E26
Wattage	7 watts (Max)
Brightness	595 Lumens
Color	Black
Material	Metal
Mounting Type	Desk Mount (Clamp)
Switch Type	Push Button
Power Source	AC
Certification	ETL Listed
Item Weight	2.01 pounds

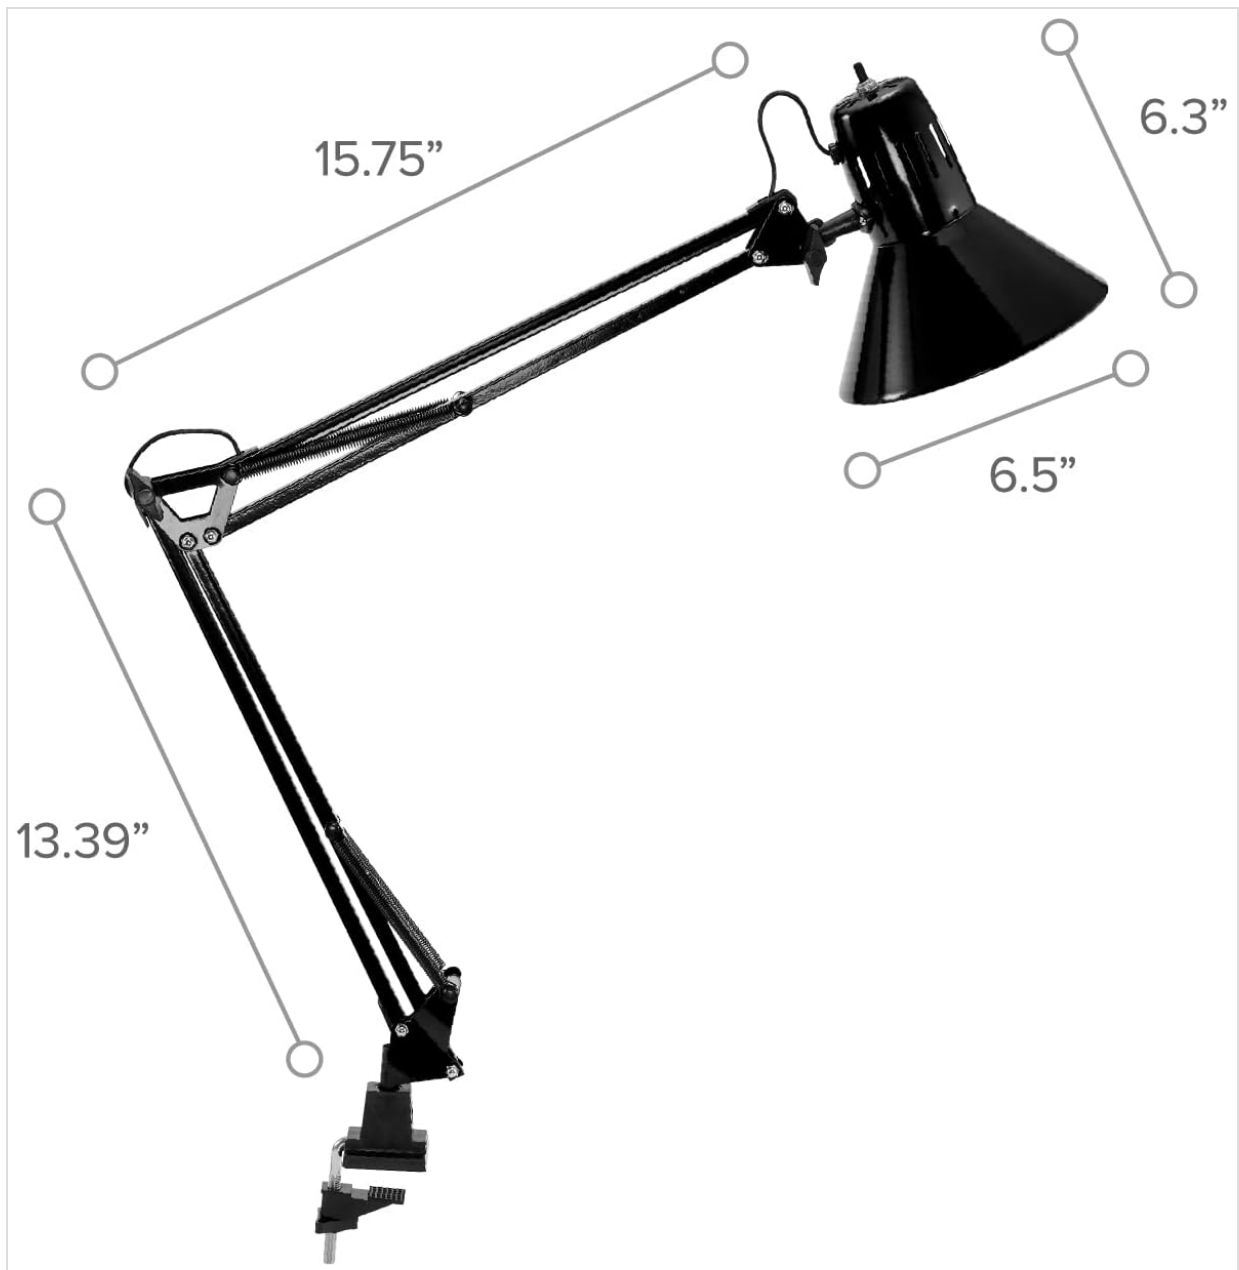


Image: Detailed dimensions of the VLF100 LED Swing Arm Desk Lamp.

WARRANTY AND SUPPORT

Your Bostitch Office VLF100 LED Swing Arm Desk Lamp is covered by a **1-year limited warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase or visit the official Bostitch website.