



Manuals.plus /

- › SENXINGYAN /
- › SENXINGYAN 8-inch LCD Digital Calendar Day Clock User Manual

## SENXINGYAN 8-inch LCD

# SENXINGYAN 8-inch LCD Digital Calendar Day Clock User Manual

Model: 8-inch LCD

## INTRODUCTION

---

The SENXINGYAN 8-inch LCD Digital Calendar Day Clock is designed to clearly display the time, day of the week, date, and month in large, easy-to-read text. This device is particularly beneficial for individuals who may experience memory loss or visual impairment, providing essential information at a glance. It supports multiple languages and features an automatic dimming function for optimal visibility day and night.



Image: Front view of the SENXINGYAN 8-inch LCD Digital Calendar Day Clock, showing the current day, time, and date clearly.

## PACKAGE CONTENTS

---

Please check the box for the following items:

- 1 x SENXINGYAN 8-inch LCD Digital Calendar Day Clock
- 1 x Power Adapter
- 1 x User Manual

## KEY FEATURES

---

- **Clear Display in 8 Languages:** Displays day, week, and month in large, bold, non-abbreviated characters. Supported languages include English, Spanish, French, German, Polish, Italian, Dutch, and Welsh.
- **Dual Time and Date Modes:** Easily switch between 12-hour or 24-hour time formats, and British (Day-Month-Year) or American (Month-Day-Year) date formats.
- **Automatic Night Dimmer:** The screen automatically dims at 6:00 PM and brightens at 6:00 AM for comfortable viewing in varying light conditions.
- **High-Quality 8-inch Screen:** Features a pure white text on a black background for exceptional readability from all viewing angles, with minimal glare.

- **Medication Reminders:** Programmable reminders to assist with medication schedules.

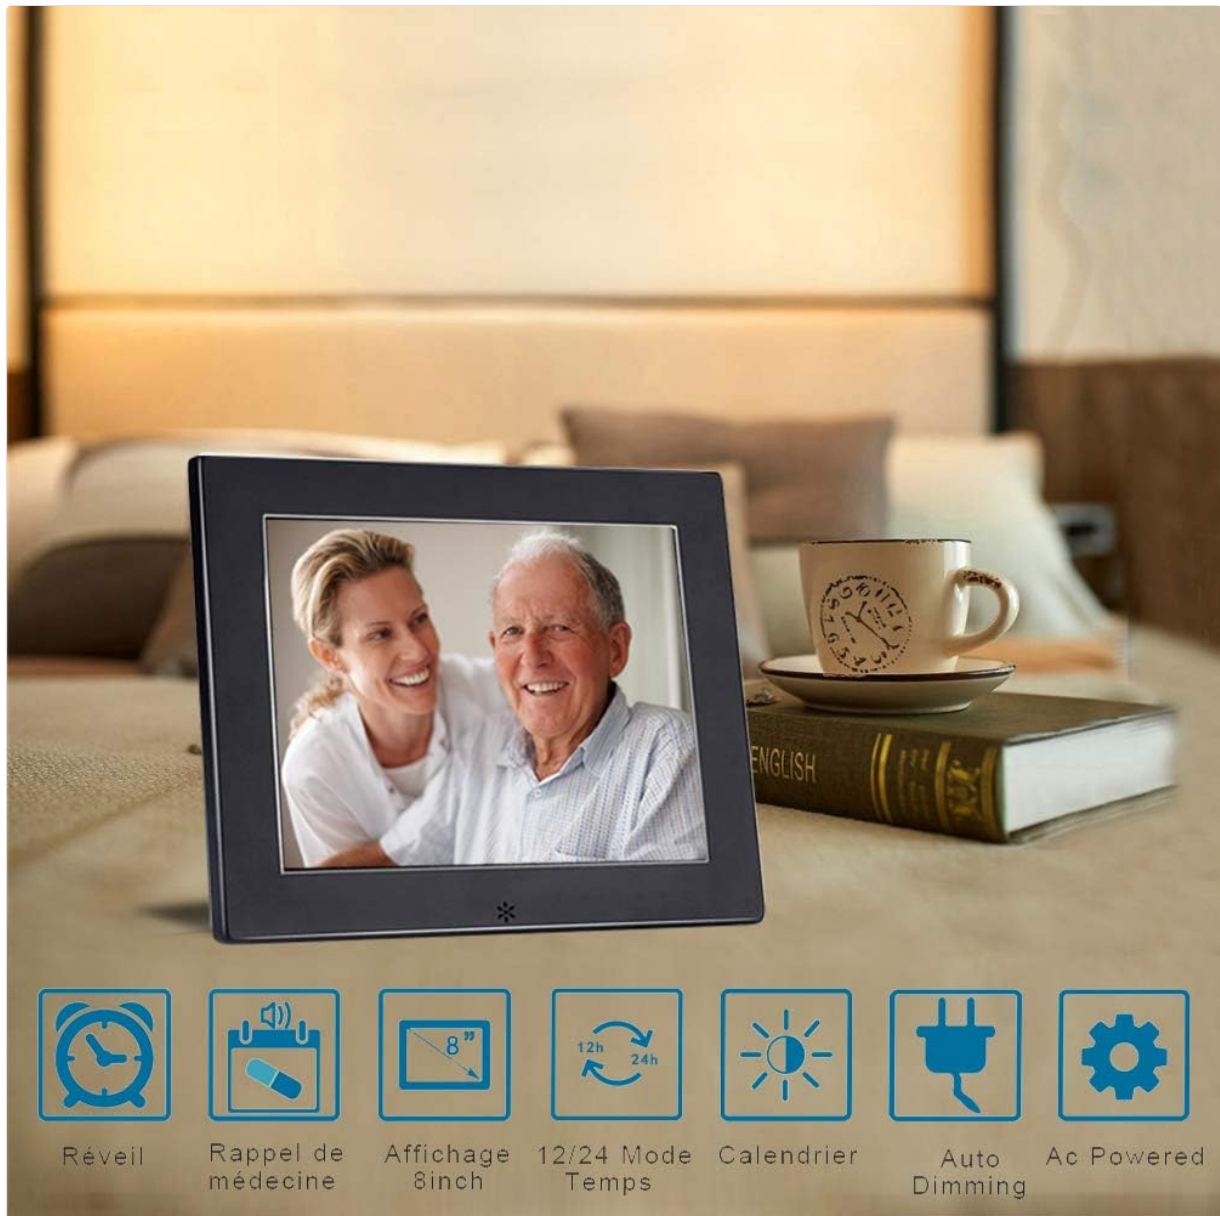


Image: The clock highlighting its various functions, including alarm, medication reminders, and display options.

## SETUP

1. **Unpack the Clock:** Carefully remove the clock and all accessories from the packaging.
2. **Position the Clock:** Place the clock on a stable, flat surface or mount it on a wall using the integrated mounting hole. Ensure it is near an AC power outlet.
3. **Connect Power:** Insert the small end of the power adapter into the DC 5V input port on the back of the clock. Plug the other end of the power adapter into a standard AC wall outlet. The clock will power on automatically.
4. **Initial Display:** Upon first power-on, the clock will display the default time and date. You may need to adjust these settings.



Image: Rear view of the clock, illustrating the power input and control buttons for setup.

## OPERATING INSTRUCTIONS

---

The control buttons are located on the back of the clock. Refer to the image in the Setup section for button placement.

### Setting Time and Date

1. Press the **MENU** button to enter the settings menu.
2. Use the **UP/DOWN** arrows to navigate through the options (e.g., Set Time, Set Date).
3. Press **OK** to select an option.
4. Use the **UP/DOWN** arrows to adjust values (hours, minutes, day, month, year).
5. Press **OK** to confirm each adjustment.
6. Press **MENU** again to exit the settings.

### 12/24 Hour Mode and Date Format

- In the settings menu, navigate to 'Time Mode' to switch between 12-hour (with AM/PM) and 24-hour formats.
- Navigate to 'Date Mode' to select between Month-Day-Year (American) and Day-Month-Year (British) formats.

### Automatic Dimmer Function

The clock features an automatic dimmer that adjusts screen brightness. It will dim at 6:00 PM and brighten at 6:00 AM. This feature is enabled by default and can usually be toggled in the settings menu under 'Auto Dimming' or 'Brightness'.

### Language Settings

To change the display language:

1. Enter the settings menu.
2. Navigate to 'Language'.
3. Use the **UP/DOWN** arrows to select your desired language from the available options (English, Spanish, French, German, Polish, Italian, Dutch, Welsh).
4. Press **OK** to confirm.

### Medication Reminders

The clock can be programmed to display medication reminders. Consult the full manual for detailed instructions on setting specific reminder times and messages.



Image: The clock displaying a medication reminder, indicating its utility for scheduled tasks.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and casing. Avoid abrasive cleaners or sprays directly on the screen.
- **Power:** Always use the provided power adapter. Disconnect power before cleaning or if the clock will be unused for an extended period.
- **Environment:** Keep the clock in a dry environment, away from direct sunlight, extreme temperatures, and high humidity.

## TROUBLESHOOTING

- **Clock does not turn on:** Ensure the power adapter is securely connected to both the clock and a working AC wall outlet. This clock requires continuous AC power and does not operate on batteries.
- **Time/Date resets after power outage:** This clock does not have an internal battery backup for time and date settings. In the event of a power interruption, you will need to manually reset the time and date once power is restored.
- **Display is unclear or distorted:** Check for smudges or dust on the screen and clean with a soft cloth. Ensure the clock is not exposed to extreme temperatures.
- **Cannot read USB photos:** This model is designed as a calendar day clock and does not support displaying photos from a USB drive.

## SPECIFICATIONS

Feature	Specification
Brand	SENXINGYAN
Model Number	8-inch LCD
Product Dimensions (L x W x H)	21 x 17 x 2 cm
Product Weight	272.16 grams
Batteries Required	No
Power Source	Electric Cord
Display Type	Digital
Special Feature	Calendar Display
Color	Black
Shape	Rectangular
Indoor/Outdoor Use	Indoor
Country of Origin	China

## WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For support or further inquiries, please refer

to the contact information provided by your retailer or the manufacturer's official website, if available.