

COMFIER 2309A

COMFIER Shiatsu Neck Back Massager

MODEL: 2309A

Your Guide to Relaxation and Well-being

Introduction

The COMFIER Shiatsu Neck Back Massager is designed to provide comprehensive full-body relaxation. It integrates innovative 2D/3D Finger Pressure Shiatsu, Rolling, Compression, Vibration, and Heat functions to deliver a spa-like massage experience in the comfort of your home. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal use of your massager.

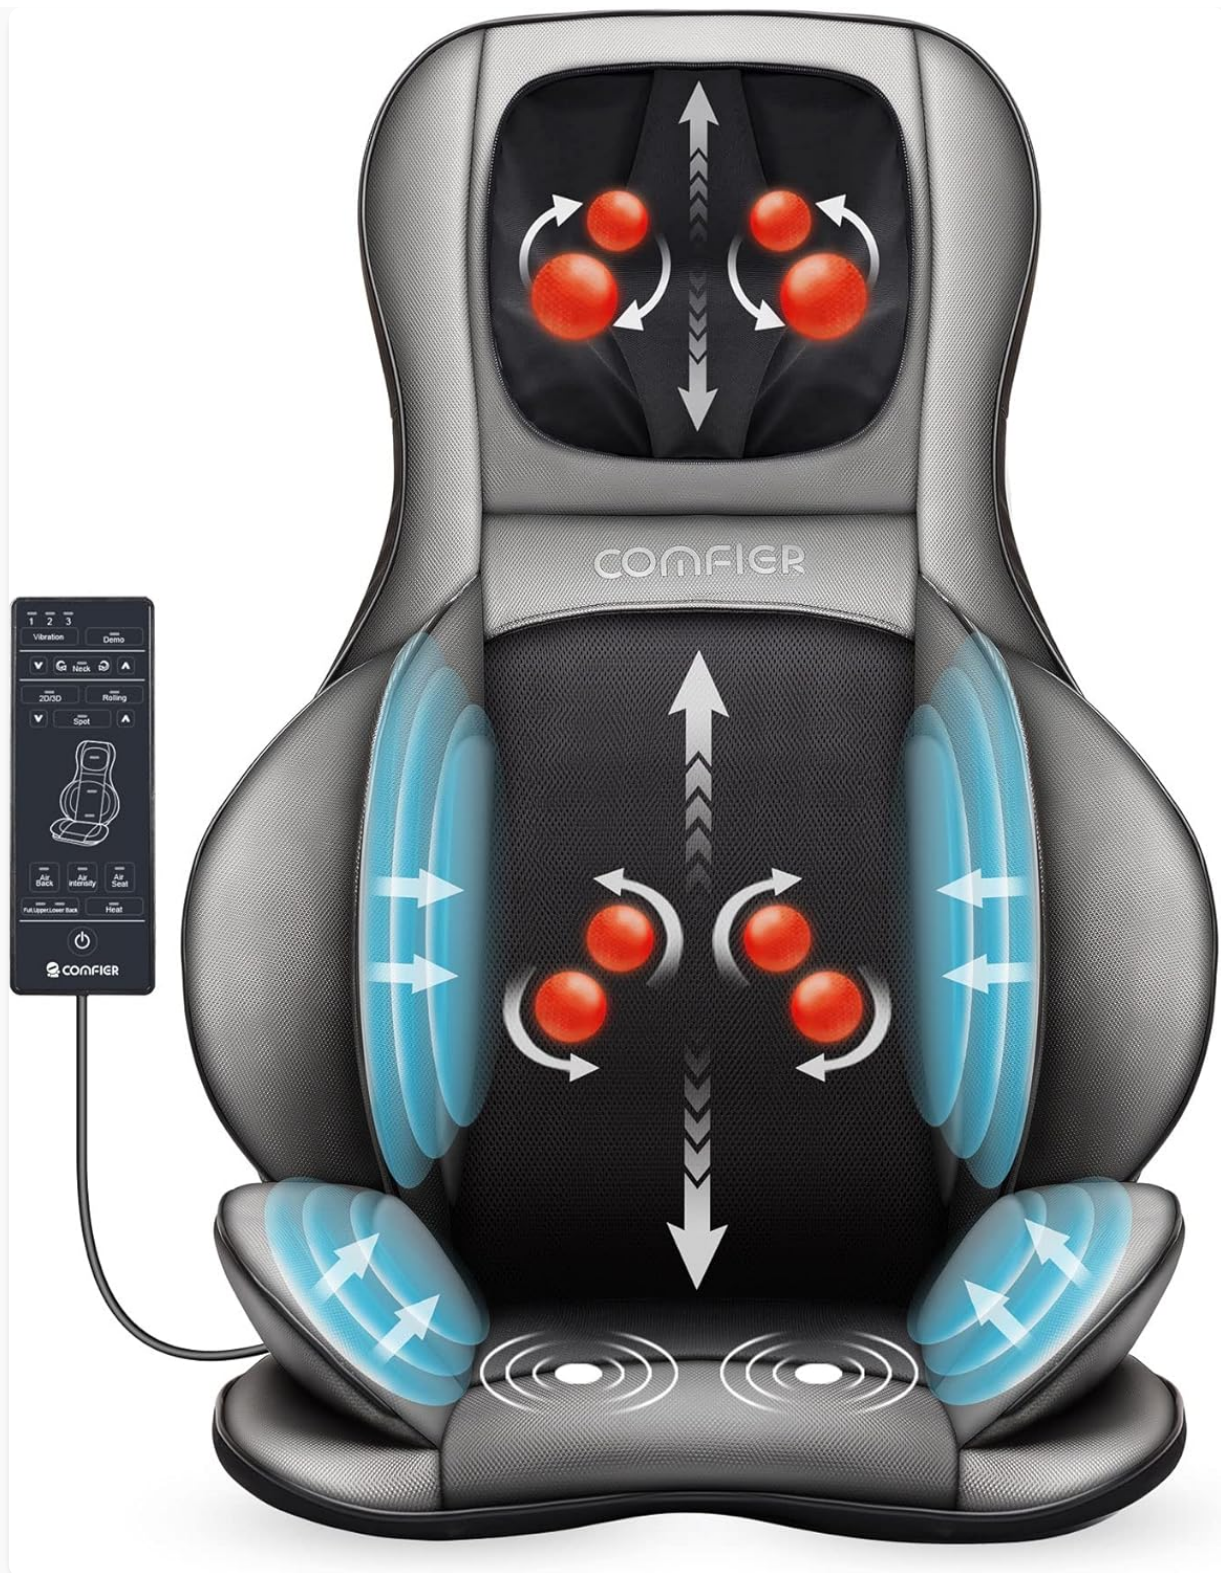


Figure 1: COMFIER Shiatsu Neck Back Massager Overview

The massager is equipped with multiple features to target various areas of your body, including the neck, back, waist, and thighs. Its versatile design allows it to be used on various seating options, providing ultimate comfort and convenience.

Safety Information

Users should consult the manufacturer's instructions for general safety guidelines, avoid using the massager with certain health conditions, and follow proper usage, maintenance, and electrical safety instructions.

Setup

1. **Choose a Suitable Chair:** Place the massager on a stable chair with back support, such as a sofa, couch, recliner, office chair, or dining chair. Ensure the chair is sturdy enough to support the massager and user.
2. **Secure the Massager:** Utilize the elastic straps located on the back of the massager to securely fasten it to your chosen chair. This prevents the massager from shifting during use.
3. **Connect Power:** Plug the AC adapter into the massager's power input, then plug the adapter into a standard electrical outlet.

Operating Instructions

The massager is controlled via an attached remote. Familiarize yourself with the remote's layout and functions:

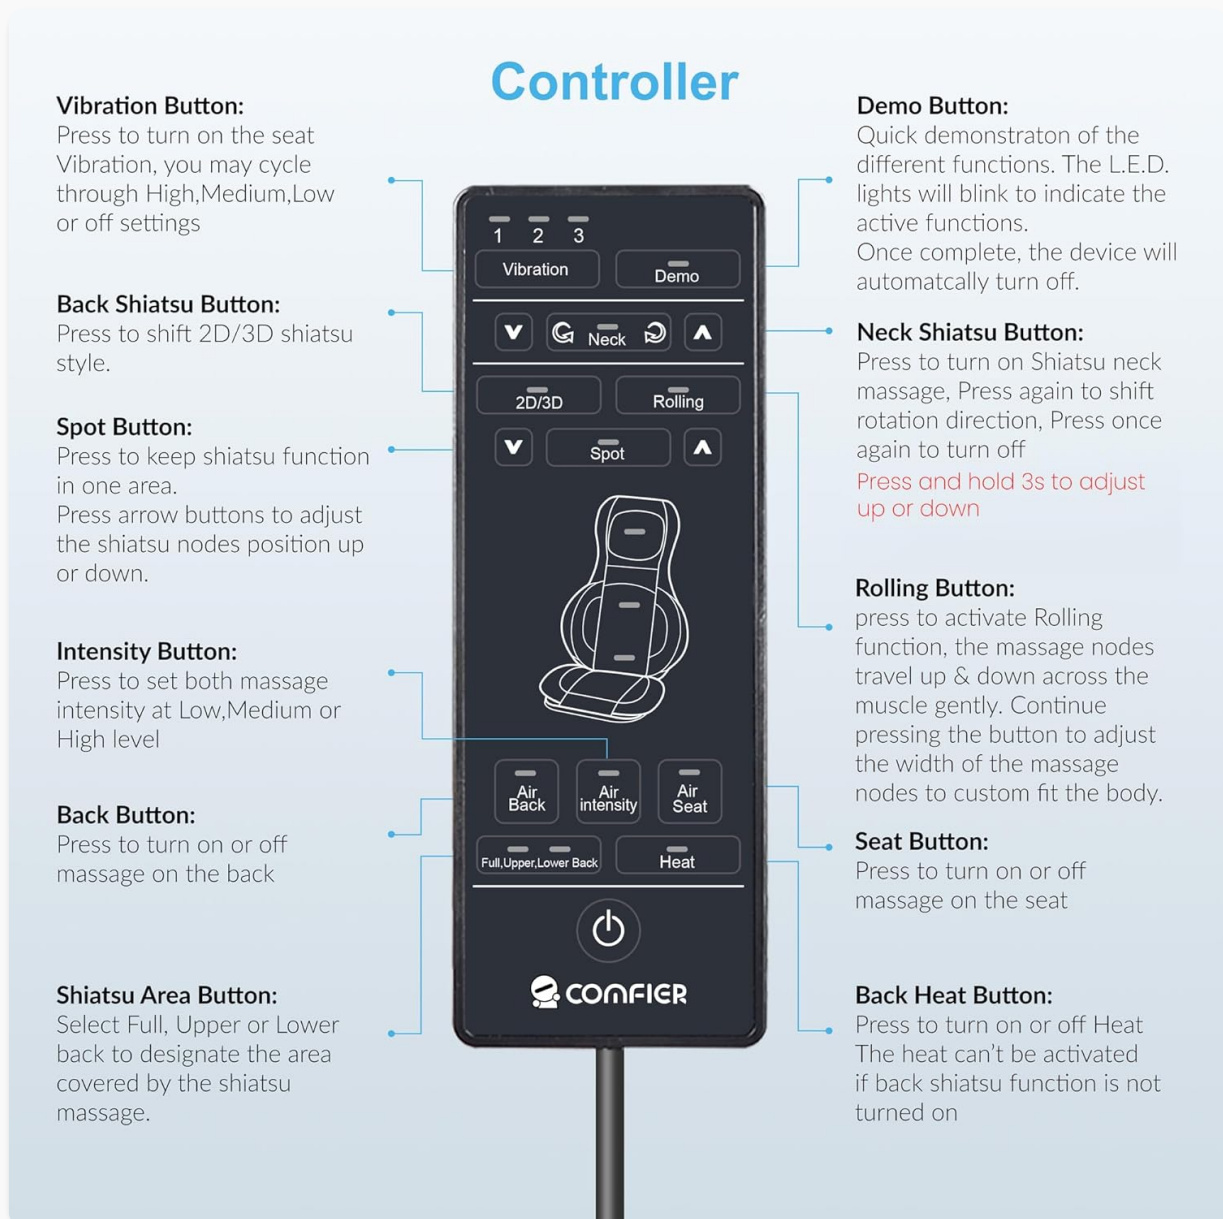


Figure 2: Remote Controller Functions

- **Power Button:** Press to turn the massager on/off.
- **Vibration Button:** Cycles through High, Medium, Low, or Off settings for seat vibration.
- **Demo Button:** Provides a quick demonstration of all functions. LED lights will blink to indicate active

functions. The device will automatically turn off after the demo.

- **Neck Shiatsu Button:** Turns on Shiatsu neck massage. Press again to change rotation direction. Press once more to turn off. Press and hold for 3 seconds to adjust the neck nodes up or down.
- **Back Shiatsu Button:** Shifts between 2D/3D Shiatsu style massage.
- **Rolling Button:** Activates rolling function, where massage nodes travel up and down the muscle gently. Continue pressing to adjust the width between the massage heads.
- **Spot Button:** Allows you to concentrate massage on one specific area. Use arrow buttons to adjust the Shiatsu node position up or down.
- **Air Back / Air Seat / Air Intensity:** Controls compression massage on the waist and hips. Adjustable 3 intensity settings are available.
- **Back Heat Button:** Turns on/off gentle warmth for the back. Heat function requires the back shiatsu function to be on.
- **Shiatsu Area Button:** Select Full back, Upper back, or Lower back to target the desired massage area.

Features and Functions

The COMFIER massager is packed with features designed for your comfort and therapeutic needs:

- **Customizable Neck Massage:** The neck massage nodes can be adjusted up and down to precisely target your neck and shoulders. Designed for users between 5'0"–5'9", ensuring better alignment and comfort.

Adjustable Neck Rollers

Suitable for height of 5' - 5.9',
Under 5' can be used with cushion



✓
Neck Highest: 5.9'

✓
Neck lowest: 5'



Note: If the neck rollers still can't reach neck, by placing a seat cushion or a pillow on the sitting part

Figure 3: Adjustable Neck Rollers

- **Creative 2D/3D Shiatsu Massage:** Features 4 rotation nodes for deep kneading neck massages. The massaging nodes move inward & outward to create 2D or 3D finger pressure shiatsu massage with double comfort for your back.

Creative 2D/3D Shiatsu Massage

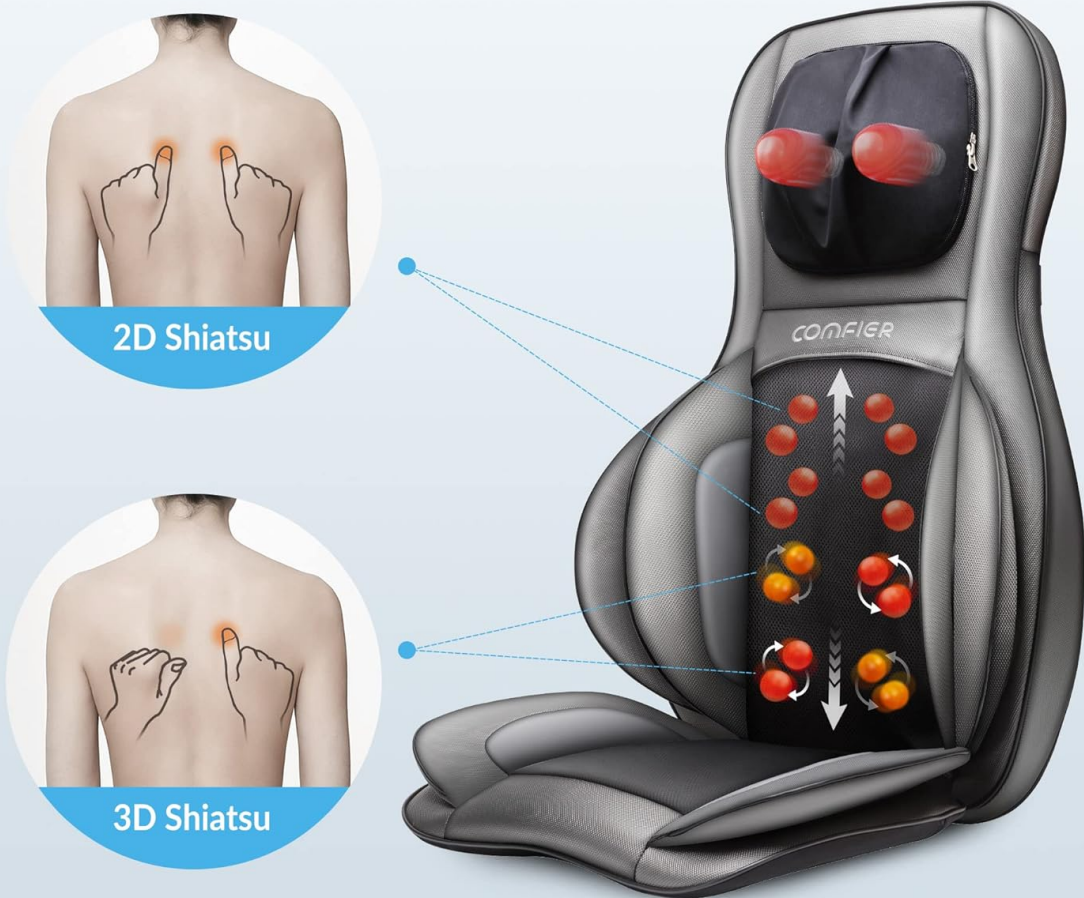


Figure 4: 2D/3D Shiatsu Massage

- **Optional Heat & Adjustable Compression:** A heating pad delivers gentle warmth to the back. Adjustable compression massage on waist & hips with 3 intensity settings.



Figure 5: Soothing Heat Function

Compression Massage

Relax your back, waist, and thigh muscles



3 Intensity



Seat



Back



Figure 6: Compression Massage

- **Adjustable Rolling & Spot Massage:** Soft rolling massage along the back spine. The width between massage heads can be adjusted. Spot massage concentrates on one area for pin-point relaxation.
- **Ultimate Comfort & Versatility:** Place on various chairs for a massage at home. Weighs 19 lbs and is designed for stable chairs with back support.

One Massager, Multiple Uses

Note: Weighs 19 lbs – Designed for stable chairs with back support.



Figure 7: Multiple Use Scenarios

- **Removable & Washable Cover:** The neck cover is removable and washable for hygiene. An intensity control flap can be used to cushion the massage pressure for added comfort.

If you feel that the massage intensity is a bit strong, the adjustable flaps on the massager can alleviate the intensity.



Figure 8: Removable Cover and Intensity Flap

Official Product Videos

CF-2309 Air Compression Shiatsu Neck & Back Massager

Video 1: Demonstrates the features and functions of the CF-2309 massager, including air compression, shiatsu, and rolling massage.

COMFIER Shiatsu Neck Back Massager

Video 2: A short preview showcasing the massager's capabilities and ease of use.

Maintenance

To ensure the longevity and hygiene of your COMFIER massager, follow these maintenance guidelines:

- **Cleaning:** Unplug the massager before cleaning. Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

- **Washable Cover:** The neck cover can be unzipped and removed for washing. Follow the care instructions on the label for proper cleaning.
- **Storage:** Store the massager in a cool, dry place away from direct sunlight when not in use. Avoid placing heavy objects on top of the massager.

Troubleshooting

If you encounter any issues with your massager, please refer to the following common troubleshooting steps:

- **Massager not turning on:** Ensure the power adapter is securely plugged into both the massager and a working electrical outlet. Check if the power button on the remote is pressed.
- **Massage intensity too strong/weak:** Adjust the intensity settings using the remote. For shiatsu massage, consider using or removing the intensity control flap.
- **Neck massage not reaching desired area:** Use the up/down arrows on the remote to adjust the neck nodes. If still not reaching, try placing a seat cushion or pillow on the sitting part of your chair to adjust your height relative to the massager.
- **Heat function not working:** Ensure the back shiatsu function is activated, as heat requires it to be on. Allow a few minutes for the heating pad to warm up.

If the problem persists after trying these steps, please contact COMFIER customer support.

Specifications













Feature	Detail
Brand	COMFIER
Model Number	2309A
Product Dimensions	17.5 x 16.5 x 30.7 inches
Item Weight	20.94 Pounds (9.5 Kilograms)
Material	Leather
Power Source	Corded Electric
Use For	Whole Body

Warranty & Support

COMFIER products typically come with a standard warranty. Some users have reported the option to extend the warranty to 3 years by registering their product. Please refer to the official COMFIER website or the warranty card included in your product packaging for detailed warranty terms and conditions.

For customer support, technical assistance, or warranty claims, please visit the COMFIER official website or contact their customer service department directly. Contact information can usually be found in the user manual or on the brand's website.

Related Documents - 2309A

<div data-bbox="116 168 311 441">  <p>CONFIER Shiatsu Neck and Back Massager</p>  <p>User Manual CF-2309A</p> </div>	<div data-bbox="338 226 1477 383"> <p>Comfier Shiatsu Neck and Back Massager CF-2309A User Manual</p> <p>User manual for the Comfier Shiatsu Neck and Back Massager, model CF-2309A. Includes safety instructions, features, technical data, setup and operation, controller instructions, care and cleaning, troubleshooting, and warranty information.</p> </div>
<div data-bbox="116 481 311 772">  <p>CONFIER Shiatsu Neck and Back Massager with Heat</p>  <p>User Manual CF-2303-KR</p> </div>	<div data-bbox="338 560 1477 714"> <p>COMFIER CF-2303-KR Shiatsu Neck and Back Massager with Heat User Manual</p> <p>Comprehensive user manual for the COMFIER CF-2303-KR Shiatsu Neck and Back Massager with Heat, covering safety instructions, features, technical data, setup, operation, controller functions, care, cleaning, troubleshooting, and warranty information.</p> </div>
<div data-bbox="116 813 311 1106">  <p>CONFIER Shiatsu Massage Pillow with Heat</p>  <p>CE User Manual CF-1228</p> </div>	<div data-bbox="338 891 1477 1048"> <p>Comfier CF-1228 Shiatsu Massage Pillow with Heat User Manual</p> <p>User manual for the Comfier CF-1228 Shiatsu massage pillow with heat, detailing safety instructions, operating procedures, features, maintenance, disposal, technical specifications, and warranty information.</p> </div>
<div data-bbox="116 1144 311 1438">  <p>CONFIER Shiatsu neck and back massager DE Shiatsu neck and back massager GB Massager du cou et des dos Shiatsu FR Massaggiatore shiatsu per collo e schiena IT Masajeador shiatsu de para cuello y espalda ES Shiatsu neck- en rugensmassagepill DE</p>  <p>CE User Manual CF-2309A</p> </div>	<div data-bbox="338 1223 1477 1379"> <p>Comfier CF-2309A Shiatsu Neck and Back Massager User Manual</p> <p>Comprehensive user manual for the Comfier CF-2309A Shiatsu Neck and Back Massager, covering features, operation, safety instructions, maintenance, technical specifications, and warranty information.</p> </div>
<div data-bbox="116 1458 311 1749">  <p>User Manual</p>  <p>CF-6701 DEEP-KNEADING SHIATSU NECK & SHOULDER MASSAGER</p> </div>	<div data-bbox="338 1534 1477 1691"> <p>Comfier CF-6701 Deep-Kneading Shiatsu Neck & Shoulder Massager User Manual</p> <p>User manual for the Comfier CF-6701 Deep-Kneading Shiatsu Neck & Shoulder Massager, covering product features, technical data, setup, operation, safety instructions, care, troubleshooting, and warranty information.</p> </div>
<div data-bbox="116 1789 311 2083">  <p>CONFIER Shiatsu massagecushion/foam mat with heat/en DE Shiatsu massage cushion with heat GB Cushion de massage shiatsu avec chaleur FR Cushion per massage shiatsu riscaldato IT Cajín masajeador shiatsu con calefacción ES</p>  <p>CE User Manual CF-2606MC</p> </div>	<div data-bbox="338 1868 1477 2022"> <p>COMFIER CF-2606MC Shiatsu Massage Cushion with Heat User Manual</p> <p>Comprehensive user manual for the COMFIER CF-2606MC Shiatsu massage cushion with heat. Includes safety instructions, operating guide, features, maintenance, and warranty information.</p> </div>

