



Manuals.plus /

› UPBRIGHT /

› UpBright 24V AC Adapter Instruction Manual for LifePro Massage Guns

## UPBRIGHT LifePro Sonic X SonicX Power Supply

# UpBright 24V AC Adapter Instruction Manual

For LifePro Sonic X, Sonic LX, SonicPlus, PulseFX, and Sonic M1 Massage Guns

## 1. PRODUCT OVERVIEW

---

The UpBright 24V AC Adapter is designed to provide reliable power and charging for compatible LifePro massage guns. This adapter features worldwide input voltage compatibility (100-240VAC, 50/60Hz) and includes essential safety protections such as Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP).

### 1.1 What's in the Box

- 1 x UpBright 24V AC Adapter

### 1.2 Compatibility

This AC adapter is compatible with various LifePro massage gun models that require a 24V power supply. Please verify your device's voltage requirements before use.

- LifePro Sonic X (LPSNCXBLK, LPSNCXBLU)
- LifePro Sonic LX (LPSNCLXBLK, LPSNCLXBLU)
- LifePro SonicPlus (24V 2400mAh Lithium-ion Battery Power Supply)
- LifePro Sonic M1 (LPSNCM1BLK)
- LifePro PulseFX (LPPLSFXBULU, 24V 2000mAh Lithium-ion Battery Power Supply)

#### Important Note:

This adapter is **NOT** compatible with 16.8V versions of LifePro massage guns.

This adapter is **NOT** compatible with LifePro Sonic Mini.

## UpBright AC Adapter Power Supply Compatible with:

Please Check your model# and Label info



**Compatible with**  
**Sonic X and Sonic LX**  
**DC IN: 24V**



**Do not fit**  
**Sonic, Sonic Mini and**  
**Fusion FX Heated**  
**DC IN: 16.8V X**

Image: Compatibility chart indicating which LifePro massage gun models are compatible (Sonic X, Sonic LX) and which are not (16.8V versions, Sonic Mini).

## UpBright AC Adapter Power Supply Compatible with:

**Compatible with:**



## 2. SETUP INSTRUCTIONS

---

Follow these steps to properly connect your UpBright 24V AC Adapter to your LifePro massage gun:

1. **Inspect the Adapter:** Before use, visually inspect the AC adapter and its cable for any signs of damage. Do not use if damaged.
2. **Connect to Massage Gun:** Insert the barrel connector end of the AC adapter cable into the charging port of your LifePro massage gun. Ensure a secure fit.
3. **Connect to Power Outlet:** Plug the AC adapter into a standard wall power outlet (100-240VAC).
4. **Verify Connection:** Confirm that the massage gun's charging indicator (if available) illuminates, indicating that it is receiving power.



Image: The UpBright 24V AC Adapter.

## 3. OPERATING INSTRUCTIONS

---

Once connected, the adapter will begin charging your LifePro massage gun. The charging process is typically indicated by an LED light on the massage gun itself. Refer to your specific massage gun's manual for details on charging indicators and expected charging times.

- Ensure the massage gun is turned off during charging for optimal battery health.

- Disconnect the adapter from the wall outlet and the massage gun once charging is complete or when not in use.

## 4. CARE AND MAINTENANCE

---

To ensure the longevity and safe operation of your UpBright AC Adapter, follow these maintenance guidelines:

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and moisture when not in use.
- **Cleaning:** Clean the adapter with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Cable Care:** Avoid bending or crimping the cable excessively. Do not place heavy objects on the cable.
- **Temperature:** Do not expose the adapter to extreme temperatures.
- **Disconnection:** Always grasp the plug, not the cable, when disconnecting from the wall outlet.

## 5. TROUBLESHOOTING

---

If you encounter issues with your UpBright AC Adapter, refer to the following common problems and solutions:

### 5.1 Common Issues

- **Massage Gun Not Charging:**
  - Ensure the adapter is securely plugged into both the wall outlet and the massage gun.
  - Verify the wall outlet is functional by testing it with another device.
  - Confirm that your massage gun requires a 24V power supply. This adapter is not compatible with 16.8V devices.
  - Check the adapter cable for any visible damage.
- **Adapter Gets Hot During Use:**
  - A slight warmth is normal during operation. If the adapter becomes excessively hot, disconnect it immediately and contact support.
  - Ensure the adapter is used in a well-ventilated area.
- **Loose Connection:**
  - Ensure the barrel connector is fully inserted into the massage gun's charging port.
  - If the connection remains loose, the adapter may not be the correct size for your device, or the port on your device may be damaged.

## 6. PRODUCT SPECIFICATIONS

---


Feature	Specification
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	24V - 26V DC
Amperage	1 Amp
Wattage	120 Watts
Connector Type	Barrel Connector
Protection Features	OVP, OCP, SCP (Over Voltage, Over Current, Short Circuit Protection)
Product Dimensions	3 x 3 x 1 inches
Item Weight	3.84 ounces

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

This UpBright product comes with a limited warranty. All units are tested and confirmed to be in great working condition. UpBright offers a 30-day refund policy and a 24-month exchange policy from the date of purchase.

Come With A Suitable Outlet Adapter (Only One) to Fit  
Your Country/Area For International Order

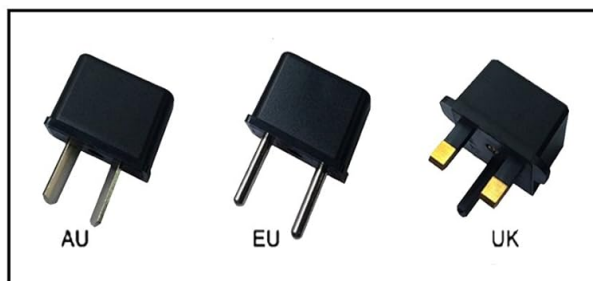

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE  
+ UPBRIGHT® LIMITED WARRANTY



Image: UpBright Limited Warranty Certificate and international plug adapters.

### 7.2 Contact Support

For technical assistance, warranty claims, or any questions regarding your UpBright AC Adapter, please refer to the contact information provided with your purchase or visit the official UpBright website for support resources.