#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Kensington /
- > Kensington Presenter Expert Wireless with Red Laser K75772WW User Manual

## Kensington K75772WW

## Kensington Presenter Expert Wireless with Red Laser User Manual

Model: K75772WW

#### INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Kensington Presenter Expert Wireless with Red Laser (Model K75772WW). Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your experience.



Image: The Kensington Presenter Expert Wireless with Red Laser in Rose Gold color, viewed from an angle.

## **PACKAGE CONTENTS**

Verify that all items are present in the package:

- Kensington Presenter Expert Wireless with Red Laser
- USB Wireless Receiver (dongle)
- AAA Battery
- Storage Pouch



Image: The Kensington Presenter, its USB wireless receiver, and the included storage pouch.

## **SETUP INSTRUCTIONS**

- 1. **Insert Battery:** Open the battery compartment on the presenter and insert the provided AAA battery, ensuring correct polarity.
- 2. **Retrieve USB Receiver:** The USB wireless receiver is stored inside the presenter for convenience. Gently slide open the compartment to retrieve it.



Image: A hand demonstrating the insertion or removal of the USB wireless receiver from its storage slot within the presenter.

- 3. **Connect Receiver:** Plug the USB wireless receiver into an available USB port on your computer. The device is plug-and-play and does not require additional drivers for Windows or macOS.
- 4. **Power On:** Ensure the power switch on the side of the presenter is in the "On" position.
- 5. **Pairing:** The presenter and receiver are uniquely paired at the factory. No manual pairing is typically required. The device should be ready for use once connected.

## **OPERATING INSTRUCTIONS**

The Kensington Presenter Expert features an intuitive four-button layout for easy control of your presentations.





Image: A top-down view of the Kensington Presenter, highlighting its four control buttons and red laser pointer button.

- Forward Button (>): Press this button to advance to the next slide in your presentation.
- Back Button (◄): Press this button to return to the previous slide in your presentation.
- Screen Blank Button (☐): Press this button to blank the screen during your presentation, drawing attention back to you. Press again to un-blank the screen.
- Red Laser Pointer Button (\*): Press and hold this button to activate the red laser pointer. Release the button to turn off the laser.

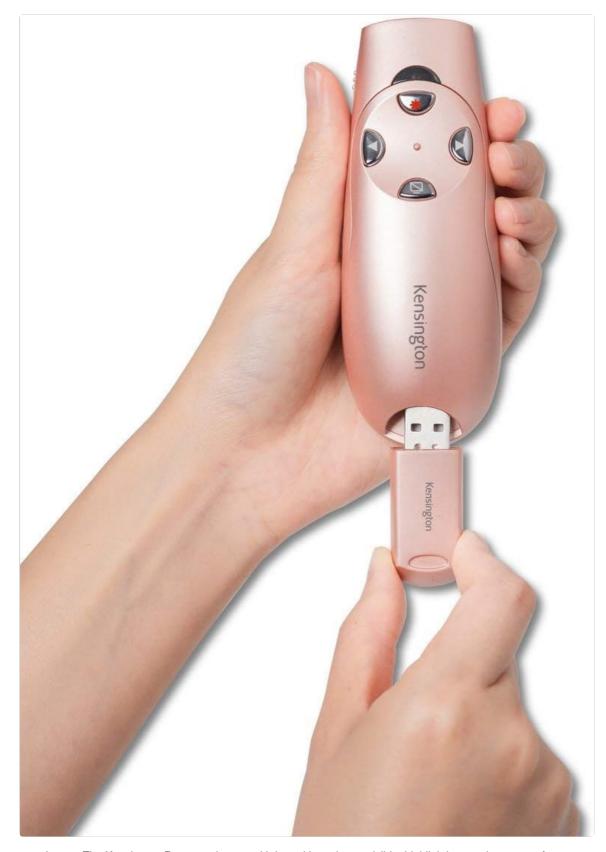


Image: The Kensington Presenter in use, with its red laser beam visible, highlighting a point on a surface.

The wireless connection operates on a 2.4GHz frequency, providing a reliable range of up to 150 feet (45 meters). This allows for freedom of movement during your presentation.

## **M**AINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the presenter. Avoid using harsh chemicals or abrasive materials.
- Battery Replacement: When the presenter's performance diminishes, replace the AAA battery.

Ensure proper disposal of used batteries according to local regulations.

• Storage: When not in use, store the USB wireless receiver inside the presenter's dedicated compartment to prevent loss. Utilize the included storage pouch for protection during transport.

#### **TROUBLESHOOTING**

#### Presenter is not responding:

- Ensure the presenter is powered on.
- Check if the AAA battery is inserted correctly and has sufficient charge. Replace if necessary.
- Verify that the USB wireless receiver is securely plugged into a functioning USB port on your computer.
- Try plugging the receiver into a different USB port.
- Ensure the presenter and receiver are within the 150-foot operating range and there are no significant obstructions.

#### Laser pointer is not working:

- Confirm the presenter is powered on.
- Check the battery level. A low battery can affect laser performance.
- Ensure you are pressing and holding the laser pointer button firmly.

#### Slides are not advancing/going back:

- Ensure your presentation software (e.g., PowerPoint, Keynote) is active and in presentation mode.
- Verify the wireless connection as described above.

## **SPECIFICATIONS**

Brand	Kensington
Model Number	K75772WW
Operating System Compatibility	macOS, Windows
Wireless Technology	2.4GHz RF with AES 128-bit encryption
Wireless Range	Up to 150 feet (45 meters)
Laser Type	Red Laser
Power Source	1 x AAA Battery
Dimensions (LxWxH)	4.5 x 1.69 x 1.5 inches (11.43 x 4.29 x 3.81 cm)
Weight	8.8 ounces (249.5 grams)
Color	Rose Gold

## WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please visit the official Kensington

website or contact their customer service department.

Kensington Official Website: www.kensington.com

#### OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this item in the provided data.

© 2023 Kensington. All rights reserved.

#### Related Documents - K75772WW



#### Kensington Presenter Expert Green Laser Presenter: User Guide and Features

Comprehensive guide to the Kensington Presenter Expert Green Laser Presenter, covering setup, features, safety instructions, and technical support.



#### Kensington Presenter Expert Green Laser Presenter with Cursor Control - User Manual

Comprehensive guide for the Kensington Presenter Expert Green Laser Presenter with Cursor Control, covering setup, features, safety instructions, and technical specifications.



#### Kensington Presenter Expert Green Laser Presenter with Cursor Control - User Manual

User manual and safety instructions for the Kensington Presenter Expert Green Laser Presenter with Cursor Control. Learn about setup, features, modes, and safety guidelines.



#### Kensington Presenter Expert Green Laser Presenter with Cursor Control - User Manual

User manual for the Kensington Presenter Expert Green Laser Presenter with Cursor Control, detailing setup, operation modes, safety precautions, technical support, and compliance information.



## Kensington Presenter Expert Green Laser Presenter with Cursor Control - User Manual

User manual for the Kensington Presenter Expert Green Laser Presenter with Cursor Control. Includes setup, features, safety warnings, technical support, and compliance information.



# Kensington Wireless Presenter with Red Laser - Nano Receiver User Manual and Safety Information

Comprehensive safety instructions, product overview, and regulatory compliance details for the Kensington Wireless Presenter with Red Laser - Nano Receiver.