

Tork 105065

Tork PeakServe Continuous Hand Towel H5 (Model 105065) Instruction Manual

Brand: Tork

Model: 105065

1. PRODUCT OVERVIEW

The Tork PeakServe Continuous Hand Towel system is designed for high-traffic restrooms to ensure a continuous supply of paper towels, reduce maintenance, and improve hygiene. This system utilizes compressed towel bundles that dispense smoothly one at a time, even between bundles, to prevent shortages and jams.

2. KEY FEATURES AND BENEFITS

- **High Capacity:** Towels are compressed by 50%, allowing for 250% more towels per dispenser compared to Tork Universal refills, reducing the frequency of refills.
- **Continuous Dispensing:** The patented Continuous™ towel system ensures smooth, one-at-a-time dispensing in under 3 seconds, even when transitioning between bundles.
- **Reduced Waste & Jams:** One-at-a-time dispensing minimizes consumption and prevents towels from jamming.
- **Efficient Maintenance:** Fewer refills mean less staff time spent on maintenance, freeing up time for other cleaning tasks.

3. COMPATIBILITY

These Tork PeakServe Continuous Hand Towels (Model 105065) are specifically designed for use with Tork H5 dispensers. Ensure your dispenser is an H5 system for proper fit and function.

H5 paper towels to be used with H5 Tork dispensers

Elevation line



552520



552528



552530



552538

Recessed



552522



552521



Figure 1: Tork H5 paper towel dispensers. This image displays different models of Tork H5 dispensers, including both wall-mounted Elevation line and recessed options, illustrating the variety of compatible units for the PeakServe Continuous Hand Towels.

4. SETUP AND REFILLING INSTRUCTIONS

To ensure optimal performance, follow these steps when loading your Tork PeakServe Continuous Hand Towels into a compatible H5 dispenser:

1. Open the Tork H5 dispenser according to its specific model instructions.
2. Remove any remaining towel bundles if the dispenser is empty or nearly empty.
3. Insert the new compressed Tork PeakServe hand towel bundles. The bundles are designed to latch together, ensuring a continuous feed.
4. Close the dispenser securely.

Advanced quality

Total of 4920 sheets



**12 x 410
sheets**



**8.85 x
7.91 in**



1 ply



**Continuous
hand towels**

Figure 2: Tork PeakServe Continuous Hand Towel packaging. This image shows the product packaging, highlighting that it contains 12 packs, each with 410 sheets, for a total of 4920 sheets. It also indicates the advanced quality and dimensions of the towels.

Paper towels are the more hygienic way to dry hands¹



Jet air dryers spread up to 10x more germs²

¹Snelling A.M., 2010; ²Best et al, J Hosp Infection, 2014

Figure 3: Continuous bundle system. This diagram illustrates how Tork PeakServe bundles are compressed by 50% for increased capacity and how continuous bundles latch together to ensure smooth, uninterrupted dispensing, reducing overconsumption.

Video: Tork PeakServe H5 System Overview


Your browser does not support the video tag.

This video provides a comprehensive overview of the Tork PeakServe H5 Continuous Hand Towel Dispenser system, demonstrating its features, benefits, and how the towels are loaded and dispensed. It highlights the high capacity, smooth dispensing, and reduced maintenance aspects of the system.


5. OPERATING INSTRUCTIONS

Once the dispenser is loaded, simply pull a single towel from the bottom opening. The continuous system ensures that the next towel is always ready for use, preventing delays and improving user experience.


30% more capacity than competitor products

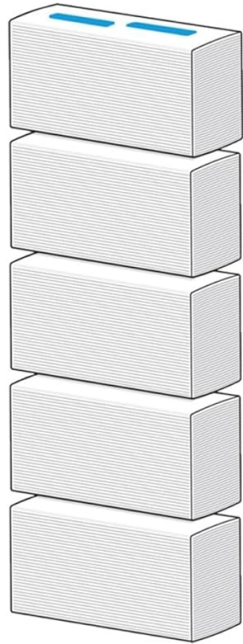

**Bundles
compressed by 50%.
Holds 2,100 towels**

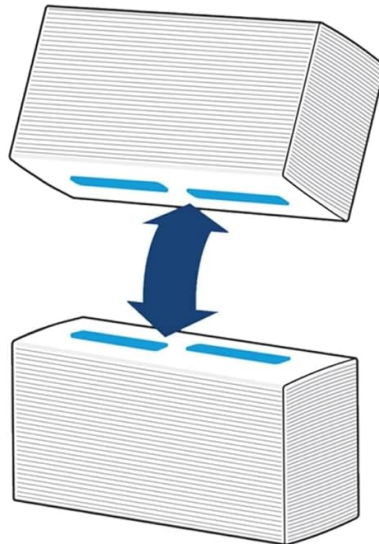

**Continuous
bundles latch
together**

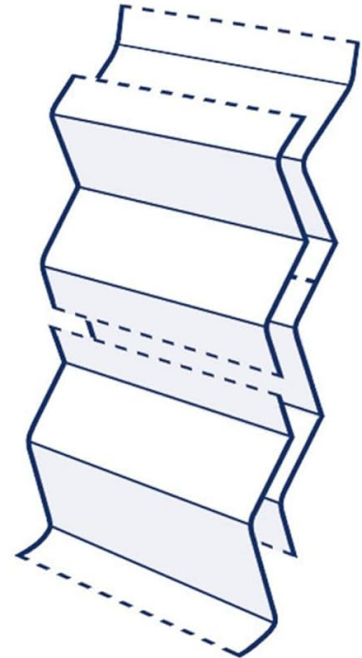

**One towel at a time
dispensing reduces
over consumption**

Figure 4: User experience with Tork PeakServe. This image shows individuals efficiently using Tork PeakServe dispensers in a public restroom, emphasizing the quick and quiet dispensing action that contributes to a better flow in high-traffic areas.

6. HYGIENE BENEFITS

Using paper towels for hand drying is a hygienic choice, especially in public or high-traffic environments. Studies indicate that paper towels are more effective at removing bacteria than jet air dryers, which can spread germs.

3 seconds quicker than jet air dryers



Quiet dispensing

Figure 5: Hand hygiene comparison. This image highlights the hygienic advantages of using paper towels over jet air dryers, noting that paper towels are a more hygienic way to dry hands and that jet air dryers can spread up to 10 times more germs.

7. MAINTENANCE

Due to the high capacity of Tork PeakServe towels, refilling is required less frequently. Monitor the dispenser's transparent window (if applicable to your H5 model) to check towel levels. Refill as needed following the setup instructions.

8. TROUBLESHOOTING

- **Towel not dispensing:** Check if the dispenser is empty. If not, gently pull on the exposed towel to ensure it is not caught. If a jam occurs, open the dispenser and re-seat the towel bundles.
- **Towel tearing:** Ensure the towels are loaded correctly and that the dispenser mechanism is clean and free of debris.

9. PRODUCT SPECIFICATIONS

Specification	Detail
---------------	--------

Product Dimensions	16 x 10 x 8 inches
Item Model Number	105065
Manufacturer	Essity
Unit Count	4920.0 Count
Sheet Count	4920
Ply Rating	1-Ply
Special Feature	Dispenser Friendly
Manufacturing Origin	Made in USA* (*from Domestic and Imported Material)



Figure 6: Manufacturing Origin. This image indicates that the product is 'Made in USA' from domestic and imported materials.

10. ENVIRONMENTAL INFORMATION

The Tork PeakServe Continuous Hand Towels are committed to environmental responsibility:

- Made from 100% recycled fiber.
- Meets EPA guidelines for post-consumer recycled fiber content.
- Certified by trusted organizations including FSC, Ecologo, Green Seal, and Composter Approved.

Meets or exceeds environmental standards

Certified by trusted organizations



- This product is made from 100% recycled fiber
- Meets EPA guidelines for post-consumer recycled fiber content

Figure 7: Environmental Certifications. This image displays the various environmental certifications achieved by Tork PeakServe products, such as FSC, Ecologo, Green Seal, and Composter Approved, indicating their adherence to sustainability standards.

11. IMPORTANT LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

12. WARRANTY AND SUPPORT

For product support, inquiries, or warranty information, please contact Tork customer service or visit the official Tork website. Refer to your purchase documentation for specific warranty details.

