

[Manuals.plus](#) /

› [Faber](#) /

› Faber Touchless Automatic Sanitizer Dispenser 1 Liter, Stainless Steel (SS) User Manual

Faber AUTOMATIC SANITIZER DISPENSER 1L SS

Faber Touchless Automatic Sanitizer Dispenser 1 Liter, Stainless Steel (SS)

Model: AUTOMATIC SANITIZER DISPENSER 1L SS

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Faber Touchless Automatic Sanitizer Dispenser. Please read these instructions carefully before installation and use, and retain them for future reference. This dispenser is designed for use with alcohol-based liquid sanitizers only.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Faber Touchless Automatic Sanitizer Dispenser
- 1.5 Meter Power Cord (3-pin)
- User Manual (this document)
- Warranty Card
- Screw Bag for Wall Mounting

PRODUCT OVERVIEW



Figure 1: Front view of the Faber Touchless Automatic Sanitizer Dispenser.

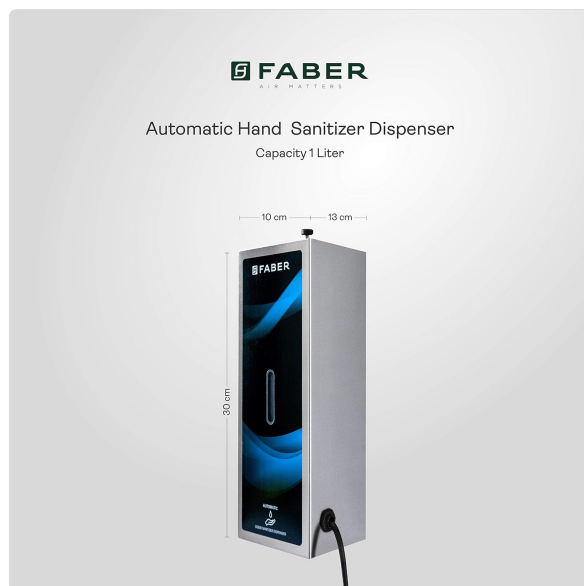


Figure 2: Dispenser dimensions: 30 cm height, 10 cm width, 13 cm depth.



Figure 3: The dispenser features smart sensor technology for touchless operation, activating when a hand is placed beneath it.



Figure 4: Key features include a durable stainless steel body, automatic dispensing mechanism, 1-liter capacity, and wall-mount design.



Figure 5: The dispenser is constructed from high-quality Stainless Steel (SS 430) for durability and hygiene.



Figure 6: Rear view illustrating the designated points for secure wall mounting.



Figure 7: This product is manufactured in India.

SPECIFICATIONS

Feature	Specification
Model Number	AUTOMATIC SANITIZER DISPENSER 1L SS
Manufacturer Part Number	131.0630.297
Material	Stainless Steel (SS 430)
Color	Stainless Steel
Product Dimensions (L x W x H)	31L x 13.4W x 10.3H Centimeters
Liquid Volume Capacity	1 Liter
Operating Voltage	AC 230V
Power Cord Length	1.5 Meters
Installation Type	Wall Mounted
Item Weight	1000 Grams

SETUP AND INSTALLATION

- Choose Location:** Select a suitable wall location for mounting, ensuring it is within reach of a power outlet.
- Mounting:** Use the provided screw bag to securely mount the dispenser to the wall. Refer to Figure 6 for mounting points on the back of the unit.
- Fill Dispenser:** Open the top cover of the dispenser. Carefully pour **alcohol-based liquid sanitizer only** into the reservoir. Do not overfill. Close the cover securely.
- Connect Power:** Plug the 1.5-meter power cord into a standard AC 230V power outlet. The dispenser is designed for 'Plug & Play' operation.

5. **Initial Test:** Place your hand under the sensor to ensure the dispenser is powered on and dispenses sanitizer correctly.

OPERATING INSTRUCTIONS

The Faber Touchless Automatic Sanitizer Dispenser utilizes smart sensor technology for hygienic operation.

1. Ensure the dispenser is filled with alcohol-based liquid sanitizer and connected to a power source.
2. Place your hand flat and directly under the dispensing nozzle, within the sensor's detection range (refer to Figure 3).
3. The sensor will detect your hand and automatically dispense a measured amount of sanitizer.
4. Remove your hand once sanitizer is dispensed.

Important: This dispenser is designed for liquid sanitizer. Do not use gel sanitizers, soaps, or other viscous liquids, as this may cause malfunction.

MAINTENANCE

- **Cleaning:** Wipe the exterior stainless steel body with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Refilling:** When the sanitizer level is low, refill the reservoir with alcohol-based liquid sanitizer as described in the Setup section.
- **Sensor Care:** Keep the sensor area clean and free from obstructions to ensure proper operation.
- **Storage:** If storing the dispenser for an extended period, empty the reservoir and clean the unit thoroughly. Disconnect from power.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser does not activate	No power; Sensor obstructed; Sanitizer level too low	Check power cord connection; Ensure sensor is clean and clear; Refill sanitizer reservoir.
Sanitizer flows continuously	Sensor continuously triggered; Internal blockage	Ensure no objects are near the sensor; Clean the sensor area; If problem persists, contact customer support.
Sanitizer is not dispensed, but power is on	Reservoir empty; Wrong type of liquid; Dispensing nozzle blocked	Refill with alcohol-based liquid sanitizer; Ensure only liquid sanitizer is used; Check and clear any blockage in the nozzle.
Dispensing amount is too small/large	Sensor sensitivity issue (not user adjustable)	Ensure hand is placed consistently under the sensor; If issue persists, contact customer support.

WARRANTY AND SUPPORT

This Faber Touchless Automatic Sanitizer Dispenser comes with a **1-year comprehensive warranty** on the product from the date of purchase.

For warranty claims, technical assistance, or any product-related inquiries, please contact Faber Customer Support:

Customer Service Helpline: 1800-209-3484

Please have your model number (AUTOMATIC SANITIZER DISPENSER 1L SS) and proof of purchase ready when contacting support.