

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [GUY-TECH](#) /

> GUY-TECH AC Adapter for RENPHO RF-ALM072 Leg Massager Instruction Manual

**GUY-TECH 6ad30377-71ce-44f5-b330-c1797bbac53d**

# GUY-TECH AC Adapter Instruction Manual


Model: 6ad30377-71ce-44f5-b330-c1797bbac53d

## 1. INTRODUCTION

This manual provides instructions for the safe and effective use of your GUY-TECH AC Adapter. This adapter is designed as a compatible replacement power supply for the RENPHO RF-ALM072 Air Compression Leg Foot Massager. Please read this manual thoroughly before use and retain it for future reference.

## 2. PRODUCT FEATURES

- **Compatible Replacement:** Specifically designed for the RENPHO RF-ALM072 Air Compression Leg Foot Massager.
- **Cable Length:** Features a 5-foot (approximately 1.5 meters) power cord for flexible placement.
- **LED Indicator:** Includes an LED light to indicate power status.
- **Durable Design:** Constructed for reliable and long-lasting performance.

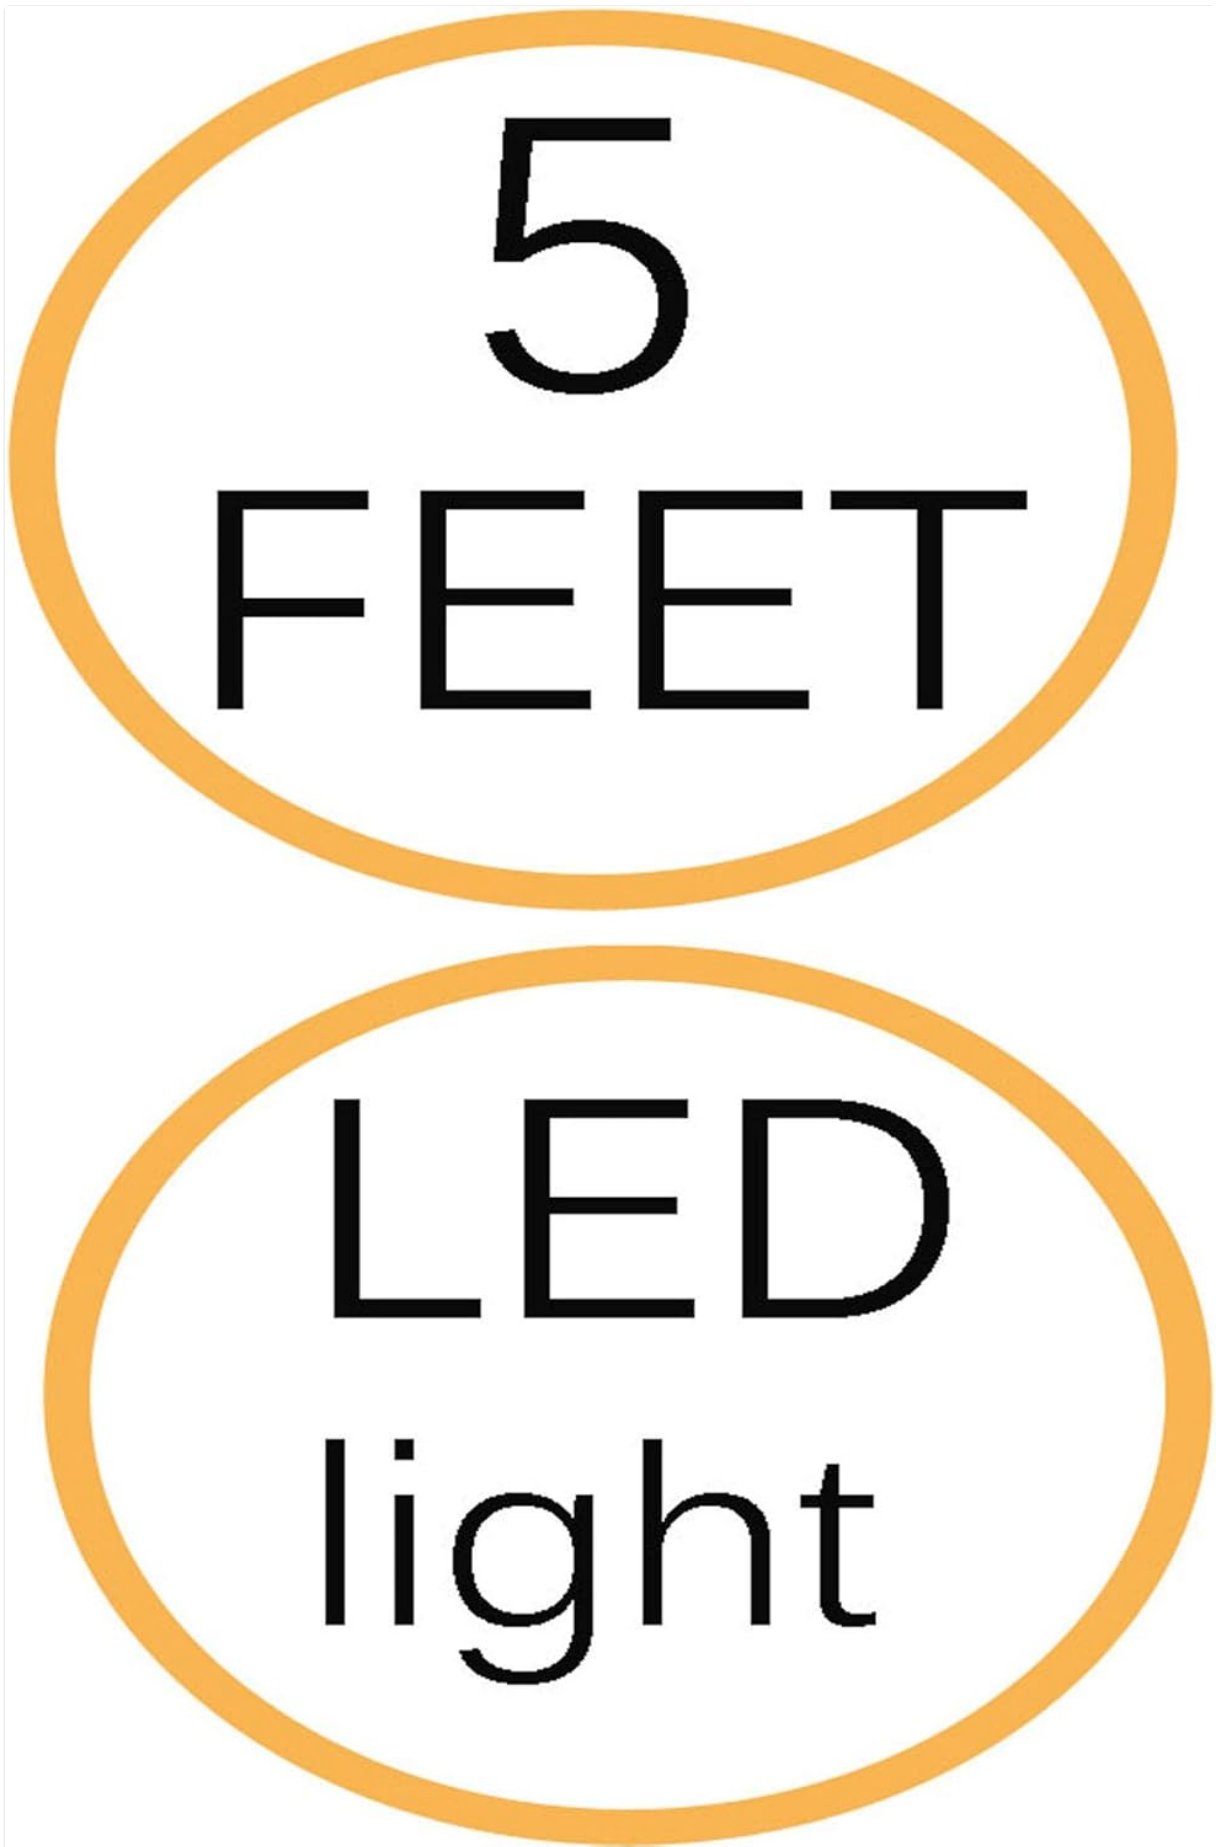

*Figure 1: Key features of the AC adapter, highlighting its 5-foot length and LED indicator.*

### **3. SETUP INSTRUCTIONS**

1. **Verify Compatibility:** Ensure your device is the RENPHO RF-ALM072 Air Compression Leg Foot

Massager. This adapter is designed for this specific model.

2. **Connect to Device:** Insert the barrel connector end of the AC adapter cable firmly into the power input port of your RENPHO RF-ALM072 Leg Massager.
3. **Connect to Power Outlet:** Plug the AC adapter's wall plug into a standard electrical outlet.
4. **Power Indicator:** Observe the LED indicator on the adapter. A lit LED indicates that the adapter is receiving power and is ready for use.

*Important: Use only with compatible devices. Using an incompatible power supply may damage your device or the adapter.*

## 4. OPERATING THE AC ADAPTER

Once properly connected, the AC adapter provides continuous power to your RENPHO RF-ALM072 Leg Massager. The operation of the massager itself is controlled by its own interface, not the adapter.

- **Power On:** After connecting the adapter to both the massager and a power outlet, the massager should be ready to power on using its own controls.
- **LED Status:** The LED indicator on the adapter will remain lit as long as it is connected to a live power outlet and functioning correctly.

## 5. CARE AND MAINTENANCE

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly to prevent damage.
- **Handling:** Do not expose the adapter to water, excessive heat, or direct sunlight. Avoid dropping or subjecting it to strong impacts.
- **Cable Integrity:** Regularly inspect the cable for any signs of damage, such as fraying or exposed wires. If damage is found, discontinue use immediately and replace the adapter.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Adapter LED is off, device not powering on.	No power from outlet, loose connection, or faulty adapter.	Check if the power outlet is working by plugging in another device. Ensure the adapter is fully plugged into both the outlet and the device. Inspect the cable for damage. If damaged, replace the adapter.
Device powers on intermittently.	Loose connection or internal adapter issue.	Ensure all connections are secure. Try a different power outlet. If the issue persists, the adapter may be faulty and require replacement.

Problem	Possible Cause	Solution
Adapter feels unusually hot.	Overload or internal malfunction.	Immediately unplug the adapter from the wall and the device. Ensure the adapter is used with the specified compatible device only. Do not use if it continues to overheat. Contact support for a replacement.

## 7. SPECIFICATIONS

---

- **Model Number:** 6ad30377-71ce-44f5-b330-c1797bbac53d
- **Brand:** GUY-TECH
- **Compatibility:** RENPHO RF-ALM072 Air Compression Leg Foot Massager
- **Cable Length:** 5 Feet (approximately 1.5 meters)
- **Connector Type:** Barrel Connector
- **Input Voltage:** 240 Volts
- **Color:** Black
- **Features:** LED Indicator

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

For inquiries related to this GUY-TECH product, please contact:

- **Manufacturer:** Guy-Tech
- **Seller:** GreatPowerDirect
- Refer to your purchase platform (e.g., Amazon) for seller contact details.