



[Manuals.plus](#) /

> [Carepod](#) /

> Carepod One Stainless Steel Humidifier Instruction Manual (Model MS031S2)

Carepod MS031S2

Carepod One Stainless Steel Humidifier Instruction Manual

MODEL: MS031S2

INTRODUCTION

Thank you for choosing the Carepod One Stainless Steel Humidifier. This ultrasonic cool mist humidifier is designed to provide healthier, hydrated air for your home, offering relief from dry skin, allergies, and improving sleep quality. Its unique 3-piece design with a stainless steel tank ensures quick and easy cleaning, promoting a hygienic environment. This manual provides essential information for the safe and effective use of your Carepod One humidifier.

SAFETY INFORMATION

- **Placement:** Place the humidifier on an elevated, flat, and stable surface, at least 2 feet off the floor and 3 feet away from beds for proper mist circulation.
- **Water Type:** Use distilled or filtered water to ensure optimal performance and longevity, and to prevent mineral buildup.
- **Water Level:** Always fill the water tank to the MAX line to prevent damage and maintain proper function.
- **Water Replacement:** Replace water every 48 hours to keep it fresh and clean.
- **Electrical Safety:** Keep the wand's electric plug away from water. Do not leave the wand in water when the tank is empty.
- **Moisture-Sensitive Items:** Keep the humidifier away from wood, electronics, and artwork to prevent moisture damage.
- **Foreign Substances:** Do not add essential oils or chemicals directly into the water tank or wand, as this can cause damage.
- **Automatic Operation:** The humidifier features an auto shut-off and water level recognition for worry-free use, preventing dry run damage.
- **Residual Water:** A few inches of water will remain after auto shut-off to protect the floating wand; this

is normal.

- **Certifications:** Carepod is RoHS-certified and toxin-free, ensuring a safer environment.

PRODUCT OVERVIEW

The Carepod One is designed for simplicity and hygiene. It arrives pre-assembled for your convenience. Familiarize yourself with its main components:



Image: Labeled diagram of Carepod One components including the main body, stainless steel water tank, inner lid cover, white wand, orange silicone seal, and white center knob.

Included Components:

- Carepod Main Unit
- Stainless Steel Pot
- Stainless Steel Inner Lid
- Stainless Steel Oscillator (White Wand)
- Power Cable

SETUP

Follow these steps to assemble your Carepod One humidifier:



Image: Visual guide demonstrating the six steps to assemble the Carepod One humidifier.

1. Lay out all six parts: the main Carepod body, stainless steel water tank, inner lid, inner lid cover, white wand, and orange silicone seal.
2. Push the orange silicone seal firmly into the inner lid.
3. Attach the white wand into the inner lid. Lift it slightly so the wand is parallel to the lid.
4. Attach the inner lid cover into the inner lid.
5. Place the water tank inside the main body. Align the lip of the tank with the lip of the main body.
6. Lastly, plug the wand into the inner lid.

Video Guide: How to Reassemble Carepod One

Video: A step-by-step visual guide on how to reassemble the Carepod One humidifier after cleaning or initial setup.

OPERATING INSTRUCTIONS

The Carepod One features intuitive controls for easy operation:

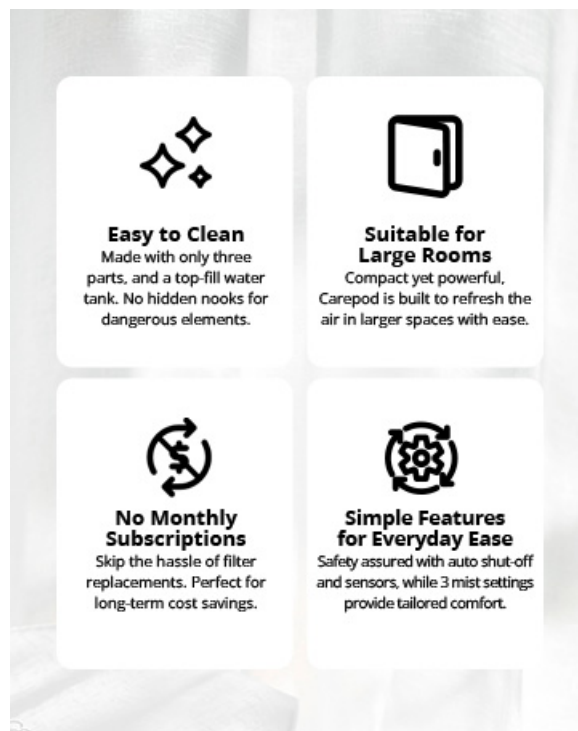


Image: Close-up of the Carepod One's control panel with touch buttons for Mist, Power/Water, and Timer.

- **Power/Water Button:** Press to turn the humidifier on or off. The LED light indicates the current water level. A green light means power is ready.
- **Mist Settings:** Customize your humidity levels with 3 mist speed levels: 100ml/h, 250ml/h, and 300ml/h. The humidifier also features an auto-level function that detects ambient humidity and adjusts mist output accordingly.
- **Timer Settings:** Set the humidifier to operate for 4, 6, or 8 hours.
- **Auto Shut-off:** The unit automatically turns off when the water level is low to prevent damage.

Usage Guidelines: Do's and Don'ts

How to Assemble






- 1 Lay out all six parts: the main Carepod body, stainless steel water tank, inner lid cover, white wand, silicone seal and white center knob.
- 2 Push in the silicone seal. This will look like an orange ring. Gently press it into the inner lid. 
- 3 Attach the wand into the inner lid. Lift it slightly so the wand is parallel to the lid. 
- 4 Attach the inner lid cover into the inner lid. 
- 5 Place the water tank inside the main body. Align the lip of the tank with the lip of the main body. 
- 6 Lastly, plug the wand into the inner lid. 

Image: A visual summary of recommended practices and actions to avoid when using the Carepod One humidifier.

MAINTENANCE AND CLEANING

The Carepod One is designed for effortless cleaning, thanks to its minimal parts and stainless steel construction.

Only 3 parts to clean.

Made with sterilizable **stainless steel** for 99.9% germ-free cleaning.



Image: Visual guide showing the three simple steps to clean the Carepod One humidifier: disassemble, clean by boiling or dishwasher, and reassemble.

1. **Disassemble:** Gently lift the lid. Remove the white wand, the inner lid cover, and the stainless steel water tank.
2. **Clean:** The stainless steel water tank and inner lid cover can be boiled over low heat for 1-2 minutes for sterilization, or placed in a dishwasher. Hand-wash the bottom half of the white wand.
3. **Reassemble:** Follow the setup instructions in reverse order. Ensure all parts are dry before reassembly.

Video Guide: How to Clean Your Carepod One

Video: A detailed video demonstrating the process of cleaning and sterilizing the Carepod One humidifier.

TROUBLESHOOTING

If you encounter any issues with your Carepod One humidifier, please refer to the following common solutions:

- **No Mist:** Ensure the water tank is filled above the minimum level and the wand is properly plugged into the inner lid. Check that the power cable is securely connected.
- **Unusual Odor:** Clean all removable parts thoroughly, especially the stainless steel tank, to eliminate any potential bacterial growth or mineral buildup. Use distilled water.
- **Excessive Moisture Around Unit:** Ensure the mist setting is appropriate for your room size and humidity level. Avoid placing the unit too close to walls or furniture.
- **Unit Not Turning On:** Verify the power cable is correctly plugged into both the unit and a working power outlet.

SPECIFICATIONS

Feature	Detail
Brand	Carepod
Model Name	Carepod One MS031S2

Special Features	Adjustable Humidity Control, Auto Shut Off, Easy Clean, Quiet, Removable Stainless Steel Water Tank
Color	White
Floor Area Coverage	Up to 500 sq. ft. (92 Square Inches product footprint)
Operation Mode	Automatic
Product Dimensions	10.14"D x 10.72"W x 9.2"H
Item Weight	8 Pounds
Room Type	Bedroom, Kids Room, Living Room, Nursery, Office
Voltage	120 Volts (AC)
Wattage	29 watts
Capacity	4000 Milliliters (1 Gallon)
Continuous Mist Duration	Up to 30 hours (at Level 1 mist setting)

WARRANTY AND SUPPORT

The Carepod One Stainless Steel Humidifier comes with a manufacturer's warranty. For detailed warranty information, product support, or to contact customer service, please refer to the documentation included in your product packaging or visit the official Carepod website. Ensure you retain your proof of purchase for warranty claims.