

VETEK A01

VETEK 1080p 30MP Infrared Night Vision Video Camera User Manual

Model: A01

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. PRODUCT OVERVIEW

The VETEK Model A01 Video Camera is a versatile recording device designed for capturing high-quality video and still images. It features 1080p video recording at 30 frames per second, a 30MP image sensor, and an 18x digital zoom. Equipped with infrared night vision, a 3-inch rotatable touch screen, and a remote control, this camcorder is suitable for various recording scenarios, from vlogging to capturing family events.

Key functionalities include PC webcam mode, HDMI output, video pause, time-lapse, slow motion, continuous shooting, and a self-timer. The camera comes with essential accessories such as an external microphone, a mini tripod, two rechargeable batteries, a 32GB SD card, and a charging cable.



Figure 1.1: VETEK Model A01 Video Camera with included accessories. This image displays the camcorder, external microphone, remote control, mini tripod, two batteries, and a 32GB SD card.

2. SETUP GUIDE

2.1. Package Contents

Before beginning, please verify that all items are present in the package:

- VETEK Model A01 Video Camera
- External Microphone
- Mini Tripod
- Remote Control
- 32GB SD Card
- 2 x Lithium-ion Batteries (D type)
- USB Charging Cable

- Power Adapter
- User Manual (this document)

WHAT'S INCLUDED



Camera, Mic , Mini Tripod , Remote Control , SD Card,
2 Batteries , Charging Cable, Adapter

Figure 2.1: All components included in the VETEK Model A01 package. This image shows the camera, microphone, mini tripod, remote control, SD card, two batteries, charging cable, and adapter.

2.2. Battery Installation and Charging

1. Locate the battery compartment on the camera, typically on the bottom or side.
2. Open the battery compartment cover.
3. Insert the two provided Lithium-ion batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.
5. To charge the batteries, connect the USB charging cable to the camera's USB port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator light will illuminate.
6. Allow sufficient time for a full charge before first use.

2.3. SD Card Installation

The camera supports SD cards up to 256GB. A 32GB SD card is included.

1. Locate the SD card slot, usually on the side of the camera.
2. Insert the 32GB SD card into the slot with the metal contacts facing the correct direction (refer to the diagram near the slot if available).
3. Gently push the card until it clicks into place. To remove, push again until it springs out.

2.4. Microphone Attachment

The external microphone enhances audio quality.

1. Locate the hot shoe mount on top of the camera.
2. Slide the external microphone onto the hot shoe mount until it locks securely.
3. Connect the microphone's audio cable to the camera's external microphone input jack (usually a 3.5mm port).

Microphone with X-Y Stereo Pickup Technology

effectively reduce noise and improve sound quality



Figure 2.2: The external microphone with X-Y Stereo Pickup Technology. This microphone is designed to effectively reduce noise and

improve sound quality during recording.

2.5. Mini Tripod Attachment

The mini tripod provides stability for steady shots.

1. Locate the tripod screw mount on the bottom of the camera.
2. Screw the mini tripod onto the mount until it is firmly attached.


3. OPERATING INSTRUCTIONS

3.1. Powering On/Off

- To power on, open the LCD screen. The camera will automatically turn on.
- To power off, close the LCD screen or press and hold the power button.

3.2. Basic Recording Functions

The camera supports various recording modes and features:



1080P Resolution



Slow Motion



30MP Picture Pixels



Pc Cam



Time Lapse



Rotatable Touch Screen



Self-timer



Video Pause



Continuous Shooting

Figure 3.1: Overview of key features including 1080p resolution, slow motion, 30MP picture pixels, PC Cam mode, time lapse, rotatable touch screen, self-timer, video pause, and continuous shooting.

- **Video Recording:**

- Press the **Record** button to start/stop video recording.
- Supported resolutions: 4K (3840x2160 at 60/30FPS), 2.7K (2688x1520 at 30FPS), FHD (1920x1080 at 60/30FPS), HD (1280x720 at 120/60/30FPS).
- Video format: MP4.

- **Still Image Capture:**

- Press the **Photo** button to take a still image.
- Supported resolutions: 3M, 5M, 8M, 12M, 20M, 24M, 30M, 48M.
- Image format: JPG.
- **Digital Zoom:** Use the zoom controls (usually W/T buttons) to adjust the 18x digital zoom.
- **Rotatable Touch Screen:** The 3-inch LCD screen can be rotated 270 degrees for flexible viewing angles, including self-recording. Navigate menus and settings using the touch interface.

3.3. Advanced Features

- **Infrared Night Vision:** Activate IR night vision for clear black and white photos or videos in low-light or dark environments.



IR NIGHT VISION

Give vivid black and white photos or videos in the dark

Figure 3.2: Example of IR Night Vision in action, providing clear black and white images in dark conditions.

- **Remote Control:** The included 2.4G remote control allows for convenient operation from a distance of up to 10 meters (32.8 feet), ideal for selfies or group shots.

2.4G Remote Control



360° control



32.8ft sensing distance



- Note: When in PC Cam mode, the camera is in standby and can only be controlled via the computer or mobile phone.*

4. MAINTENANCE

4.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and lens cleaning solution. Avoid touching the lens directly with your fingers.
- Do not use harsh chemicals or abrasive cleaners.

4.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- If the camera will not be used for an extended period, remove the batteries.

4.3. SD Card Handling

- Always format the SD card in the camera before first use or after transferring files to a computer.
- Do not remove the SD card while the camera is powered on or recording to prevent data corruption.

4.4. Storage

Store the camera in a dry, dust-free environment, away from extreme temperatures and direct sunlight. Use a protective case if available.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Batteries are dead or incorrectly inserted.	Ensure batteries are fully charged and inserted with correct polarity.
Cannot record video/take photos.	SD card is full, not inserted, or corrupted.	Check SD card insertion. Delete unnecessary files or format the card (backup data first). Replace SD card if corrupted.
Poor video/image quality.	Lens is dirty; insufficient lighting; incorrect settings.	Clean the lens. Ensure adequate lighting or use IR night vision in dark conditions. Adjust resolution settings.
Remote control not working.	Remote battery is dead; out of range; obstruction.	Replace remote battery. Ensure you are within 10m range and there are no obstructions between remote and camera.
Camera not recognized as webcam on PC.	Incorrect USB mode; driver issue.	Ensure camera is in PC Cam mode. Try a different USB port or cable. Check computer's device manager for driver issues.

6. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	VETEK
Model Number	A01

Feature	Detail
Color	White
Video Resolution	4K (3840x2160), 2.7K (2688x1520), FHD (1920x1080), HD (1280x720)
Image Resolution	Up to 48MP
Digital Zoom	18x
Screen	3-inch Rotatable Touch LCD
Lens	Fixed lens F/3.2, F = 7.36mm
Focus Range	Normal: 2m ~ infinity; Auto: 0.328 FT ~ infinity
Memory Support	SD Card (up to 256GB, 32GB included)
Connectivity	USB, HDMI Output
Battery Type	Lithium-ion (2 included)
Dimensions (L x W x H)	12.7 x 5.6 x 6.4 cm (5 x 2.2 x 2.5 inches)
Weight	640 grams
Special Features	Infrared Night Vision, Remote Control, PC Cam Function, Video Pause, Time Lapse, Slow Motion, Continuous Shooting, Self-timer, Hot Shoe, External Microphone Input.

7. WARRANTY AND SUPPORT

7.1. Warranty Information



Specific warranty details for the VETEK Model A01 camera are not provided in this manual. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty terms and conditions. Keep your purchase receipt as proof of purchase.

7.2. Customer Support

For technical assistance, troubleshooting beyond this guide, or inquiries regarding your VETEK product, please contact VETEK customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

When contacting support, please have your product model number (A01) and purchase details ready.

Related Documents

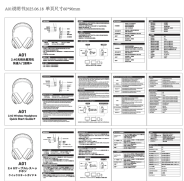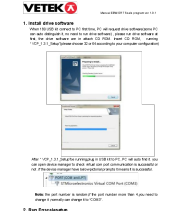	A01 2.4G Wireless Headphone Quick Start Guide This guide provides instructions for setting up and using the A01 2.4G Wireless Headphone, including Bluetooth and 2.4G modes, controls, LED indicators, and specifications.
	VETEK AN310 Panel Mount Indicator: Features, Specifications, and Applications Explore the VETEK AN310, a 3.46-inch color IPS touch screen panel mount indicator designed for industrial environments. Learn about its advanced features, technical specifications, diverse applications, part numbers, and dimensions.
	OCS-Y2 Dynamometer User's Guide - Accurate Force Measurement Comprehensive user guide for the OCS-Y2 Dynamometer, detailing its features, specifications, operation, and maintenance. Learn how to use this accurate and reliable force measurement device.
	VETEK EBW-ERT Scale Program Manual: Installation and Operation Guide Comprehensive guide to installing and operating the VETEK EBW-ERT Scale program (version 1.3.1). Learn how to connect the scale, install drivers, and use the data collection and analysis software for weighing operations.

Documents - VETEK – A01




[\[pdf\]](#) User Manual

3 KERN Gottl Kern Sohn GmbH Instruction Manual Sound Level Meter SW ENG vetek se Dynamics Documents e5655ea8 4217 44dd adf0 92baf132abca

Sauter GmbH Ziegelei 1 D-72336 Balingen E-mail: info sauter.eu Telephone: 49- 0 7433-9933-199 Fax: ... cal relative to the microphone membrane 1.7 Main components Name Microphone Manufacturer Type SW-**A01** SW-A02 Description class 1 microphone class 2 microphone 1.8 List of parts No. Type 1 SW 10...

lang:en score:28 filesize: 3.4 M page_count: 52 document date: 2018-01-09

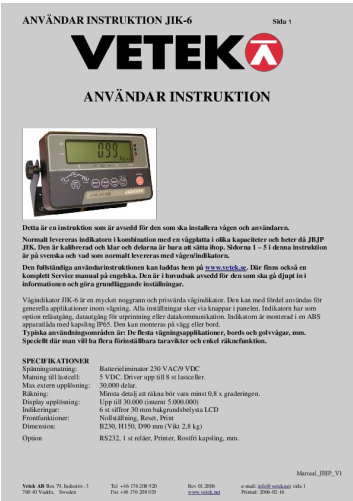

[\[pdf\]](#) User Manual Declaration of Conformity


Microsoft Word ANVÄNDAR INSTRUKTION JIK 6 doc Olle Viktorsson Download Floor scale 60kg 5g

300x400 with pillar Vetek manual jbjp v1 swe vetek en dynamics WebFiles image 99db9d84 f483 4e7c

a555 9bc07c85da98 |||

ANVNDAR INSTRUKTION JIK-6 Sida 1 ANVNDAR INSTRUKTION Detta r en instruktion som r avsedd fr den s ... splay will show ACC 1 , and also the weight of the object. At the same time, you can see the sign **A01** on the operation message display. 3 . Remove the first object and place the next object on the...

lang:no **score:26** filesize: 2.3 M page_count: 50 document date: 2019-05-15

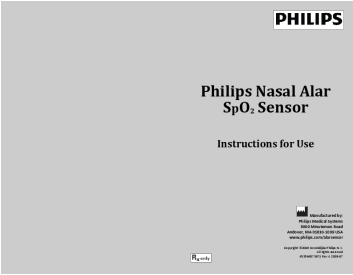

[\[pdf\]](#) Instructions

Instruction for Use Nasal Alar FAST SpO₂ Sensor Pulse Oximetry supplies Philips

deffdc2a7e43472a8b94b0b401324de3 documents philips assets 20231108 |||

Philips Nasal Alar SpO₂ Sensor Instructions for Use Manufactured by: Philips Medical Systems 3000 Mi ... blev valideret med Nellcor N-600x, N-595 og N-395, GE Dash 3000, Philips IntelliVue Module Option **A01**, A02 og A04 samt Datascope Passport 2 pulsoximetre i en kontrolleret desaturationsundersgelse: ...

lang:da **score:20** filesize: 2.31 M page_count: 30 document date: 2020-03-25

Service Manual Indicator JIK-6		Page 1
Chapter I Basic Introduction		
1-1 Dimension	1	1
1-2 Cross-reference List of Parts	1	1
1-3 Product Specification Sheet	1	2
Chapter II Parameter Function Setting		
2-1 General Parameter Setting	3	
2-2 Advanced Parameter Setting	5	
2-3 Weighing Capacity, Tare and Weight Setting and Weight Calibration	7	
Chapter III Various Assemblies and Relevant Illustrations		
3-1 Back Case Assembly and Disassembly	9	
3-2 Installation of Additional Board	10	
3-3 Wiring Cross-reference Chart	11	
3-4 Illustration of Contents of Additional Board	12	
Chapter IV Troubleshooting		
4-1 Preliminary Examination	13	
4-2 Error Message and Troubleshooting	13	
4-3 Summary Table of Error Message	16	
Chapter V Structural Part of Platform Scale		
5-1 Connection of Metal Connector	17	
5-2 LAC Replacement Process	17	
5-3 LAC-related Technology	19	
Chapter VI Exploded Drawing and Cross-reference List of Parts		
6-1 JIK-6-CAB	20	
6-2 JIK-6-CSB	21	
6-3 JIK-6-CSN	22	
Vetek AB Sveavägen 11, 191 75 Vidsjö - Sweden Tel: +46 (0) 208 12 00, 40 00 00 00, 40 00 00 00 Service_Manual_JIK-6_V1		

[\[pdf\]](#) User Manual Troubleshooting Guide Specifications

Olle Viktorsson Vetek AB Service Manual JIK 6 V1 ENG Indicator Page Köp Vågindikator CAB 30 000 ext

delar OIML från här Hantverkswägen 15 76493 Väddö Sweden Tel 46176 208920 info@vetek vetek se

Dynamics Documents 9a8bf271 0aed 47a3 839b 24c6a44d8925 |||


Service Manual Indicator JIK-6 Page 1 Chapter I Basic Introduction 1-1 Dimension-----

----- ... ero point range shall be calculated in percentage of max. Weighing value.

Range of Use of Zero Key **A01** Overview: The zero key range can be improved.

Return to Zero Symbol- A02 Display Range : ...

lang:en **score:19** filesize: 1.46 M page_count: 25 document date: 2019-11-13

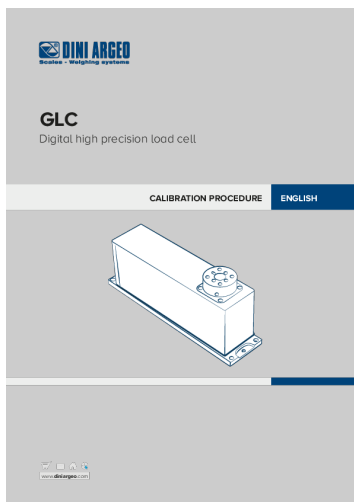


[\[pdf\]](#) User Manual Installation Guide Specifications

Download Digital load cell 620g High precision IP65 Vetek Calibration Manual GLC V1 ENG vetek en dynamics webfiles document 71661180 20dc 4e9b 9d9e a5efed40c465 |||

GLC Digital high precision load cell CALIBRATION PROCEDURE ENGLISH

www.diniargeo.com Connection ca ... Stop bit = 2 bits. Calibration commands and response Command C0 CR LF C3 CR LF Description **A01** Lock calibration. A02 A00 E01 E02 Begin calibration procedure. E03 E04 - 24 V Respon...

lang:en **score:19** filesize: 640.32 K page_count: 2 document date: 2019-07-24

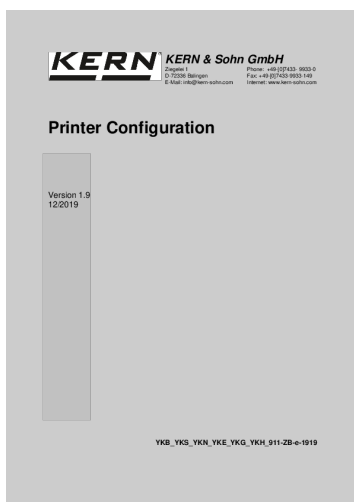


[\[pdf\]](#) User Manual Label

Übersicht KERN Druckerkonfiguration 11 m westheiden ks Download Label printer for printing weights on thermal labels ASCII capable Vetek Manual YKE 01 ENG vetek en dynamics webfiles document dd556cfd a465 4876 a5fa 2fd0e7e8c27f |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 ... - - 474-926 1 2 3 4 5 on x x x - - 770-926 - - ABS-A05 1 2 3 4 5 on x x x - - ACS-**A01** 1 2 3 4 5 on x x x - - MLB-A05 1 2 3 4 5 on x x x - - MLB-A05 1 2 3 4 5 YKB_YK...

lang:en **score:19** filesize: 1.46 M page_count: 55 document date: 2020-01-02

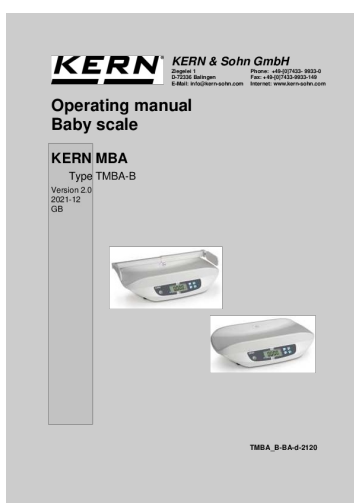

[\[pdf\]](#) User Manual

8 KERN Gottl Kern Sohn GmbH Download Baby scale MBA 15kg 5g Verified M Vetek Manual V1 ENG vetek en dynamics webfiles document 63853d03 8b05 4a86 bc73 81f7e9769b33 |||

KERN Sohn GmbH Ziegelei 1 Phone: 49- 0 7433- 9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-14 ... 33 Using the optional equipment height measuring rod MBA-**A01**..... 34 Using the optional equipment WIFI interface YMI-**A01** ...

lang:af **score:18** filesize: 1.54 M page_count: 46 document date: 2021-12-08




[\[pdf\]](#) User Manual Instructions Declaration of Conformity Warranty

7 KERN ks Download Digital platform Kern KDP 3500g 0 01g Vetek Manual ENG vetek en dynamics webfiles document e7695220 68a7 4a66 b753 48e68c69d4ff |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 ... 35 C 80 relative not condensing USB USB-Host/Master Standard WLAN factory option; KERN KDP-**A01** Ethernet factory option; KERN KDP-A02 Bluetooth 4.0 factory option; KERN KDP-A03 3 KDP-BA...

lang:en **score:18** filesize: 369.45 K page_count: 18 document date: 2018-02-20

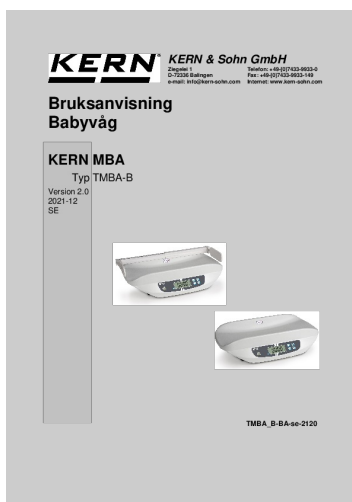

[\[pdf\]](#) User Manual

5 KERN Gottl Kern Sohn GmbH Download Baby scale MBA 15kg 5g Verified M Vetek Manual V1 SWE vetek en dynamics webfiles document 3e9a3ae8 a8e6 436d ade2 22fe4ce4bc37 |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen e-mail: info kern-sohn.com Telefon: 49- 0 7433-9933- ... 32 Användning av tillvalsutrustning Inngdmtare MBA-**A01**.....33 Användning av tillvalsutrustning WiFi-kort YMI-A...

lang:af **score:18** filesize: 1.46 M page_count: 45 document date: 2021-12-07




[\[pdf\]](#) User Manual

4 KERN Gottl Kern Sohn GmbH Manual MBC SWE vetek se Dynamics Documents 61eec969 639f 4b4e 9e6b f67ea3130249 |||

KERN Sohn GmbH Ziegelei 1 Telefon: 49- 0 7433-9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-1 ... 127 x 55 600 x 276 4,5 MBC-A08, intern 6x1.2 V 2000mA klass III klass I, med mtningsfunktion MBC-**A01**, mtomrde 4080 cm MBC-M-BA-se-1730 4 KERN Typ Kapacitet Max Minsta last Min Skalinterva...

lang:no **score:17** filesize: 1.23 M page_count: 42 document date: 2017-03-16

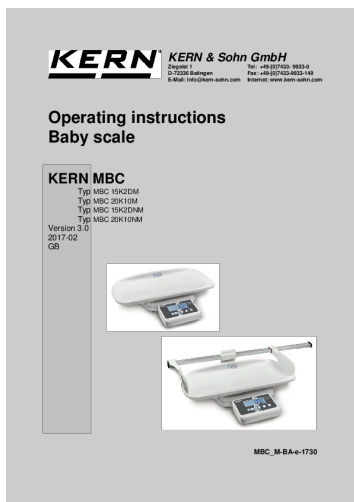

[\[pdf\]](#) User Manual Instructions

5 KERN Gottl Kern Sohn GmbH Download Baby scale MBC 20kg 10g MDD class III incl verification Vetek Manual ENG vetek en dynamics webfiles document 2c6f6e4d 6d85 454e b9bc 66d9e929276d |||

KERN Sohn GmbH Ziegelei 1 Tel: 49- 0 7433- 9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-149 ... 29 9.6 Use the optional size measurement device MBC-**A01**..... 30 10 Menu

lang:nl **score:17** filesize: 1.15 M page_count: 42 document date: 2017-03-15

Service Manual Indicator JIK-6		Page 1
Chapter I Basic Introduction		
1.1 Dimension	1	
1.2 Cross-reference List of Characters	1	
1.3 Product Specification Sheet	2	
Chapter II Parameter Function Setting		
2.1 General Parameter Setting	3	
2.2 Advanced Parameter Setting	5	
2.3 Weighing Capacity, General Weight Setting and Weight Calibration	7	
Chapter III Various Assemblies and Relevant Illustrations		
3.1 Back Cover Assembly and Disassembly	9	
3.2 Installation of Additional Board	10	
3.3 Wiring Cross-reference Chart	11	
3.4 Installation of Cables of Additional Board	12	
Chapter IV Troubleshooting		
4.1 Preliminary Examination	13	
4.2 Error Message and Troubleshooting	13	
4.3 Summary Table of Error Message	16	
Chapter V Structural Part of Platform Scale		
5.1 Connection of Metal Connectors	17	
5.2 LAC Replacement Process	17	
5.3 LAC-related Technology	18	
Chapter VI Exploded Drawing and Cross-reference List of Parts		
6.1 JIK-6-CAB	20	
6.2 JIK-6-CSN	21	
6.3 JIK-6-CSN	22	

[\[pdf\]](#) User Manual Troubleshooting Guide Specifications

Olle Viktorsson Vetek AB Service Manual Indicator JIK 6 ScalesService Page 2 Chapter I Basic

Introduction 1 3 Product Specification Sheet Case Service V1 ENGvetek Dynamics Documents 9a8bf271 0aed 47a3 839b 24c6a44d8925 ENG srsLtd

AfmBOoprZ93u9p671oaCgXjgZvBgUVqknEiqWHfCT3UtxmwF1QcPY95h |||


Service Manual Indicator JIK-6 Page 1 Chapter I Basic Introduction 1-1 Dimension-----

..... ... ero point range shall be calculated in percentage of max. Weighing value.

Range of Use of Zero Key **A01** Overview: The zero key range can be improved.

Return to Zero Symbol- A02 Display Range : ...

lang:en **score:17** filesize: 1.46 M page_count: 25 document date: 2019-11-13

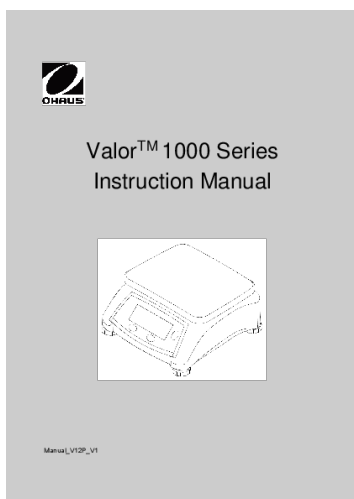

[\[pdf\]](#) User Manual

Qian YiMei Elena OHCT Download Compact scale Ohaus Valor 1000 3kg 1g Verified M Vetek Manual

V12P V1 ENG vetek en dynamics webfiles document 39d08c44 b894 484a 94ac ecd2793e145e |||

Valor™ 1000 Series Instruction Manual Manual_V12P_V1 Valor™ 1000 Series EN-1 Table of Content ... o set balance parameters. Light: Unit: Auto shut-off: End Off, On, Auto kg, g, lb, oz, lb:oz A00, **A01**, A05, A10, Off Exit menu Note: Units vary for different regions or models. Light L.I.G.H.t T...

lang:tl **score:17** filesize: 2.33 M page_count: 116 document date: 2020-01-27



[\[pdf\]](#) User Manual Dimension Guide

7 Russo Irmì Kern Sohn GmbH Gottl SAUTER TVM N Manual ENG vetek Dynamics Documents

22e1492b bc4f 4273 8372 d5086af47b91 Buy Premium motorised test stand for professional force measurements 5000N from Vetek here |||

Sauter GmbH Ziegelei 1 D-72336 Balingen E-Mail: info@sauter.eu Tel.: 49- 0 7433-9933-199 Fax: 49 ... Ventilator Power-supply AC 230V ;1,5 A Test stand cabling with connection to a Computer with FH-**A01** and AFH 14 with FH-01 and AFH 12 12 TVM-N-BA-e-1617 12 Cabling of TVM-N with a SAUTER force...

lang:en **score:17** filesize: 1.13 M page_count: 14 document date: 2016-11-07

KERN

KERN & Sohn GmbH
Ziegelei 1
D-72336 Balingen
E-Mail: info@kern-sohn.com
Internet: www.kern-sohn.com

Bruksanvisning
Multifunktionell våg

KERN MWA-M / MWA-PM
Version 1.4
04/2016
SE



MWA-M / MWA-PM-BA-se-1614

[\[pdf\]](#) User Manual

KERN Gottl Kern Sohn GmbH Download Wheelchair platform scale with ramps MWA 300kg 0 1 kg

Verification class III Vetek Manual SWE vetek en dynamics webfiles document c6d61c93 6754 49d4 9d03 148de130dd0b |||

KERN Sohn GmbH Ziegelei 1 Telefon: 49- 0 7433-9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-1 ... PM Vgen anvnds som plattformvg fr rullstolar och som vg med rcke 1. Display 2. Rcke tillval MWA-**A01** med stativ utan mjlighet att lgga till extra tillbehör MWA-A02 utan stativ 3. Ramper 4. Vattenp...

lang:no **score:16** filesize: 967.29 K page_count: 45 document date: 2016-04-11

KERN

KERN & Sohn GmbH
Ziegelei 1
D-72336 Balingen
E-Mail: info@kern-sohn.com
Internet: www.kern-sohn.com

Operating manual
Price calculating balance

KERN RFC
Type: RPB-DM
Version 1.3
2021-04
GB



RFC-BA-e-2113

[\[pdf\]](#) User Manual Dimension Guide Declaration of Conformity

31 KERN Gottl Kern Sohn GmbH Download Retail scale RPB 15kg 5g 30kg 10g Verified M Vetek Manual

RFC V2 ENG vetek en dynamics webfiles document 0c00252c 0b24 47d7 96a8 e03620a5418e |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info@kern-sohn.com Phone: 49- 0 7433- 9933-0 ... evices to be used as a checkout, the following components are required: 1. Interface cable KERN CFS-**A01** 2. Checkout manufacturer s interface cable 1. KERN CFS-**A01** 2. Checkout adapter cable To use t...

lang:en **score:16** filesize: 751.5 K page_count: 38 document date: 2021-05-06



[\[pdf\]](#) User Manual

4 hoelle Download Bench scale Kern FOB N 16kg 2g 30kg 5g Vetek Manual swe vetek en dynamics webfiles document 2788bbf1 6034 4f8d 8ca9 dc4aa26db58f |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen e-mail: info kern-sohn.com Telefon: 49- 0 7433-9933- ... gen regelbundet. 7.2.3 Leveransomfattning Serietillbehör: Vg Vgplatta Ntadapter tillval KERN FOB-**A01**, alla modeller utom FOB Ntadapter standard, endast FOB-modeller Batterier alla modeller ut...

lang:no **score:16** filesize: 1.56 M page_count: 49 document date: 2018-11-19



[\[pdf\]](#) User Manual Declaration of Conformity

10 hoelle dokutec GmbH Download Bench scale Kern FOB N 16kg 2g 30kg 5g Vetek Manual eng vetek en dynamics webfiles document ba392860 0096 4b9d aac3 c01b68099c1b |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 ... 7.2.3 Scope of delivery Serial accessories: Balance Weighing pan Mains adapter option KERN FOB-**A01**, all models except models FOB Mains adapter standard, FOB models only Battery all models e...

lang:en **score:16** filesize: 1.62 M page_count: 49 document date: 2018-11-14




[\[pdf\]](#) User Manual

3 KERN Gottl Kern Sohn GmbH Download Chair scale MCC 250kg 100g MDD approved class III Verified M Vetek Manual SWE vetek en dynamics webfiles document 9329e5d5 cd06 4da3 a0c2 b111500d991e |||

KERN Sohn GmbH Ziegelei 1 Tel.: 49- 0 7433-9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-149 ... tningskabel Display stol 9. Batterifack MCC-NM-BA-se-1731 9 Detaljer: Vska fr utrustning MCC-**A01** ppen hjulbroms Lst hjulbroms Fotstd och justeringsfot 10 MCC-NM-BA-se-1731 Uppfyllbara arm...

lang:af **score:16** filesize: 1.83 M page_count: 48 document date: 2017-12-04

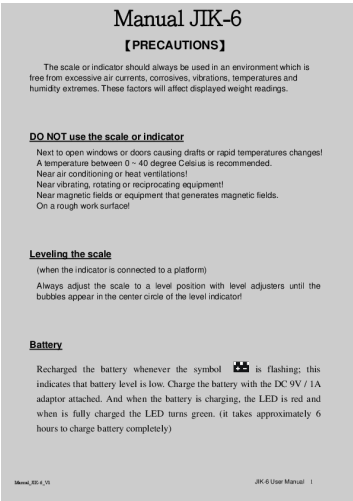


[pdf] User Manual Declaration of Conformity

Microsoft Word JIK 6 User Manual v03 doc lillian Download Weighing indicator 30 000 ext counts OIML Vetek V1 ENG vetek en dynamics webfiles document f3c6f8bf aeee 4935 acd8 673183bbeea3 |||

Manual JIK-6 PRECAUTIONS The scale or indicator should always be used in an environment which is fre ... splay will show ACC 1 , and also the weight of the object. At the same time, you can see the sign **A01** on the operation message display. 3 . Remove the first object and place the next object on the...

lang:en score:16 filesize: 2.01 M page_count: 46 document date: 2019-11-13

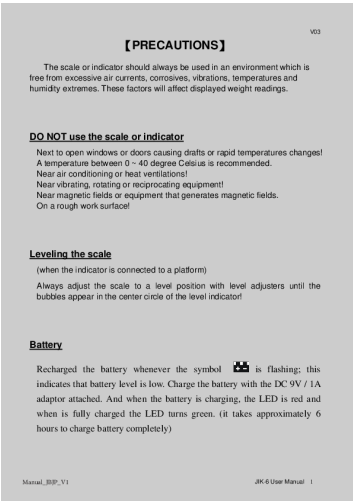


[pdf] User Manual Declaration of Conformity

Microsoft Word JIK 6 User Manual v03 doc lillian PRECAUTIONS JBJP V1 ENG vetek Dynamics Documents 7f1eea47 74cd 48e6 a742 f569b08c04e0 Buy Floor scale 60kg 5g 330x450 with pillar from Vetek here |||

V03 PRECAUTIONS The scale or indicator should always be used in an environment which is free from ex ... splay will show ACC 1 , and also the weight of the object. At the same time, you can see the sign **A01** on the operation message display. 3 . Remove the first object and place the next object on the...

lang:en score:15 filesize: 1.98 M page_count: 46 document date: 2019-05-15

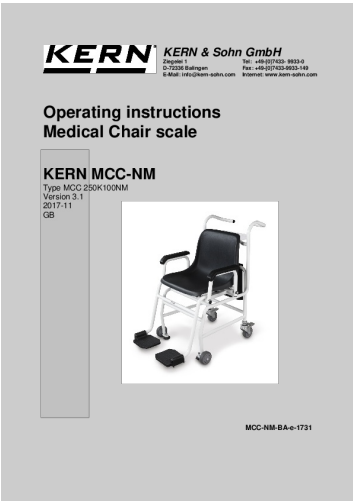

[pdf] User Manual Instructions

4 KERN Gottl Kern Sohn GmbH Download Chair scale MCC 250kg 100g MDD approved class III Verified M Vetek Manual ENG vetek en dynamics webfiles document a465befa 9d71 4695 bc54 b14e6f699b9e ||| KERN Sohn GmbH Ziegelei 1 Tel: 49- 0 7433- 9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-149 ... rate an error message „Err 4 , repeat the adjustment process. 16 Accessories Article number MCC-**A01** Product Bag 17 Printers Connected printer shall be approved according to EN60950 IEC60950 st...

lang:af score:15 filesize: 1.93 M page_count: 47 document date: 2017-12-04

Operating Manual Analytical and precision balances

KERN ALJ/ALS/PLJ/PLS

Version 4.2
2018-07
GB



ALJ/ALS/PLJ/PLS-BA-e-1842

[\[pdf\]](#) User Manual Declaration of Conformity

18 KERN ks Download Analytical balance Kern ALJ 82g 0 01mg 220g 1mg Vetek Manual ALS PLJ PLS

ENG vetek en dynamics webfiles document b1f4c5bb 1fc3 4169 9f47 15e3d0c3e2c0 |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen email: info kern-sohn.com Phone:

49- 0 7433- 9933-0 ... Precision balances d = 0.001 g Precision balances d = 0.01 g

KERN YDB-03 KERN ALT-A02 KERN PLT-**A01** 11.2.1 Density determination of solids

Prepare the balance as follows: Switch off the balance ...

lang:en **score:15** filesize: 2.14 M page_count: 79 document date: 2018-07-09

Operating Instructions Personal weighing scale, Handrail scale, Wheelchair scale, Transportation stretcher balance, Bariatric scale

KERN MPS / MTS / MWS / MXS

Version 3.1
2017-02
GB



MPS / MTS / MWS / MXS-NM-BA-e-1731

[\[pdf\]](#) User Manual Instructions

26 KERN Gottl Kern Sohn GmbH Download Personal scale with handrail MTS 300kg 0 1kg MDD

approved class III Vetek Manual eng vetek en dynamics webfiles document 9ce9cb42 ab86 41da 9ea0

3b55188b25a8 |||

KERN Sohn GmbH Ziegelei 1 Tel: 49- 0 7433- 9933-0 D-72336 Balingen Fax: 49- 0

7433-9933-149 ... he factory settings default settings Exiting the menu 14 Accessories

optional Item number MWS-**A01** MWS-A02 Product Tripod Hand rail 64 MPS / MTS /

MWS-NM-BA-e-1731 ...

lang:nl **score:15** filesize: 2.32 M page_count: 64 document date: 2018-02-01

Bruksanvisning Analys- och precisionsvägar

KERN ALJ / ALS / PLJ / PLS

Version 4.3
2019-01
SE



ALJ/ALS/PLJ/PLS-BA-e-1843

[\[pdf\]](#) User Manual

3 KERN ks Download Analytical balance Kern ALJ 82g 0 01mg 220g 1mg Vetek Manual ALS PLJ PLS

SWE vetek en dynamics webfiles document a4020898 2980 4038 9959 ee725fe02601 |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Tel: 49- 0

7433- 9933-0 F ... lysvgar precisionsvgar d = 0,001 g precisionsvgar d = 0,01 g KERN

YDB-03 KERN ALT-A02 KERN PLT-**A01** 11.2.1 Bestmning av densitet fr fasta

kroppar Vgen frbereds p fljande stt: stng av vgen. ...

lang:no **score:15** filesize: 2.25 M page_count: 84 document date: 2019-01-25




[\[pdf\]](#) User Manual

26 KERN Gottl Kern Sohn GmbH Download Personal scale with handrail MTS 300kg 0 1kg MDD approved class III Vetek Manual SWE vetek en dynamics webfiles document 364690a6 fdb6 41da 80e1 af946178c91b |||

KERN Sohn GmbH Ziegelei 1 Tel.: 49- 0 7433-9933-0 D-72336 Balingen Fax: 49- 0 7433-9933-149 ... gar G ur meny 64 MPS / MTS / MWS / MXS-NM-BA-se-1731 14 Tillbeh tillval Artikelnummer MWS-**A01** MWS-A02 Produkt Stativ Rcke MPS / MTS / MWS / MXS-NM-BA-se-1731 65 ...

lang:nl **score:15** filesize: 2.33 M page_count: 65 document date: 2018-02-01

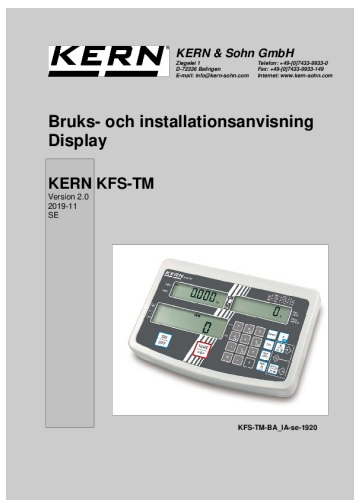


[\[pdf\]](#) User Manual

44 KERN Gottl Kern Sohn GmbH Download Counting scale IFS 3kg 0 1g 6kg 2g 230x230 mm Vetek Manual KFS TM V2 SWE vetek en dynamics webfiles document 98b9a890 604c 4cbb b992 15ebe82398de |||

KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-mail: info kern-sohn.com Telefon: 49- 0 7433-9933- 70 13.1 Anslutning av IFS-rknevggen till EWJ-referensvggen med hjlp av CCA-**A01**grnssnittskabel tillval

lang:tl **score:14** filesize: 1.6 M page_count: 75 document date: 2019-12-11

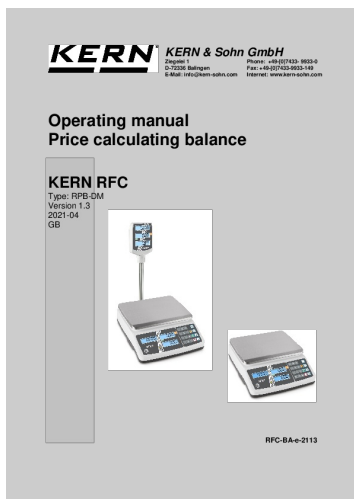

[\[pdf\]](#) User Manual Dimension Guide Declaration of Conformity

31 KERN Gottl Kern Sohn GmbH Operating manual Price calculating balance Vetek ScalesInterface cable CFS A01 2 Checkout manufacturer s interface 1 adapter To use the device as a checkout enter the Manual RPB RFC V2 ENGvetek Dynamics Documents 0c00252c 0b24 47d7 96a8 e03620a5418e Manual ENG srsItid AfmBOodITSJ77 egiPkJYJBp4ZiZeWXqUAbPo0lz2y8mPJQgMI7W5IO ScalesOperating the Interface ENGManual AfmBOor9

xidZMarLJpt5xTseowGozj5Xk3il7e0g5dwI91RT7xxRfwsvetek ENGRPB 15K2DHMvetek egiPkJYJBp4ZiZeWXqUAbPo0lz2y8mPJQgMI7W5IOcoqc kern sohn WebDocs DocumentFor NamingScheme Model type MainManual tradeName 15K2DHM language en ||| ||| KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 Fax: 49- 0 7433- 9933-149 Internet: www.kern-sohn.com Operating manual Price calculating balance KERN RFC Type: RPB-DM Version 1.3 2021-04 GB RFC ||| KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 Fax: 49- 0 7433-9933-149 Internet: www.kern-sohn.com Operating manual Price calculating balance KERN RFC Type: RPB-DM Version 1.3 2021-04 GB RFC KERN Sohn GmbH Ziegelei 1 D-72336 Balingen E-Mail: info kern-sohn.com Phone: 49- 0 7433- 9933-0 ... evice to be used as a checkout, the following components are required: 1. Interface cable KERN CFS-**A01** 2. Checkout manufacturer s interface cable 1. KERN CFS-**A01** 2. Checkout adapter cable To use t...


lang:en **score:14** filesize: 751.51 K page_count: 38 document date: 2021-05-06

Kern P V1 1 220707 Catalogue vetek se Current Scale Number Unit Panel Descriptions LCD Display
Screen Cover Stainless Steel Prism Sample Groove Button Battery Hatch Removable Shell manual orm
v2 eng dynamics WebFiles image f6f7d2d3 58e3 42ed 94cf 11bd57bead3d |||



Manual_ORM_V2 ENG Catalogue Introduction Display Button Preparations before
Operation Booting and ... 0.0 0.5 0.1 32.0-104.0 0.9 0.1 121*58*25mm 90g excluding
battery The Error Codes Table: code **A01** Instructions Beyond the scope of calibration
temperature.0.0-40.0 A02 During calibration, no...

lang:en score:13 filesize: 895.6 K page_count: 1 document date: 2023-08-23

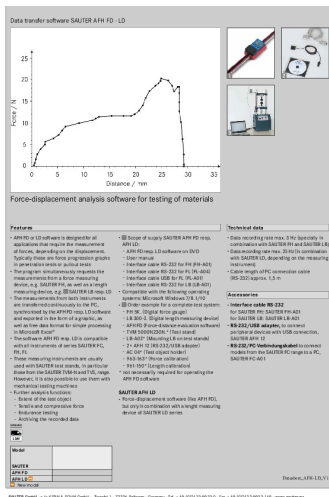

[\[pdf\]](#) Datasheet

Datasheet AFH LD V1 Buy Force distance data transfer software with graphical representation of the measuring process from Vetek here [vetek Dynamics Documents 59ced1f7 ef0c 4b1d a504 abfacd057179](#)

Data transfer software SAUTER AFH FD LD 01 Force-displacement analysis software
for testing of mat ... D resp. AFH LD: - AFH FD resp. LD software on DVD - User
manual - Interface cable RS-232 for FH FH-**A01** - Interface cable RS-232 for FL FL-
A04 - Interface cable USB for FL FL-**A01** - Interface cabl...

lang:en score:12 filesize: 150.48 K page_count: 2 document date: 2020-01-15



[\[pdf\]](#) Datasheet

Datasheet MPC V2 Buy Personal floor scale Kern 250kg 0 1kg Verification class III from Vetek here vetek Dynamics Documents 7644bbd1 15d5 4f0e 9af2 01354d2a65ea |||

MEDICAL SCALES 2020 Personal floor scale KERN MPC Professional personal floor scale with EC type a ... with date and time. FLP/ GMP-compliant print form in DE, GB, FR, only in combination with KERN MPC-**A01**, CFS-**A01** and printer YKB-01N
Battery- or mains-powered, rechargeable battery operation optional...

lang:en score:12 filesize: 363 K page count: 2 document date: 2020-05-18



MEDICAL SCALES 2022



Baby scale KERN MBA

Compact baby scale with special Safe Guard tray with EC type approval class III and approval for professional mobile or stationary medical use in medical diagnostics




Your KERN specialist dealer

KERN & SOHN GmbH · Zöggen 1 · 72536 Göggingen · Germany · Tel. +49 7432 9353-0 · www.kern-sohn.com · info@kern-sohn.com

© 2022 KERN & SOHN GmbH

[illegible][illegible]

lang:en score:11 filesize: 221.85 K page count: 2 document date: 2019-07-09

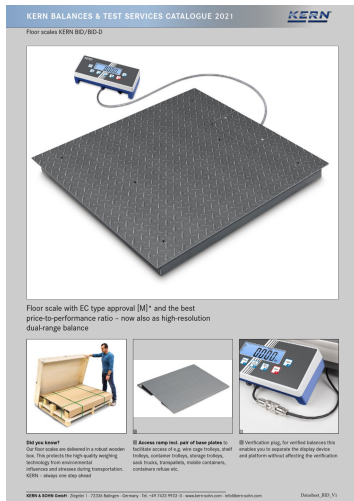

[\[pdf\]](#) Datasheet Catalog

Datasheet BID V1 Köp Golvvåg 1500kg 0 5kg 1000x1000 mm Krönt från Vetek här vetek se Dynamics

Documents dc9d39d1 f155 4d65 986f 2b70f1271a60 |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Floor scales KERN

BID/BID-D Floor scale with EC type a ... temperature -10 C/40 C Accessories

Protective working cover, scope of delivery: 5 items, KERN EOC-**A01**S05 Pair of base plates to fix the weighing bridge to the floor, KERN BIC-A07 Ascending ramp, s...

lang:en score:11 filesize: 429.71 K page_count: 3 document date: 2021-04-07



[\[pdf\]](#) Datasheet Dimension Guide Accessories Catalog

Datasheet 440 V1 Buy Precision balance Kern 600g 0 01g from Vetek here vetek Dynamics Documents

f83a4e5e 6484 439d 9cb1 e05e835dfe0c |||

KERN BALANCES TEST SERVICES CATALOGUE 2020 Compact laboratory

balance KERN 440 02 A B C The c ... ble battery pack, operating time up to 20 h

without backlight, charging time approx. 10 h, KERN FCB-**A01** Hook for underfloor

weighing, KERN 440-**A01** RS-232/Ethernet adapter for connection to an IP-bas...

lang:en score:11 filesize: 303.2 K page_count: 2 document date: 2020-04-22



[\[pdf\]](#) Datasheet

Datasheet MWA V1 Köp Rullstolsvåg med ramper och räcken Kern 300kg 0 1kg MDD godkänd klass III

Krönt från Vetek här vetek se Dynamics Documents 875a457d b960 45bd 8e0b 10b3ca96dd55 |||

MEDICAL SCALES 2018 Wheelchair platform scale KERN MWA Wheelchair platform

scale with two integrated ... MWA 300K-1PM: This set includes the wheelchair

platform scale MWA 300K-1M and the handrail KERN MWA-**A01** including column for

ergonomic mounting of the display device , which offers the patient maximu...

lang:en score:11 filesize: 357.88 K page_count: 2 document date: 2019-08-20

[illegible][illegible]

Download Crane scale Kern HFC 600kg 0 2kg Vetek datasheet hfc v1 vetek en dynamics WebFiles document 197ef9fe 699a 40be b797 92eec60b7121 |||

BALANCES TEST SERVICE 2023 HANGING SCALES/CRANE SCALES Crane
scale KERN HFC 1 6 7 3 Compact cr ... ack internal, operating time up to 30 h,
without backlight, charging time approx. 12 h, KERN HFA-**A01** Display device:
Rechargeable battery pack internal, KERN HFC-**A01** 6 High-strength shackle, h...
lang:en **score:11** filesize: 253.04 K page_count: 2 document date: 2023-11-23

[\[pdf\]](#) Datasheet Dimension Guide

Datasheet NFN V1 Buy Drive through scale Kern 600kg 0 2kg 1600x1200x80 mm from Vetek here [vetek](#)

Dynamics Documents 456362fd 6640 4afc b494 4ef377f9c543 |||

MEDICAL SCALES 2021 Laundry cart scale KERN NFN PROFESSIONAL CARE
Stainless steel drive-through sc ... to the floor, KERN BFN-A03 Large display with
superior display size, only in combination with KFN-**A01**, please refer to KERN s
website for more details. KERN YKD-A02 Cable with special length 15 m, ...
lang:en **score:11** filesize: 221.36 K page_count: 2 document date: 2021-07-09

[\[pdf\]](#) Datasheet Dimension Guide Accessories Catalog

Datasheet DS V1 Buy Platform scale Kern 30kg 0 1g 450x350x115 mm from Vetek here [vetek Dynamics](#)

Documents 247314ab 9a5e 4ac2 9577 5bc6043b9a3d |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Precision platform scale
KERN DS A 1 2 Accessories ... s of platform, bow, hook, only for models with fill-
levels 22511560 mm weighing plate B, KERN DS-**A01** Precise counting: The
automatic reference Cable length of display device approx. Rechargeab...
lang:en **score:11** filesize: 270.73 K page count: 2 document date: 2021-09-02

[illegible][illegible][illegible]

[\[pdf\]](#) Instructions Datasheet Dimension Guide Catalog

Datasheet CDS V1 Köp Räknevåg Kern 100kg 0 5g 450x350 mm från Vetek här vetek se Dynamics

Documents 3674436b 7a7c 4420 bff3 4e21368a3d75 |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Counting scale KERN CDS

5 Easy to use industrial count ... ery pack external, operating time up to 30 h without

backlight, charging time approx. 10 h, KERN KS-**A01** Internal rechargeable battery

pack, operating time up to 30 h without backlight, charging time ...

lang:en score:11 filesize: 225.78 K page count: 2 document date: 2021-10-05

[\[pdf\]](#) Datasheet Catalog Recall

Datasheet UID V1 Buy Pallet scale Kern 600kg 0 2kg 1500kg 5kg from Vetek here [vetek Dynamics](#)

Documents 552c987a c86a 4120 979a 77097fe2db42 ||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Pallet scale KERN UID

High-resolution dual-range palette -10 C/40 C OPTION Accessories Protective

working cover, scope of delivery: 5 items, KERN EOC-**A01**S05 Stand to elevate

display device, height of stand approx. 800 mm, KERN BFS-A07 Internal rech...

lang:en score:11 filesize: 271.57 K page count: 2 document date: 2021-07-09

[\[pdf\]](#) Instructions Datasheet Accessories

Datasheet CKE V1 Buy Counting scale CKE2019a Kern 150x170mm 3 6kg 0 01g from Vetek here [vetek](#)

Dynamics Documents ade26907 4d24 49e1 9f08 020c79a772a2 ||

KERN BALANCES TEST SERVICES 2022 Counting scale KERN CKE A B Easy to

use, self-explanatory coun ... g 1 Place the empty container onto the weighing Large

backlit display time approx. 10 h, KERN KS-**A01** plate and tare by pressing the TARE

key A, B digit height 9 mm Internal rechargeable battery ...

lang:en score:11 filesize: 221.68 K page count: 2 document date: 2022-10-14

[illegible]

[\[pdf\]](#) Datasheet Dimension Guide Accessories Catalog

Datasheet CCA V1 Buy Counting system Kern 600g 0.01g with external weighing platform 6kg 2g 15kg

5g from Vetek here vetek Dynamics Documents b9df1e46 d580 4325 b4fd 0f536426692e |||

KERN BALANCES TEST SERVICES CATALOGUE 2020 Counting system KERN
CCA Protective working cover inc ... industrial applications RS-232/Ethernet adapter
for connection with an RS-232 Y-cable KERN CCA-**A01**, Tough industry standard
suitable for use in to an IP-based Ethernet network, included with d...

lang:en score:11 filesize: 271.94 K page count: 2 document date: 2020-05-18

[illegible]

[\[pdf\]](#) [User Manual](#) [Datasheet](#) [Dimension Guide](#) [Accessories Catalog](#)

Datasheet IFS V1 Buy Counting scale Kern 3kg 1g 6kg 2g 300x240 mm from Vetek here [vetek Dynamics](#)

Documents 611077d8 a912 4f7b 835b e9aee34898dc |||

KERN BALANCES TEST SERVICES CATALOGUE 2021 Counting scale KERN IFS
A 1 Dimensions of display d ... tainless Steel A 230230110 mm B 300240110 mm C
400300120 mm D 500400140 mm E 650500140 mm KERN IFB-**A01** Height of stand
approx. 600 mm, for models with weighing plate size D, E, KERN IFB-A02 Internal...

lang:en score:11 filesize: 267.41 K page count: 2 document date: 2021-09-27

[illegible]

[\[pdf\]](#) Datasheet Accessories Catalog

Datasheet BFN V1 Köp Golvvåg Kern IP68 IP65 1500kg 500g 1500x1250mm Krönt från Vetek här vetek

se Dynamics Documents a6dbd5d6 9a02 4ba2 baa9 83748f8924d2 |||

KERN BALANCES TEST SERVICES CATALOGUE 2020 Floor scale KERN BFN 3 4

5 6 Stainless steel weighing ramp, stainless steel, not included, for models with weighing plate size KERN BFN-A05 KERN BFN-**A01** 6 Stable pit frame, stainless steel, for models with weighing plate size KERN BFN-A06 KERN BFN-...

lang:en score:11 filesize: 303.71 K page count: 2 document date: 2021-02-03

[illegible][illegible]

[\[pdf\]](#) Datasheet Dimension Guide Accessories

Datasheet SFB V1 Köp Plattformsvåg Kern 50kg 5g Rostfritt stål IP65 500x400 mm från Vetek här vetek
se Dynamics Documents 0d41f35c 8c1f 40a0 9071 6a6abf4829b7 |||

KERN BALANCES TEST SERVICES 2022 Stainless steel platform scale KERN SFB-
H SFB 3 4 Stainless s ... 32 data interface including Cable length of display device
approx. 3 m interface cable, KERN KFN-**A01** Internal rechargeable battery pack,
Stand to be screwed onto the platform, operating time u...

lang:en score:11 filesize: 214.25 K page_count: 2 document date: 2022-04-27

[\[pdf\]](#) Datasheet Catalog

Datasheet BXS V2 Köp Golvvåg Kern IP67 IP68 1500kg 0 5kg 1000x1000mm Krönt från Vetek här vetek
se Dynamics Documents b0ddd90d 66a3 47ea 8920 d8795b538584 |||

KERN BALANCES TEST SERVICES CATALOGUE 2020 Floor scale KERN BXS 1 4
Ascending ramp, steel, lacquered, for models with weighing plate size Weighing
bridge with screwed-on weighing plate IP67 and A KERN BXS-**A01** B KERN BXS-A02
stainless steel display device IP68 , with EC type approval M ...

lang:en score:11 filesize: 380.33 K page count: 2 document date: 2021-03-11

[\[pdf\]](#) User Manual Installation Guide Instructions Accessories Catalog

Kern P V1 1 220707 manual orm v2 engvetek en dynamics WebFiles image f6f7d2d3 58e3 42ed 94cf

11bd57bead3d eng srsItid AfmBOooy BwgCcWpaGQerjW0BDGyk paA xR2B0Ox4vvl3rKO5XEsfMH

Vetek ScalesCoffee TDS Brix Refractive Index Coffee 2 Urine Human Serum Protein Cat Dog Brixmanual
engmanual AfmBOOpA JalisUx60rgCUjtHOMxvtQ 6gDodfZJhK3SgpC9yDfyXH tvetek ||| |||

Manual_ORM_V2 ENG Catalogue Introduction Display Button Preparations before Operation Booting and Measurement Calibration Switch the Scales and Temperature Units Turn Off Maintenance Preservation

Appendix 1.Introduction Panel Descriptions S

Manual_ORM_V2 ENG Catalogue Introduction Display Button Preparations before
Operation Booting and ... 0.0 0.5 0.1 32.0-104.0 0.9 0.1 121*58*25mm 90g excluding
battery The Error Codes Table: code **A01** Instructions Beyond the scope of calibration
temperature.0.0-40.0 A02 During calibration, no...

lang:en score:11 filesize: 895.6 K page count: 1 document date: 2023-08-23

Digital length measuring device SAUTER LB



Distance measurement directly in machines or sites with RS-232 interface

Features:

- Digital display output with a resolution of 0.01 mm
- Easy mounting in machines or on sites
- 2-wire, non-contact and ground length measurement
- Measuring range 0 to 200 mm
- Resolution 0.01 mm
- Measuring range 0 to 200 mm

Technical data:

- Measurement range 0 to 200 mm
- Resolution 0.01 mm
- Measuring range 0 to 200 mm
- Resolution 0.01 mm
- Measuring range 0 to 200 mm
- Resolution 0.01 mm

Accessories:

- RS-232/PC connection cable, SAUTER LB-A01
- Battery operation, battery standard 3V CR2032
- Mounting the length measuring device onto a SAUTER test stand at the factory, SAUTER LB-A02

SAUTER GmbH - 72336 Balingen - Germany - Tel.: +49 (0)7141 910-100 - Fax: +49 (0)7141 910-101 - www.sauter.de

Model	Measuring range	Resolution	Direction of measurement	Output
LB 001	0 to 200 mm	0.01 mm	forward	RS-232
LB 002	0 to 200 mm	0.01 mm	backward	RS-232
LB 003	0 to 200 mm	0.01 mm	forward	RS-232
LB 004	0 to 200 mm	0.01 mm	backward	RS-232

[pdf] Datasheet Dimension Guide Accessories Catalog

Datasheet LB V1 K p Avst ndsm tare Sauter 200mm 0 01mm fr n Vetek h r vetek se Dynamics

Documents 681f9385 84ad 46e1 b9ca 4c9910c5a26f |||

Digital length measuring device SAUTER LB 03 Distance measurement directly in machines or sites wi ... ttery operation, batteries standard 3V CR2032 Accessories RS-232/PC connection cable, SAUTER LB-A01 Mounting the length measuring device onto a SAUTER test stand at the factory, SAUTER LB-A02 SA...

lang:en score:11 filesize: 161.53 K page_count: 2 document date: 2020-01-15