



[Manuals.plus](#) /

› [Funlicht](#) /

› Funlicht Monitor Light Bar User Manual

Funlicht ML2201

Funlicht Monitor Light Bar User Manual

Model: ML2201

INTRODUCTION

Thank you for choosing the Funlicht Monitor Light Bar. This manual provides essential information for the proper setup, operation, and maintenance of your new monitor light bar. Designed to enhance your workspace, the Funlicht Monitor Light Bar offers eye-caring illumination, saves desk space, and features intuitive touch controls for brightness and color temperature adjustments.

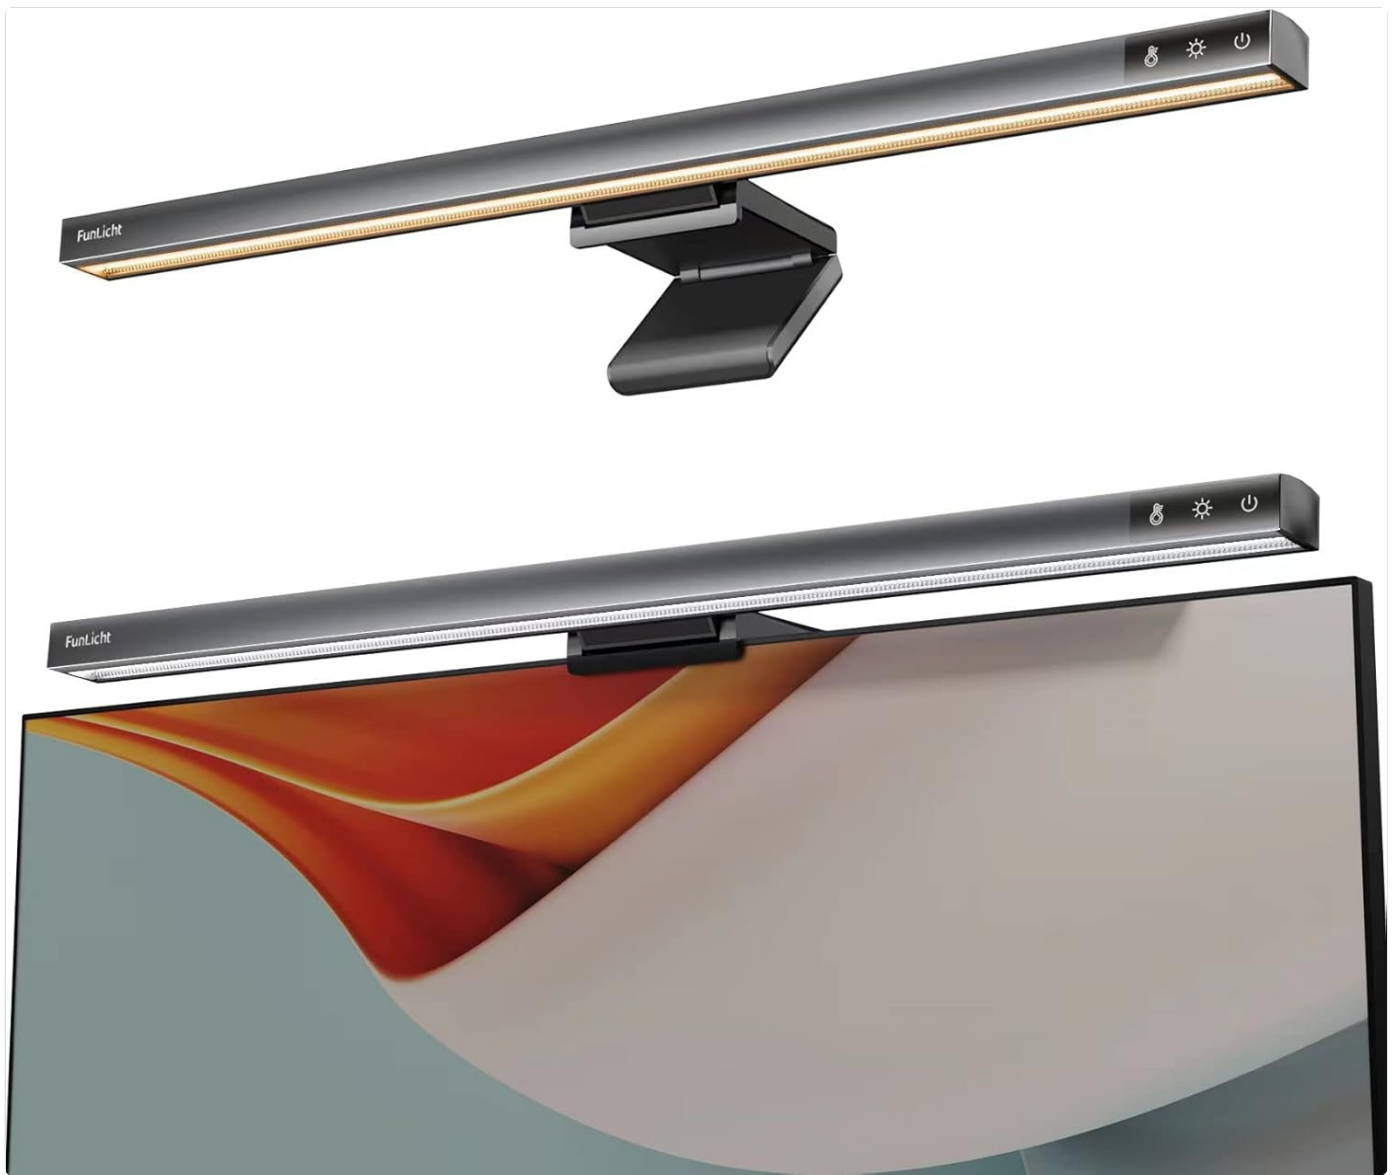


Figure 1: Funlicht Monitor Light Bar installed on a computer monitor, showcasing its sleek design and how it sits atop the screen.

The asymmetrical optical design ensures that light is directed onto your desktop, preventing screen glare and flicker, which contributes to a more comfortable and natural lighting environment for extended periods of work, study, or gaming.

Eye Care

No Screen Glare and Flicker-Free



Figure 2: A user benefiting from the Funlicht Monitor Light Bar, highlighting its eye-caring features by eliminating screen glare.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Funlicht Monitor Light Bar (Model ML2201)
- USB Type-C Power Cable
- User Manual (this document)

SPECIFICATIONS

Feature	Detail
Model Number	ML2201

Dimensions (L x W x H)	17.32"D x 3.54"W x 1.5"H (approx. 44cm x 9cm x 3.8cm)
Item Weight	1.1 Pounds (approx. 0.5 kg)
Power Source	Corded Electric (USB Powered)
Voltage	5 Volts (DC)
Wattage	5 Watt-hours
Brightness	≥700 Lux
Color Temperature	2700K - 6500K (Stepless Adjustable)
Brightness Adjustment	5% - 100% (Stepless Adjustable)
Material	Acrylonitrile Butadiene Styrene, Aluminum
Connectivity	USB
Control Method	Touch Control
Compatible Monitor Thickness	0.6 to 1.4 inches (1.5cm to 3.5cm)
Certifications	CE, RoHS, FCC, IEC62778 Anti-blue light

SETUP INSTRUCTIONS

Follow these steps to properly install your Funlicht Monitor Light Bar:

- Unpack the Light Bar:** Carefully remove the monitor light bar and USB power cable from the packaging.
- Position on Monitor:** Place the light bar's clip mechanism on top of your computer monitor. Ensure the light bar is centered and stable. The clip is designed to fit flat monitors with a thickness between 0.6 to 1.4 inches (1.5cm to 3.5cm). *Note: This product is not recommended for laptops or curved monitors.*

Simple Installation

Compatible with 0.6 ~ 1.4 inch Monitor Thickness

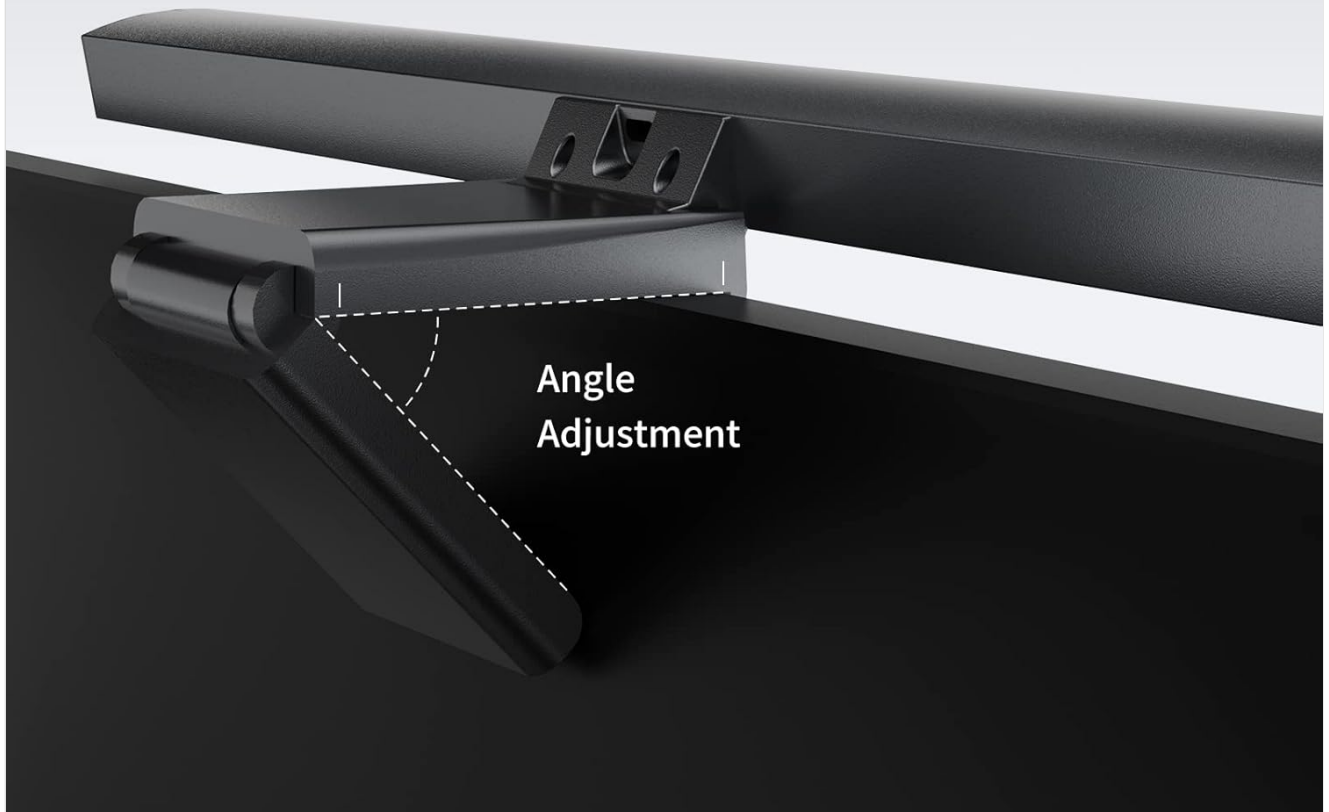


Figure 3: The adjustable clip mechanism allows for easy and stable placement on compatible monitors.

3. **Adjust Angle:** Gently adjust the angle of the light bar to ensure the light is directed onto your desk surface and away from the screen, minimizing glare.
4. **Connect Power:** Insert the Type-C end of the provided USB power cable into the port on the back of the light bar. Connect the other end of the USB cable to a 5V USB power source, such as a computer USB port, monitor USB port, power bank, or a USB wall charger.

Sensitive Touch Control



ON/OFF
< Short Press >



Brightness
< Long Press >



Color Temperature
< Long Press >



Figure 4: The USB Type-C connection point for powering the light bar.

5. **Power On:** Once connected to a power source, the light bar is ready for operation.

OPERATING INSTRUCTIONS

The Funlicht Monitor Light Bar features sensitive touch controls located on the right side of the bar. Familiarize yourself with these controls for optimal use:

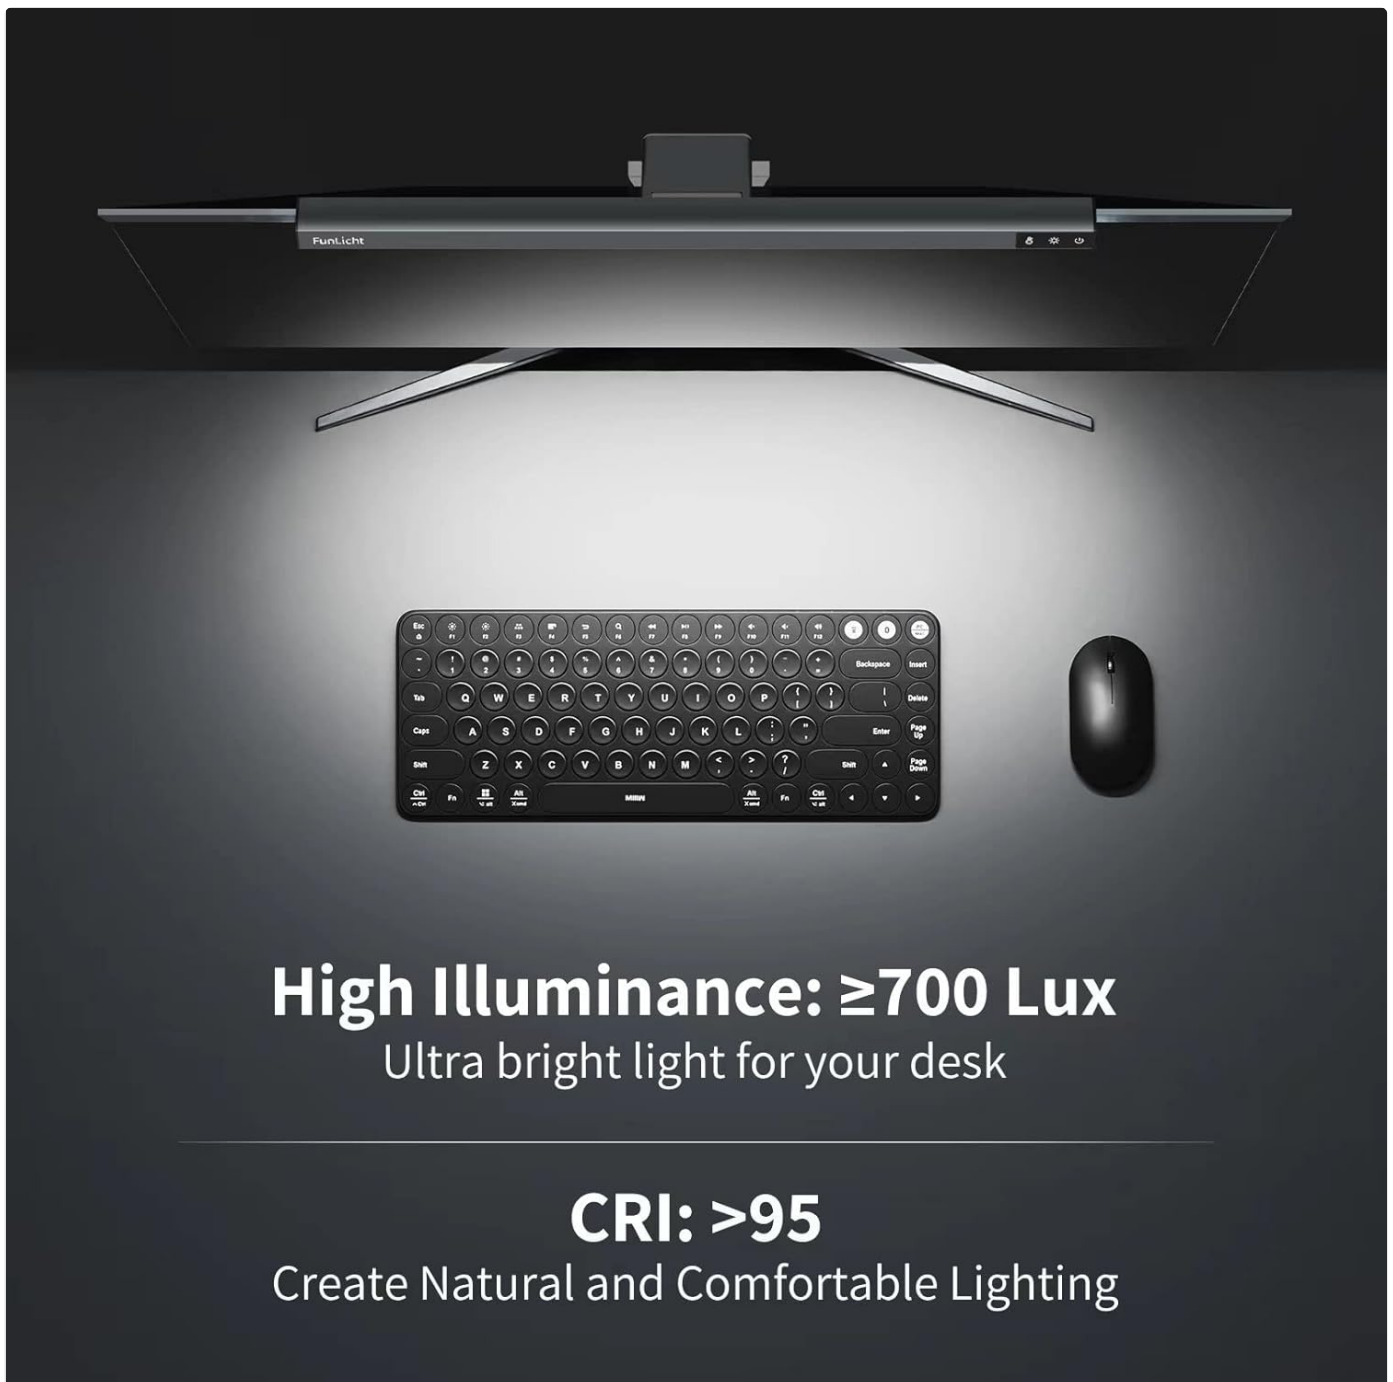


Figure 5: The intuitive touch control panel for easy adjustments.




- **Power On/Off:**
A **short press** on the  will turn the light bar on or off.
- **Adjust Brightness:**
A **long press** on the  will smoothly adjust the brightness level from 5% to 100%. Release your finger when the desired brightness is reached.
- **Adjust Color Temperature:**
A **long press** on the  will smoothly adjust the color temperature from warm white (2700K) to cool white (6500K). Release your finger when the desired color temperature is reached.



Figure 6: Visual representation of the stepless brightness and color temperature adjustments.

MAINTENANCE

To ensure the longevity and optimal performance of your Funlicht Monitor Light Bar, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the power cable before cleaning. Use a soft, dry, or slightly damp cloth to wipe the surface of the light bar. Avoid using abrasive cleaners, solvents, or harsh chemicals, as they may damage the finish or electronic components.
- **Storage:** If storing the light bar for an extended period, ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the light bar with care. Avoid dropping it or subjecting it to strong impacts, which could damage internal components.

TROUBLESHOOTING

If you encounter any issues with your Funlicht Monitor Light Bar, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Light bar does not turn on.	No power connection or faulty USB port.	Ensure the USB cable is securely connected to both the light bar and a working 5V USB power source. Try a different USB port or power adapter.
Light flickers or dims unexpectedly.	Insufficient power supply or unstable connection.	Use a stable 5V/1A (or higher) USB power source. Check the USB cable for damage and ensure it's firmly connected.
Touch controls are unresponsive.	Temporary software glitch or dirty sensor.	Disconnect and reconnect the power cable to reset the device. Ensure the touch control area is clean and dry. Avoid touching with wet hands.
Light bar does not fit my monitor.	Monitor thickness is outside the compatible range.	The light bar is designed for flat monitors with a thickness of 0.6 to 1.4 inches. It is not suitable for laptops or curved monitors. Verify your monitor's specifications.

If the problem persists after trying these steps, please contact Funlicht customer service for further assistance.

WARRANTY AND SUPPORT

Funlicht is committed to providing high-quality products and excellent customer service. The Funlicht Monitor Light Bar (Model ML2201) comes with a standard manufacturer's warranty, covering defects in materials and workmanship under normal use.

For warranty claims, technical support, or any other inquiries, please contact our customer service team. We offer 24/7 friendly customer service to assist you.

Contact Information: Please refer to the contact details provided on the product packaging or the official Funlicht website ([Visit the Funlicht Store on Amazon](#)).

This product has passed CE/RoHS/FCC and IEC62778 Anti-blue light certification standards, ensuring its quality and safety.

IMPORTANT SAFETY INFORMATION

- Do not disassemble or modify the light bar.
- Keep away from water and high humidity environments.
- Do not expose to extreme temperatures or direct sunlight for prolonged periods.
- Use only the provided USB cable or a certified equivalent.
- Keep out of reach of children.

VIDEO RESOURCES

No official product videos from the seller were found to be relevant for inclusion in this instruction manual based on the provided data.

