

LIQUIPEL EMT-GW240U

Liquipel Powertek Dual USB-A Wall Charger (Model EMT-GW240U) Instruction Manual

Model: EMT-GW240U | Brand: LIQUIPEL

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your Liquipel Powertek Dual USB-A Wall Charger. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: The Liquipel Powertek Dual USB-A Wall Charger in purple, featuring two USB-A ports on the front and foldable prongs on the back.

2. SAFETY INFORMATION

- Do not expose the charger to liquids, moisture, or extreme temperatures.
- Do not disassemble, modify, or attempt to repair the charger. This may void the warranty and pose safety risks.
- Keep out of reach of children.
- Ensure the wall outlet is easily accessible for disconnecting the charger if needed.
- Avoid using damaged cables or adapters with the charger.
- Unplug the charger from the wall outlet when not in use or during electrical storms.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Liquipel Powertek Dual USB-A Wall Charger
- 2 x USB Cable (*Note: The product description mentions 2 USB cables, but typically wall chargers do not include cables. Please verify your package contents.*)

4. PRODUCT FEATURES

The Liquipel Powertek Dual USB-A Wall Charger offers the following features:

- **Dual USB-A Charge Ports:** Allows charging of two devices simultaneously.
- **Folding Design:** The AC prongs fold into the charger body for compact storage and portability.
- **Beveled Edges:** Ergonomic design for comfortable handling.
- **Compact Size:** Designed for easy travel and minimal space usage.





Figure 2: An image illustrating the key features of the Liquipel Powertek Dual USB-A Wall Charger, including dual fast charging ports, portable folding prongs, premium beveled edges, and available in expressive colors.

5. SETUP

1. **Unfold the Prongs:** Gently pull out the foldable AC prongs from the charger body until they lock into place.

FOLDING CHARGE PRONGS


LIQUIPEL
POWERTEK

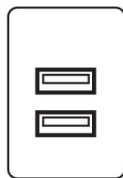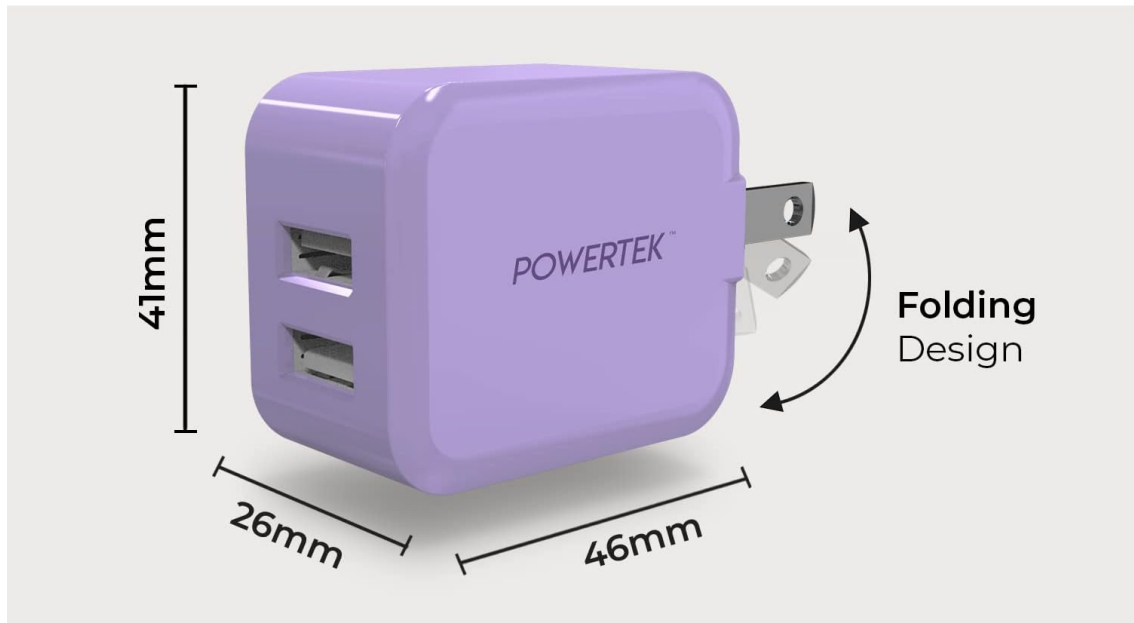

**Dual USB
Ports**



**2.4
AMPS**

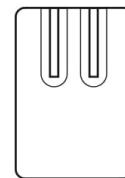

**Folding
Design**

Figure 3: The charger with its prongs extended, illustrating the folding design and compact dimensions (41mm height, 26mm width, 46mm depth).

2. **Plug into Wall Outlet:** Insert the charger's prongs into a standard 120V AC wall outlet.
3. **Connect USB Cable:** Insert the USB-A end of your charging cable into one of the two USB-A ports on the charger.
4. **Connect Device:** Connect the other end of the charging cable to your compatible device (e.g., smartphone, tablet, AirPods).



Video 1: Demonstration of unfolding the charger prongs, plugging the charger into a wall outlet, and connecting a USB cable to charge a smartphone. This video illustrates the ease of use and compact nature of the charger.

6. OPERATING INSTRUCTIONS

Once connected, your device should begin charging automatically. The charger is designed to provide efficient power to compatible devices. You can charge two devices simultaneously using both USB-A ports.

WALL CHARGER DUAL USB-A

- Dual Fast Charging Ports
- Portable Folding Prongs
- Premium Beveled Edges
- Uniquely Expressive Colors



Figure 4: The purple Liquipel Powertek Dual USB-A Wall Charger plugged into a standard wall outlet, with a purple USB cable connected to one of its ports, ready to charge a device.

7. MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, fold the AC prongs into the charger body. Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging	<ul style="list-style-type: none">◦ Charger not properly plugged in.◦ Faulty USB cable.◦ Device not compatible or port issue.	<ul style="list-style-type: none">◦ Ensure charger is securely plugged into a live outlet.◦ Try a different USB cable.◦ Test with another device or use the other USB port on the charger.
Slow charging	<ul style="list-style-type: none">◦ Using a non-optimal USB cable.◦ Device drawing more power than available.	<ul style="list-style-type: none">◦ Use a high-quality USB cable designed for faster charging.◦ Ensure your device is compatible with the charger's output (2 Amps total).

9. SPECIFICATIONS

Feature	Detail
Model Number	EMT-GW240U

Feature	Detail
Brand	LIQUIPEL
Input Voltage	120 Volts
Amperage	2 Amps
Total USB Ports	2 (USB-A)
Special Feature	Foldable Prongs
Compatible Devices	Cellular Phones, Laptops, Tablets (and specific models like Airpods, various iPhone and iPad models)
Item Weight	2.08 ounces
Package Dimensions	4.17 x 4.06 x 1.54 inches



			
			
	POWERTEK Dual Wall Block Charger	STANDARD Dual Wall Block Charger	VALUE Wall Block Charger
Fast Charge	Yes	No	No
Stable Charge	Yes	Average	No
Charge Ports	2	2	1
Portable Folding Prongs	Yes	No	No
Colors	6	Black	Black
Hard Edges	Premium Beveled	Texture Mixed	Texture Hard






Figure 5: A comparison table highlighting the features of the Powertek Dual Wall Block Charger against standard and value wall block chargers, emphasizing its fast charge, stable charge, two ports, portable folding prongs, and premium beveled edges.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official LIQUIPEL website or contact their customer service directly. Contact details are typically available on the product packaging or the manufacturer's website.

© 2023 LIQUIPEL. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - EMT-GW240U

	<p>EMT General Catalog June 1968: Professional Audio Equipment</p> <p>Discover the comprehensive 1968 General Catalog from EMT (Elektromesstechnik Wilhelm Franz), detailing professional audio equipment like turntables, tape recorders, reverberation units, and test instruments for studios and broadcasters worldwide.</p>
	<p>The Mix Magazine - April 1980: Recording Industry Directory & Audio Technology</p> <p>This April 1980 issue of The Mix magazine offers a comprehensive look at the recording industry, featuring extensive studio listings for New York and the Northeast, in-depth technical articles on tape machine alignment and echo/reverberation, and profiles of leading audio equipment manufacturers like Ampex, Amek, and Soundstream.</p>
	<p>Hach BioTector B3500dw TOC Analyzer: Consumable and Wear Parts Guide</p> <p>This document provides a comprehensive list of typical consumable and wear parts for the Hach BioTector B3500dw TOC Analyzer, covering a 3-year operational period. It details recommended stock quantities for spare parts, categorized by maintenance intervals (6, 12, 18, 24, 30, and 36 months). The guide includes part numbers, descriptions, and quantities for various components, from service kits and reagents to specialized parts like pumps, valves, and tubing.</p>
	<p>EMShape Neo Plus Body Sculpt Machine 8500W User Manual</p> <p>Comprehensive user manual for the M-SHAPE EMShape Neo Plus Body Sculpt Machine 8500W. Learn about product information, specifications, operation modes (AUTO, MANUAL), treatment levels, troubleshooting, and maintenance.</p>
	<p>EMSzero User Manual - HI-EMT Body Sculpting Device</p> <p>Comprehensive user manual for the EMSzero HI-EMT body sculpting device by Guangzhou Xinwei Electronic Technology Co., Ltd. This guide provides detailed information on indications, contraindications, operation, maintenance, technical specifications, and warranty for the EMSzero and TAIXL beauty equipment.</p>



[Professional PERFECT SHAPE NEO Body Sculpting Machine 5 in 1 User Manual](#)

User manual for the REJUVA FRESH Professional PERFECT SHAPE NEO Body Sculpting Machine 5 in 1, detailing product information, specifications, warnings, operation modes, and maintenance.