

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /


› [LIQUIPEL](#) /

› Liquipel Powertek Dual USB-A Wall Charger User Manual

LIQUIPEL EMT-GW240U

Liquipel Powertek Dual USB-A Wall Charger User Manual

Brand: **LIQUIPEL** | Model: **EMT-GW240U**



1. INTRODUCTION

The Liquipel Powertek Dual USB-A Wall Charger is designed to provide efficient and convenient charging for your electronic devices. Its compact, foldable design makes it ideal for both home use and travel. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your charger.

Key Features:

- Dual USB-A Charge Ports for simultaneous charging of two devices.
- Folding Design with Beveled Edges for portability and safe storage.
- Compact and lightweight construction.
- Available in a range of pastel colors to suit your style.



Figure 1.1: The Liquipel Powertek Dual USB-A Wall Charger in blue, showcasing its dual USB-A ports and compact design.

2. WHAT'S IN THE BOX

Upon opening the package, please ensure all items are present and in good condition:

- 1 x Liquipel Powertek Dual USB-A Wall Charger
- 2 x USB Cable (as per product specifications)

3. SETUP INSTRUCTIONS

Follow these steps to set up your Liquipel Powertek Wall Charger:

1. **Unfold the Prongs:** Gently pull out the foldable prongs from the charger body until they lock into place.

FOLDING CHARGE PRONGS

Liquipel
POWERTEK

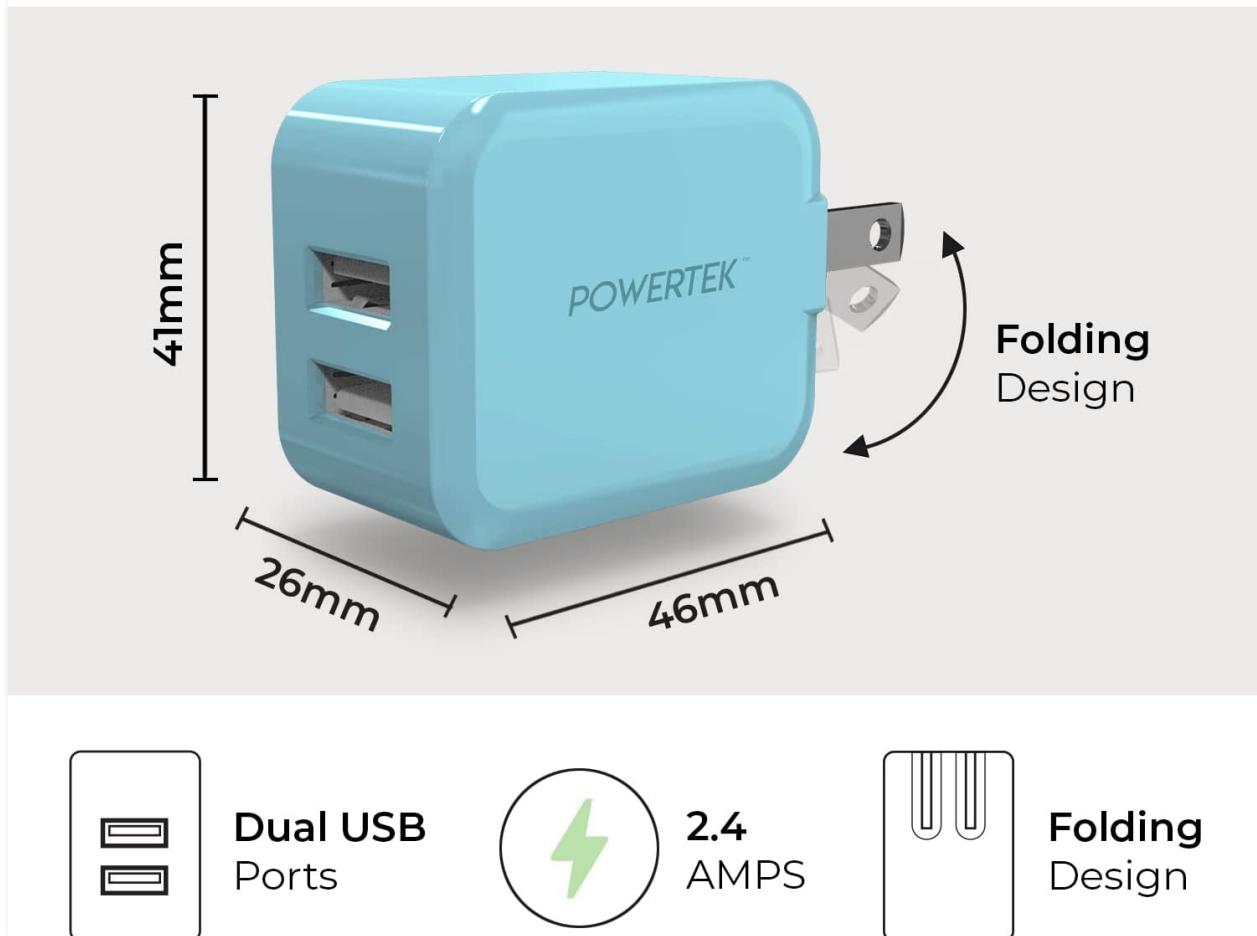


Figure 3.1: The charger's foldable prongs, illustrating its compact design and dimensions.

2. **Plug into Wall Outlet:** Insert the unfolded prongs into a standard AC wall outlet (100-240V). Ensure the charger is securely seated in the outlet.

Your browser does not support the video tag.

Video 3.1: Demonstration of unfolding the prongs and plugging the Liquipel Powertek charger into a wall outlet.

3. **Connect Your Device:** Plug your device's USB-A charging cable into one of the two USB-A ports on the charger. Then, connect the other end of the cable to your device.

WALL CHARGER DUAL USB-A

Liquipel
POWERTEK



- Dual Fast Charging Ports
- Portable Folding Prongs
- Premium Beveled Edges
- Uniquely Expressive Colors



Figure 3.2: The Liquipel Powertek charger in use, demonstrating its dual USB-A ports and compatibility with various devices.

4. OPERATING INSTRUCTIONS

The Liquipel Powertek Dual USB-A Wall Charger is designed for simple plug-and-play operation. Once connected to a power outlet and your device, it will automatically begin charging.

- **Dual Charging:** You can charge two devices simultaneously using both USB-A ports. The charger is designed to deliver stable power to both connected devices.
- **Optimal Performance:** For best charging performance, use high-quality USB-A cables that are compatible with your devices.

WALL CHARGER DUAL USB-A

Liquipel
POWERTEK



- Beautiful & Aesthetic in Any Room
- Six Lovely Colors to Choose
- Dual Charging Ports for 2+ Devices
- More Stable Charge

Figure 4.1: A collection of Liquipel Powertek chargers in different pastel colors, highlighting their aesthetic appeal and dual charging capability.

5. MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Liquipel Powertek Wall Charger, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the charger from the power outlet before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, fold the prongs back into the charger body for compact storage. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the charger or subjecting it to strong impacts. Do not attempt to disassemble or modify the charger.

CHARGE IN STYLE

Liquipel
POWERTEK



Figure 5.1: The compact and stylish design of the chargers, emphasizing their portability and ease of storage.

6. TROUBLESHOOTING

If you encounter any issues with your Liquipel Powertek Wall Charger, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Charger not providing power.	Not securely plugged into outlet; faulty outlet; damaged cable.	Ensure charger is firmly plugged into the wall. Try a different outlet. Test with a different USB cable.
Slow charging.	Using a non-compatible cable; device drawing more power than supplied; multiple devices connected.	Use the original or a high-quality USB-A cable. Ensure your device is compatible with the charger's output. If charging two devices, charging speed may be slightly reduced.

Problem	Possible Cause	Solution
Charger feels warm.	Normal operation during charging.	It is normal for the charger to become warm during use. If it becomes excessively hot or emits smoke/odor, immediately unplug it and discontinue use.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	4 x 4 x 1 inches
Item Weight	2.71 ounces
ASIN	B09WZDTS34
Item Model Number	EMT-GW240U
Brand	LIQUIPEL
Connectivity Technology	USB
Connector Type	USB-A
Compatible Devices	Cellular Phones, Tablets, Smartwatches, Laptops
Special Feature	Foldable Prongs
Color	Blue (other pastel colors available)
Input Voltage	120 Volts (AC 100-240V compatible)
Mounting Type	Wall Mount
Amperage	2 Amps




	POWERTEK Dual Wall Block Charger	STANDARD Dual Wall Block Charger	VALUE Wall Block Charger
Fast Charge	Yes	No	No
Stable Charge	Yes	Average	No
Charge Ports	2	2	1
Portable Folding Prongs	Yes	No	No
Colors	6	Black	Black
Hard Edges	Premium Beveled	Texture Mixed	Texture Hard

Figure 7.1: A comparison highlighting the features of the Powertek Dual Wall Block Charger against other charger types.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official LIQUIPEL website or contact their customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, you may visit the [LIQUIPEL Store on Amazon](#).

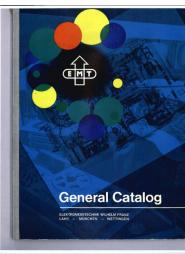

[EMT General Catalog June 1968: Professional Audio Equipment](#)

Discover the comprehensive 1968 General Catalog from EMT (Elektromesstechnik Wilhelm Franz), detailing professional audio equipment like turntables, tape recorders, reverberation units, and test instruments for studios and broadcasters worldwide.



[The Mix Magazine - April 1980: Recording Industry Directory & Audio Technology](#)

This April 1980 issue of The Mix magazine offers a comprehensive look at the recording industry, featuring extensive studio listings for New York and the Northeast, in-depth technical articles on tape machine alignment and echo/reverberation, and profiles of leading audio equipment manufacturers like Ampex, Amek, and Soundstream.



[Hach BioTector B3500dw TOC Analyzer: Consumable and Wear Parts Guide](#)

This document provides a comprehensive list of typical consumable and wear parts for the Hach BioTector B3500dw TOC Analyzer, covering a 3-year operational period. It details recommended stock quantities for spare parts, categorized by maintenance intervals (6, 12, 18, 24, 30, and 36 months). The guide includes part numbers, descriptions, and quantities for various components, from service kits and reagents to specialized parts like pumps, valves, and tubing.



[EMShape Neo Plus Body Sculpt Machine 8500W User Manual](#)

Comprehensive user manual for the M-SHAPE EMShape Neo Plus Body Sculpt Machine 8500W. Learn about product information, specifications, operation modes (AUTO, MANUAL), treatment levels, troubleshooting, and maintenance.



[EMSzero User Manual - HI-EMT Body Sculpting Device](#)

Comprehensive user manual for the EMSzero HI-EMT body sculpting device by Guangzhou Xinwei Electronic Technology Co., Ltd. This guide provides detailed information on indications, contraindications, operation, maintenance, technical specifications, and warranty for the EMSzero and TAIXL beauty equipment.



[Professional PERFECT SHAPE NEO Body Sculpting Machine 5 in 1 User Manual](#)

User manual for the REJUVA FRESH Professional PERFECT SHAPE NEO Body Sculpting Machine 5 in 1, detailing product information, specifications, warnings, operation modes, and maintenance.