

[manuals.plus](#) /› [FeiyuTech](#) /› [FeiyuTech Magnetic Fill Light User Manual - Adjustable Brightness & Color Temperature for VB 4/4SE/Vimble 3/3SE Gimbals](#)

## FeiyuTech Vimble 3 Fill Light

# FeiyuTech Magnetic Fill Light User Manual

**MODEL: VIMBLE 3 FILL LIGHT**

For FeiyuTech VB 4/VB 4SE/Vimble 3/Vimble 3SE Handheld 3-Axis Smartphone Stabilizers

---

## INTRODUCTION

The FeiyuTech Magnetic Fill Light is a compact and portable accessory designed to provide multi-level brightness and adjustable color temperature for enhanced smartphone videography and photography. It magnetically attaches to compatible FeiyuTech gimbals, offering convenient illumination in various environments.

## Key Features:

- **Magnetic Attachment:** Easily mounts to the top of the phone holder on compatible gimbals.
- **Adjustable Brightness:** Multi-level brightness with a maximum lumen output of 712lux, adjustable with a single button.
- **Variable Color Temperature:** Wide color temperature range from 3300K to 5200K, controllable via a single button to create desired lighting atmospheres.

---

## PRODUCT OVERVIEW



**Figure 1:** Front view of the FeiyuTech Magnetic Fill Light, showcasing its compact rectangular design with a textured side for grip.



**Figure 2:** Top view of the fill light, highlighting the brightness and color temperature adjustment switches.




**Figure 3:** Side view of the fill light, showing the USB-C charging port.

## SETUP

---

### Attaching the Fill Light:

1. Ensure your FeiyuTech smartphone stabilizer (e.g., VB 4, VB 4SE, Vimble 3, Vimble 3SE) is properly set up and your smartphone is securely mounted.
2. Locate the magnetic attachment point on the top of your gimbal's phone holder.
3. Align the magnetic base of the FeiyuTech Magnetic Fill Light with the attachment point on the phone holder.
4. Gently place the fill light onto the magnetic base until you hear a "Kada" sound, indicating a secure connection.

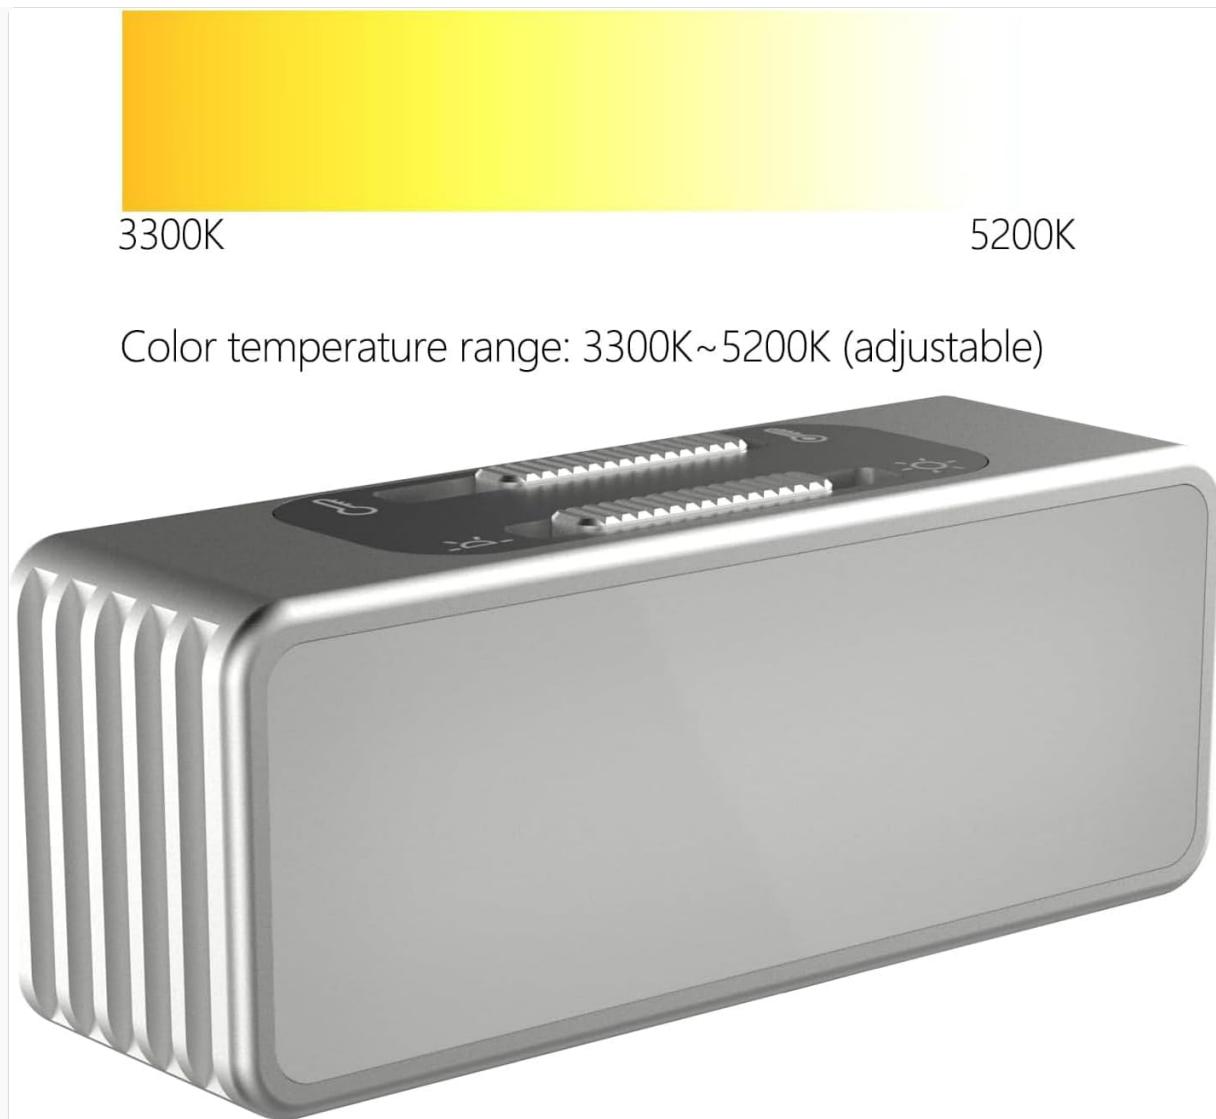

**Figure 4:** The magnetic fill light securely attached to a smartphone mounted on a FeiyuTech gimbal, ready for use.

## OPERATING INSTRUCTIONS

### Power On/Off:


- Press and hold the power button (refer to Figure 3 for location) for a few seconds to turn the fill light on or off.

### Brightness Adjustment:

- Use the brightness adjustment switch (refer to Figure 2) to cycle through different brightness levels. Each click will adjust the intensity of the light.

### Color Temperature Adjustment:

- Use the color temperature adjustment switch (refer to Figure 2) to change the color temperature between 3300K (warm) and 5200K (cool). Each click will adjust the color tone.

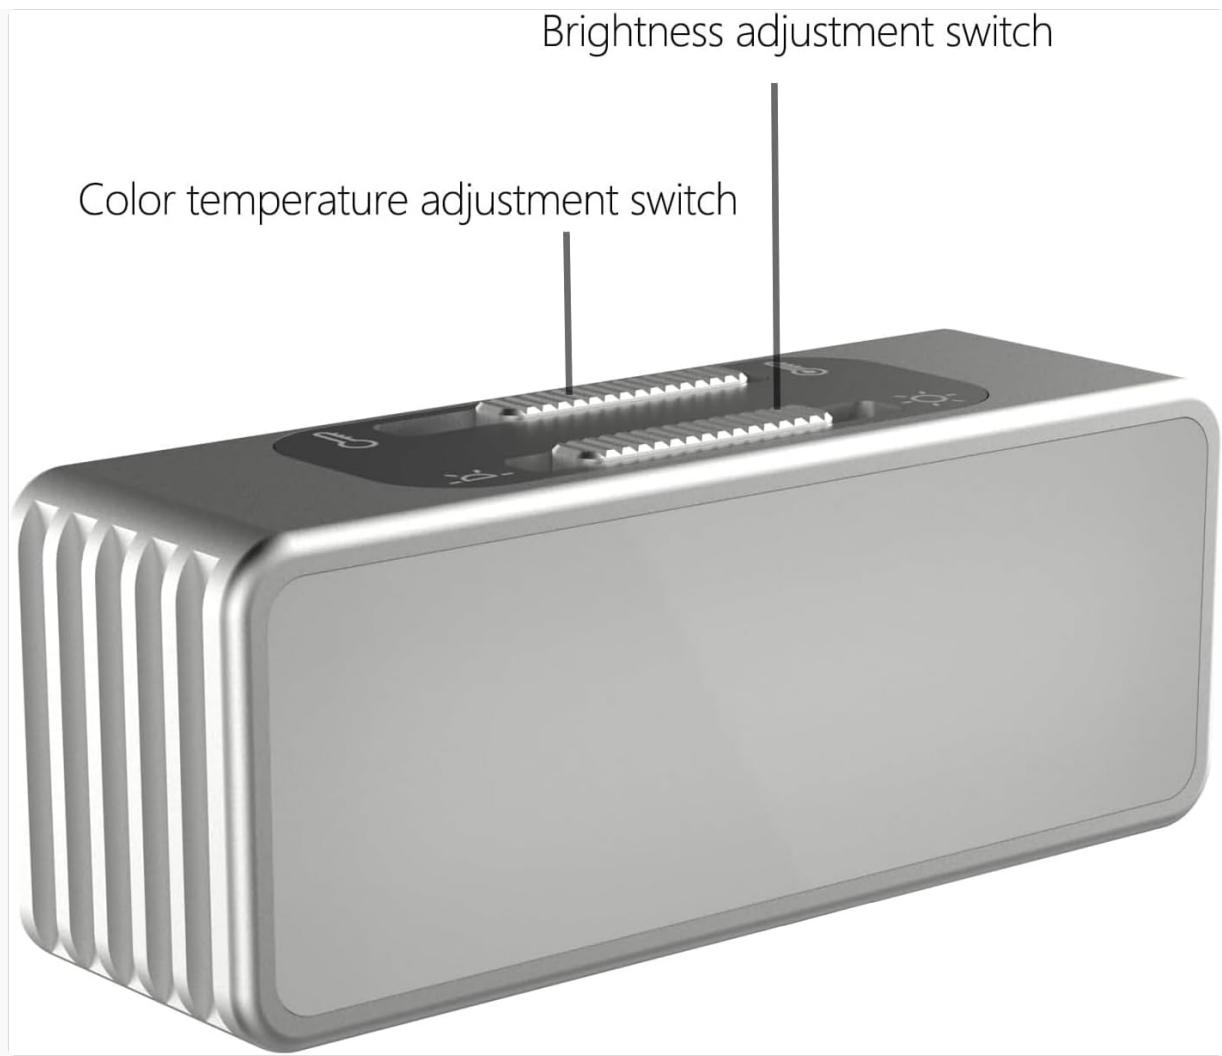

**Figure 5:** Close-up view of the fill light's top panel, clearly labeling the brightness and color temperature adjustment switches.

## Small and Portable Multi-level Brightness

The maximum lumen can reach 712lux. The brightness can be adjusted with clicking a single button, and it can illuminate your beauty at any time even in the dark.



**Figure 6:** Visual representation of the adjustable color temperature range from 3300K (warm yellow) to 5200K (cool white).

### Video Context:

For a general overview of a compatible gimbal, which this fill light is designed to enhance, please refer to the video below. This provides context for the ecosystem the fill light operates within.

**Video 1:** Introduction to the FeiyuTech SCORP Mini 3 gimbal. This video provides an overview of a compatible gimbal, demonstrating its features and operation, which can be enhanced by the magnetic fill light.

### MAINTENANCE

- Keep the fill light clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures or moisture.
- Store in a cool, dry place when not in use.

### TROUBLESHOOTING

- **Light not turning on:** Ensure the device is charged. Connect it to a USB power source using a USB-C cable.
- **Light not attaching securely:** Verify that the magnetic base of the fill light and the phone holder's

attachment point are clean and free from obstructions.

- **Brightness/Color temperature not adjusting:** Check if the device is powered on and try pressing the adjustment switches firmly.

## SPECIFICATIONS

| Feature                 | Detail  |
|-------------------------|---|
| Product Dimensions      | 3.15 x 0.79 x 0.79 inches                                 |
| Item Weight             | 0.704 ounces  |
| Item Model Number       | Vimble 3 Fill Light                                       |
| Brand                   | FeiyuTech   |
| Manufacturer            | FeiyuTech   |
| Connectivity Technology | Bluetooth (for gimbal connection, not directly for light) |
| Hardware Interface      | USB-C   |

## WARRANTY & SUPPORT

For warranty information and technical support, please refer to the official FeiyuTech website or contact their customer service directly. Keep your purchase receipt for warranty claims.