

## ALLDOCUBE Smile 1

# ALLDOCUBE Smile 1 8-inch Android Tablet User Manual

Model: Smile 1

## 1. INTRODUCTION

Thank you for choosing the ALLDOCUBE Smile 1 8-inch Android Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure optimal performance and longevity of your tablet.

The ALLDOCUBE Smile 1 is an 8-inch Android 11 tablet powered by a Unisoc Tiger T310 quad-core chipset, offering a reliable user experience. It features 3GB RAM and 32GB internal storage, expandable up to 256GB via a Micro SD card. The tablet boasts an 8-inch HD IPS screen with 800x1280 resolution, dual cameras (2.0MP front, 5.0MP rear), and a 4000mAh battery for extended use. Connectivity options include 2.4G+5G WiFi, Bluetooth, and GPS.

## 2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charger and accessories to prevent damage and ensure safety.
- Keep the tablet away from water and other liquids.
- Do not attempt to disassemble or repair the tablet yourself. Contact customer support for assistance.
- Dispose of the tablet and its battery responsibly according to local regulations.

## 3. PACKAGE CONTENTS

Please check the box for the following items:

- ALLDOCUBE Smile 1 Tablet
- User Manual
- Charger


If any items are missing or damaged, please contact ALLDOCUBE customer service.

## 4. DEVICE LAYOUT

Familiarize yourself with the physical features of your ALLDOCUBE Smile 1 tablet.



**Image:** Side view of the ALLDOCUBE Smile 1 tablet, highlighting the power button, volume controls, and various ports.

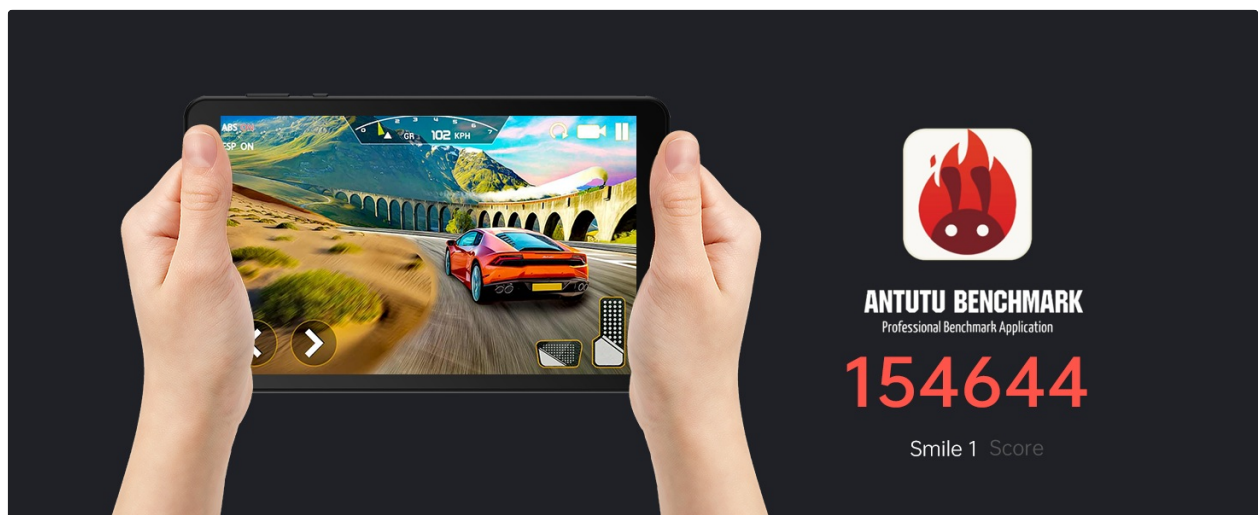

**Image:** Close-up of the tablet's bottom edge, showing the USB-C charging port, SIM/TF card slot, and 3.5mm headphone

jack.


## Key Components:

- **Power Button:** Located on the side, used to turn the tablet on/off or put it to sleep/wake it up.
- **Volume Buttons:** Adjust the audio volume.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** Connect headphones or external speakers.
- **Front Camera:** For video calls and selfies (2.0MP).
- **Rear Camera:** For taking photos and videos (5.0MP).
- **Micro SD Card Slot:** Expand storage up to 256GB.
- **Speakers:** For audio output.

## 5. SETUP

### 5.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the provided charger to the USB-C port on the tablet and plug it into a power outlet. The battery indicator on the screen will show charging status.

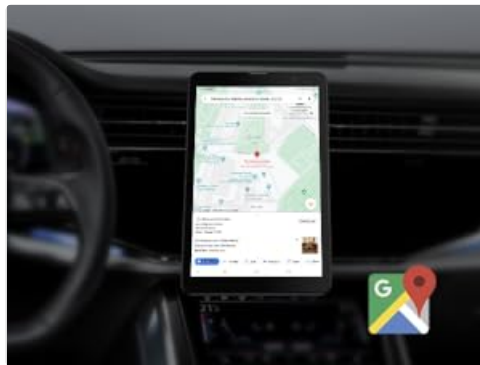

**Image:** Illustration of the tablet's 4000mAh battery and charging process.

### 5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the ALLDOCUBE logo appears.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off."
- **To Restart:** Press and hold the Power button until a power-off menu appears. Select "Restart."

Your browser does not support the video tag.

**Video:** An official ALLDOCUBE video demonstrating the Smile 1 tablet's features and operation.

### 5.3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen instructions to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account.
- Configure date and time.
- Set up screen lock (PIN, pattern, password, or face unlock).



**Image:** The Android 11 operating system interface on the ALLDOCUBE Smile 1 tablet.

## 5.4. Inserting a Micro SD Card

To expand storage, insert a Micro SD card (up to 256GB) into the designated slot. Ensure the tablet is powered off before inserting or removing the card.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Basic Navigation

- **Home Screen:** Swipe left or right to access different home screens.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, etc.).
- **Recent Apps:** Tap the square icon (or swipe up and hold from the bottom) to see recently used applications.



**Image:** A user holding the ALLDOCUBE Smile 1 tablet, displaying the home screen with various application icons.

### 6.2. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

### 6.3. Bluetooth Pairing

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Turn on Bluetooth.
3. Select the device you wish to pair with from the list of available devices.

### 6.4. Using the Cameras

The tablet features a 2.0MP front camera and a 5.0MP rear camera.

1. Open the **Camera** app.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.




**Image:** The ALLDOCUBE Smile 1 tablet displaying a video call, demonstrating its communication capabilities.

## 6.5. Face Unlock

For convenient and secure access, you can set up Face Unlock.

1. Go to **Settings > Security > Face Unlock**.
2. Follow the on-screen instructions to register your face.

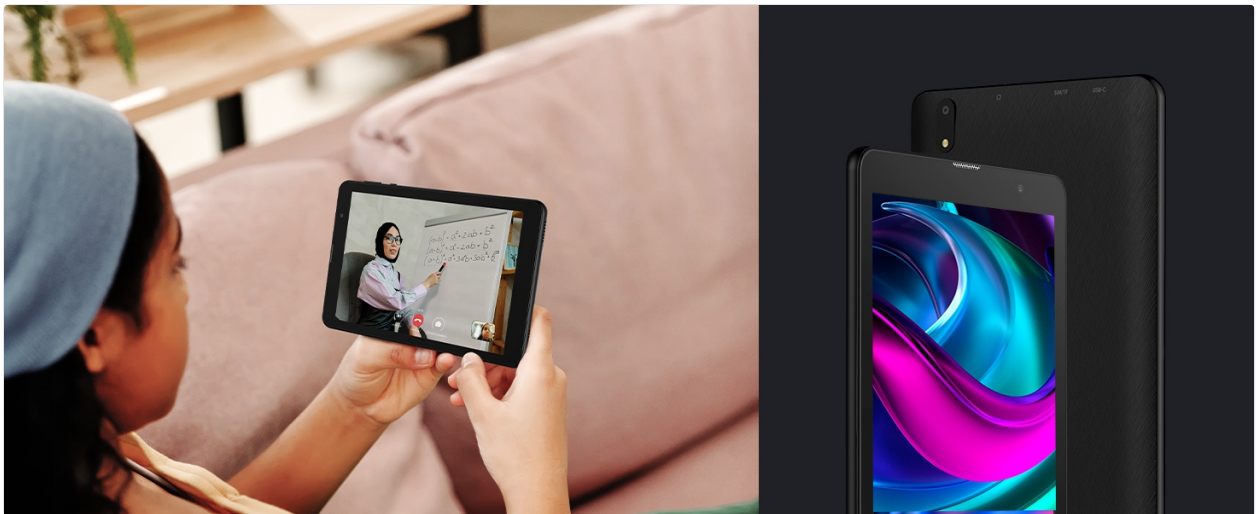

**Image:** An illustration showing the facial recognition feature of the ALLDOCUBE Smile 1 tablet for effortless access.

## 7. MAINTENANCE

### 7.1. Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Do not use liquid cleaners or aerosols directly on the tablet.

### 7.2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security enhancements.

1. Go to **Settings > System > System update**.

2. Follow the on-screen instructions to check for and install updates.

### 7.3. Battery Care

- Avoid completely draining the battery frequently.
- Do not leave the tablet charging for extended periods after it's fully charged.
- If storing the tablet for a long time, ensure it has at least a 50% charge.

## 8. TROUBLESHOOTING

If you encounter issues with your ALLDOCUBE Smile 1 tablet, refer to the following common solutions:

Issue	Possible Solution
Tablet does not turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Tablet freezes or is unresponsive	Press and hold the Power button for about 10-15 seconds to force a restart.
Poor battery life	Close unused apps, reduce screen brightness, disable Wi-Fi/Bluetooth when not in use. Check for background app activity in settings.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget the network on your tablet and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps crashing or not working	Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache). Reinstall the app if the issue persists.
Low audio volume	Ensure volume is turned up using the physical buttons and in software settings. Check if headphones are properly connected or if Bluetooth speakers are paired correctly.

If these steps do not resolve your issue, please contact ALLDOCUBE customer service for further assistance.

## 9. SPECIFICATIONS

Detailed technical specifications for the ALLDOCUBE Smile 1 tablet:

Feature	Specification
Brand	ALLDOCUBE
Model Name	Smile 1
Operating System	Android 11
Processor	Unisoc Tiger T310, 2 GHz
Graphics Coprocessor	PowerVR GE8300
RAM	3GB DDR4 SDRAM

Feature	Specification
Internal Storage	32 GB Flash Memory
Expandable Storage	Up to 256GB via Micro SD card
Screen Size	8 Inches
Screen Resolution	1280x800 (HD IPS)
Rear Webcam Resolution	5 MP
Front Webcam Resolution	2.0 MP
Wireless Type	802.11ac, 802.11b, 802.11g, 802.11n (2.4G+5G WiFi)
Bluetooth	Bluetooth 5.0
Battery Capacity	4000mAh
Average Battery Life	6-8 Hours (depending on usage)
Power Source	Battery Powered
Color	Black
Item Weight	1.23 pounds
Product Dimensions	9.7 x 0.33 x 6.21 inches

## 10. WARRANTY AND SUPPORT

### 10.1. Warranty Information

ALLDOCUBE offers a 1-year warranty for the Smile 1 tablet. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

### 10.2. Return Policy

ALLDOCUBE offers a 30-day no-reason return policy from the date of purchase.

### 10.3. Customer Support

If you have any questions, encounter issues, or require technical assistance, please do not hesitate to contact ALLDOCUBE customer service. We aim to reply to messages within 24 hours and provide satisfactory solutions, including replacements for product issues.

For support, please refer to the contact information provided with your purchase or visit the official ALLDOCUBE website.